

# INSTALLATION GUIDE

## HONDA CIVIC X INTERCOOLER



### TOOLS REQUIRED:

- 10mm socket
- 12mm socket
- 3/8ths ratchet
- Various 3/8ths extensions
- Body pin remover/flat head screwdriver
- Phillips head screwdriver

### WHAT'S IN THE BOX:

- 1x MAP Direct Fit Honda Civic Si Intercooler
- 1x 2.25" T-bolt clamp
- 3x 2" T-bolt clamps
- 1x 2" Bubble straight coupler
- 1x 2.25" to 2" Reducer coupler
- 1x 2" Intercooler to stock charge pipe conn.
- 1x #226 O-ring

### 1. REMOVE FRONT BUMPER



### 2. REMOVE UPPER ENGINE BAY COVER BY RELEASING BODY PUSH PINS



### 3. REMOVE PHILLIPS HEAD SCREWS SECURING THE BUMPER ON THE SIDES




**4. REMOVE PUSH PINS SECURING THE BUMPER ON THE BOTTOM OF THE CAR**



**5. PULL BUMPER FORWARD TO RELEASE CLIPS HOLDING THE BUMPER IN PLACE**



**5. REMOVE DRIVERS SIDE CHARGE PIPE BOLTS**

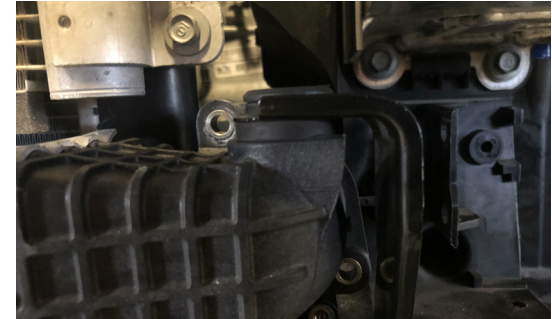


**6. REMOVE CLAMP FROM OEM COUPLER AND REMOVE FROM COLD SIDE CHARGE PIPE**




**7. REMOVE PASSENGER SIDE CHARGE PIPE BOLTS**




**8. REMOVE MOUNTING BRACKETS FROM INTERCOOLER**

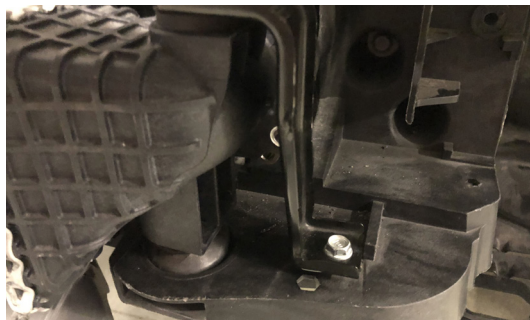


**9. REMOVE FACTORY INTERCOOLER**

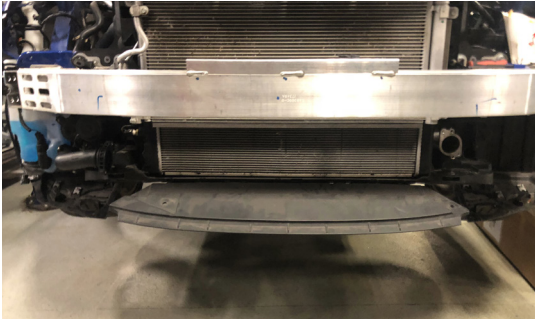


**10. INSTALL MAP INTERCOOLER INTO VEHICLE  
SECURE WITH BRACKETS REMOVED PREVIOUSLY**

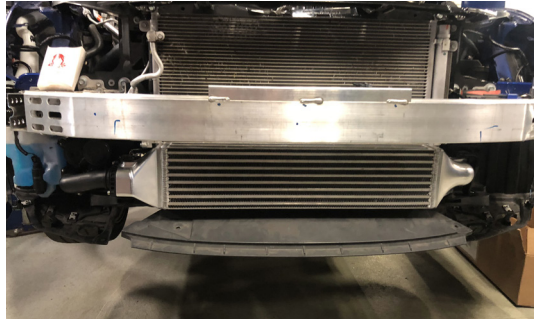

**11. REINSTALL PASSENGER SIDE CHARGE PIPE  
AND SECURE WITH BOLTS YOU REMOVED EARLIER**

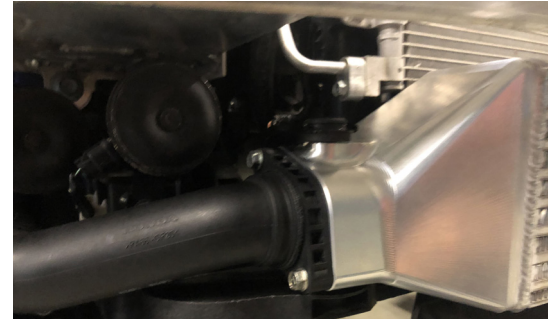

**12. INSTALL COUPLER AND INCLUDED DRIVERS SIDE CHARGE PIPE ONTO INTERCOOLER AND OEM  
UPPER CHARGE PIPE, SECURE WITH CLAMPS.**

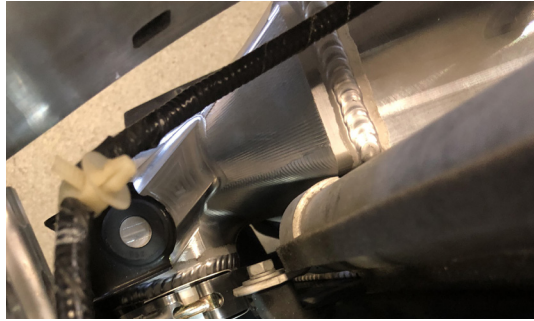

**\*IF YOUR VEHICLE IS EQUIPPED WITH THE MAP COLD SIDE CHARGE PIPE KIT, PLEASE VIEW THE INSTRUCTIONS FOR THAT PRODUCT\***



## 9. REINSTALL BUMPER



---

**THANK YOU FOR CHOOSING MAPERFORMANCE!**

If you have any problems or concerns during installation of this product, feel free to call or email us:

1-888-MAPERFORMANCE

support@maperformance.com

Show us some photos! @maperformance / #maperformance