




## MAP Mitsubishi Evo X Catback Install Instructions

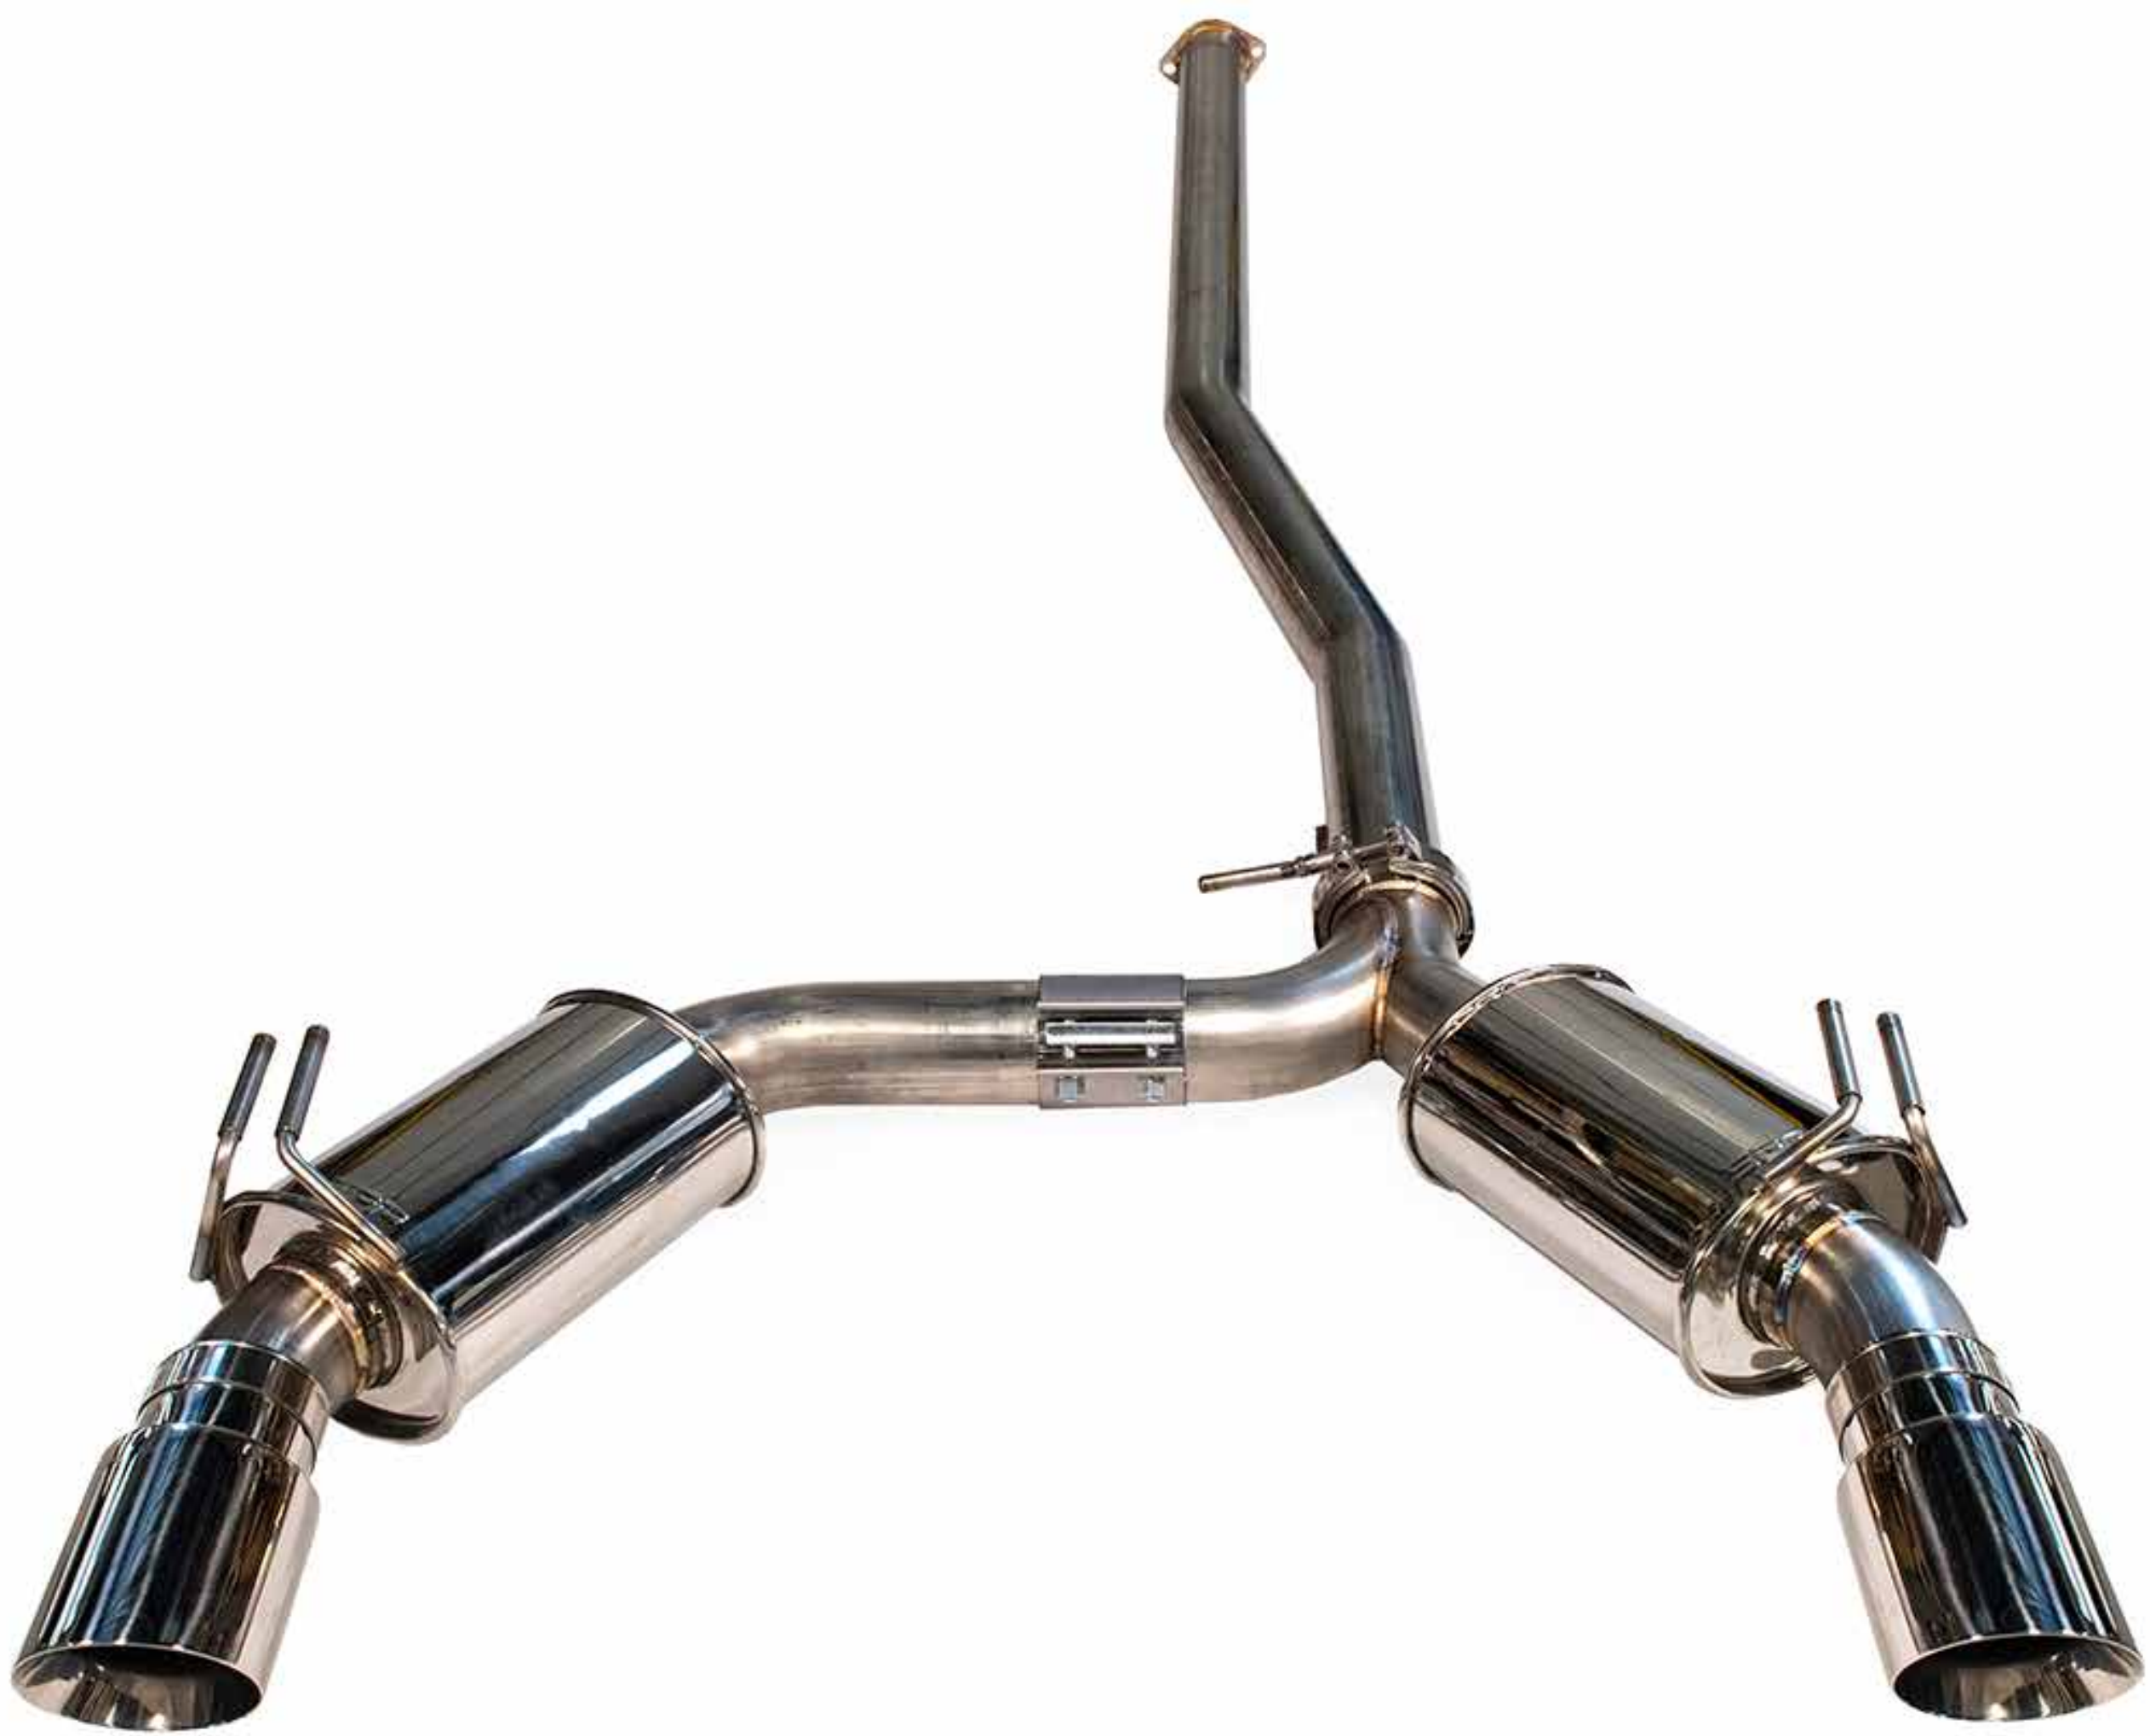

### What's in the box?

- 1x MAP Evo X Mid Pipe
- 1x MAP Evo X Axle Section
- 2x MAP Rear Tips (Depending on options)
- 2x 1/2" Bolts
- 2x 1/2" Nuts
- 2x 1/2" Washers

# Tools needed



## You will need:

- 3/8 Ratchet
- 14mm Socket (Can vary on application)
- 14mm Wrench (Can vary on application)

*Note : our install was performed on a vehicle already equipped with an aftermarket exhaust. Steps may vary if you are removing a stock exhaust, but won't be drastically different*

# Step 1




Place car on lift or 4 jack stands

## Step 2



Remove the bolts securing the 2 bolt flange to the catalytic converter or in this case, the MAP test pipe

## Step 3

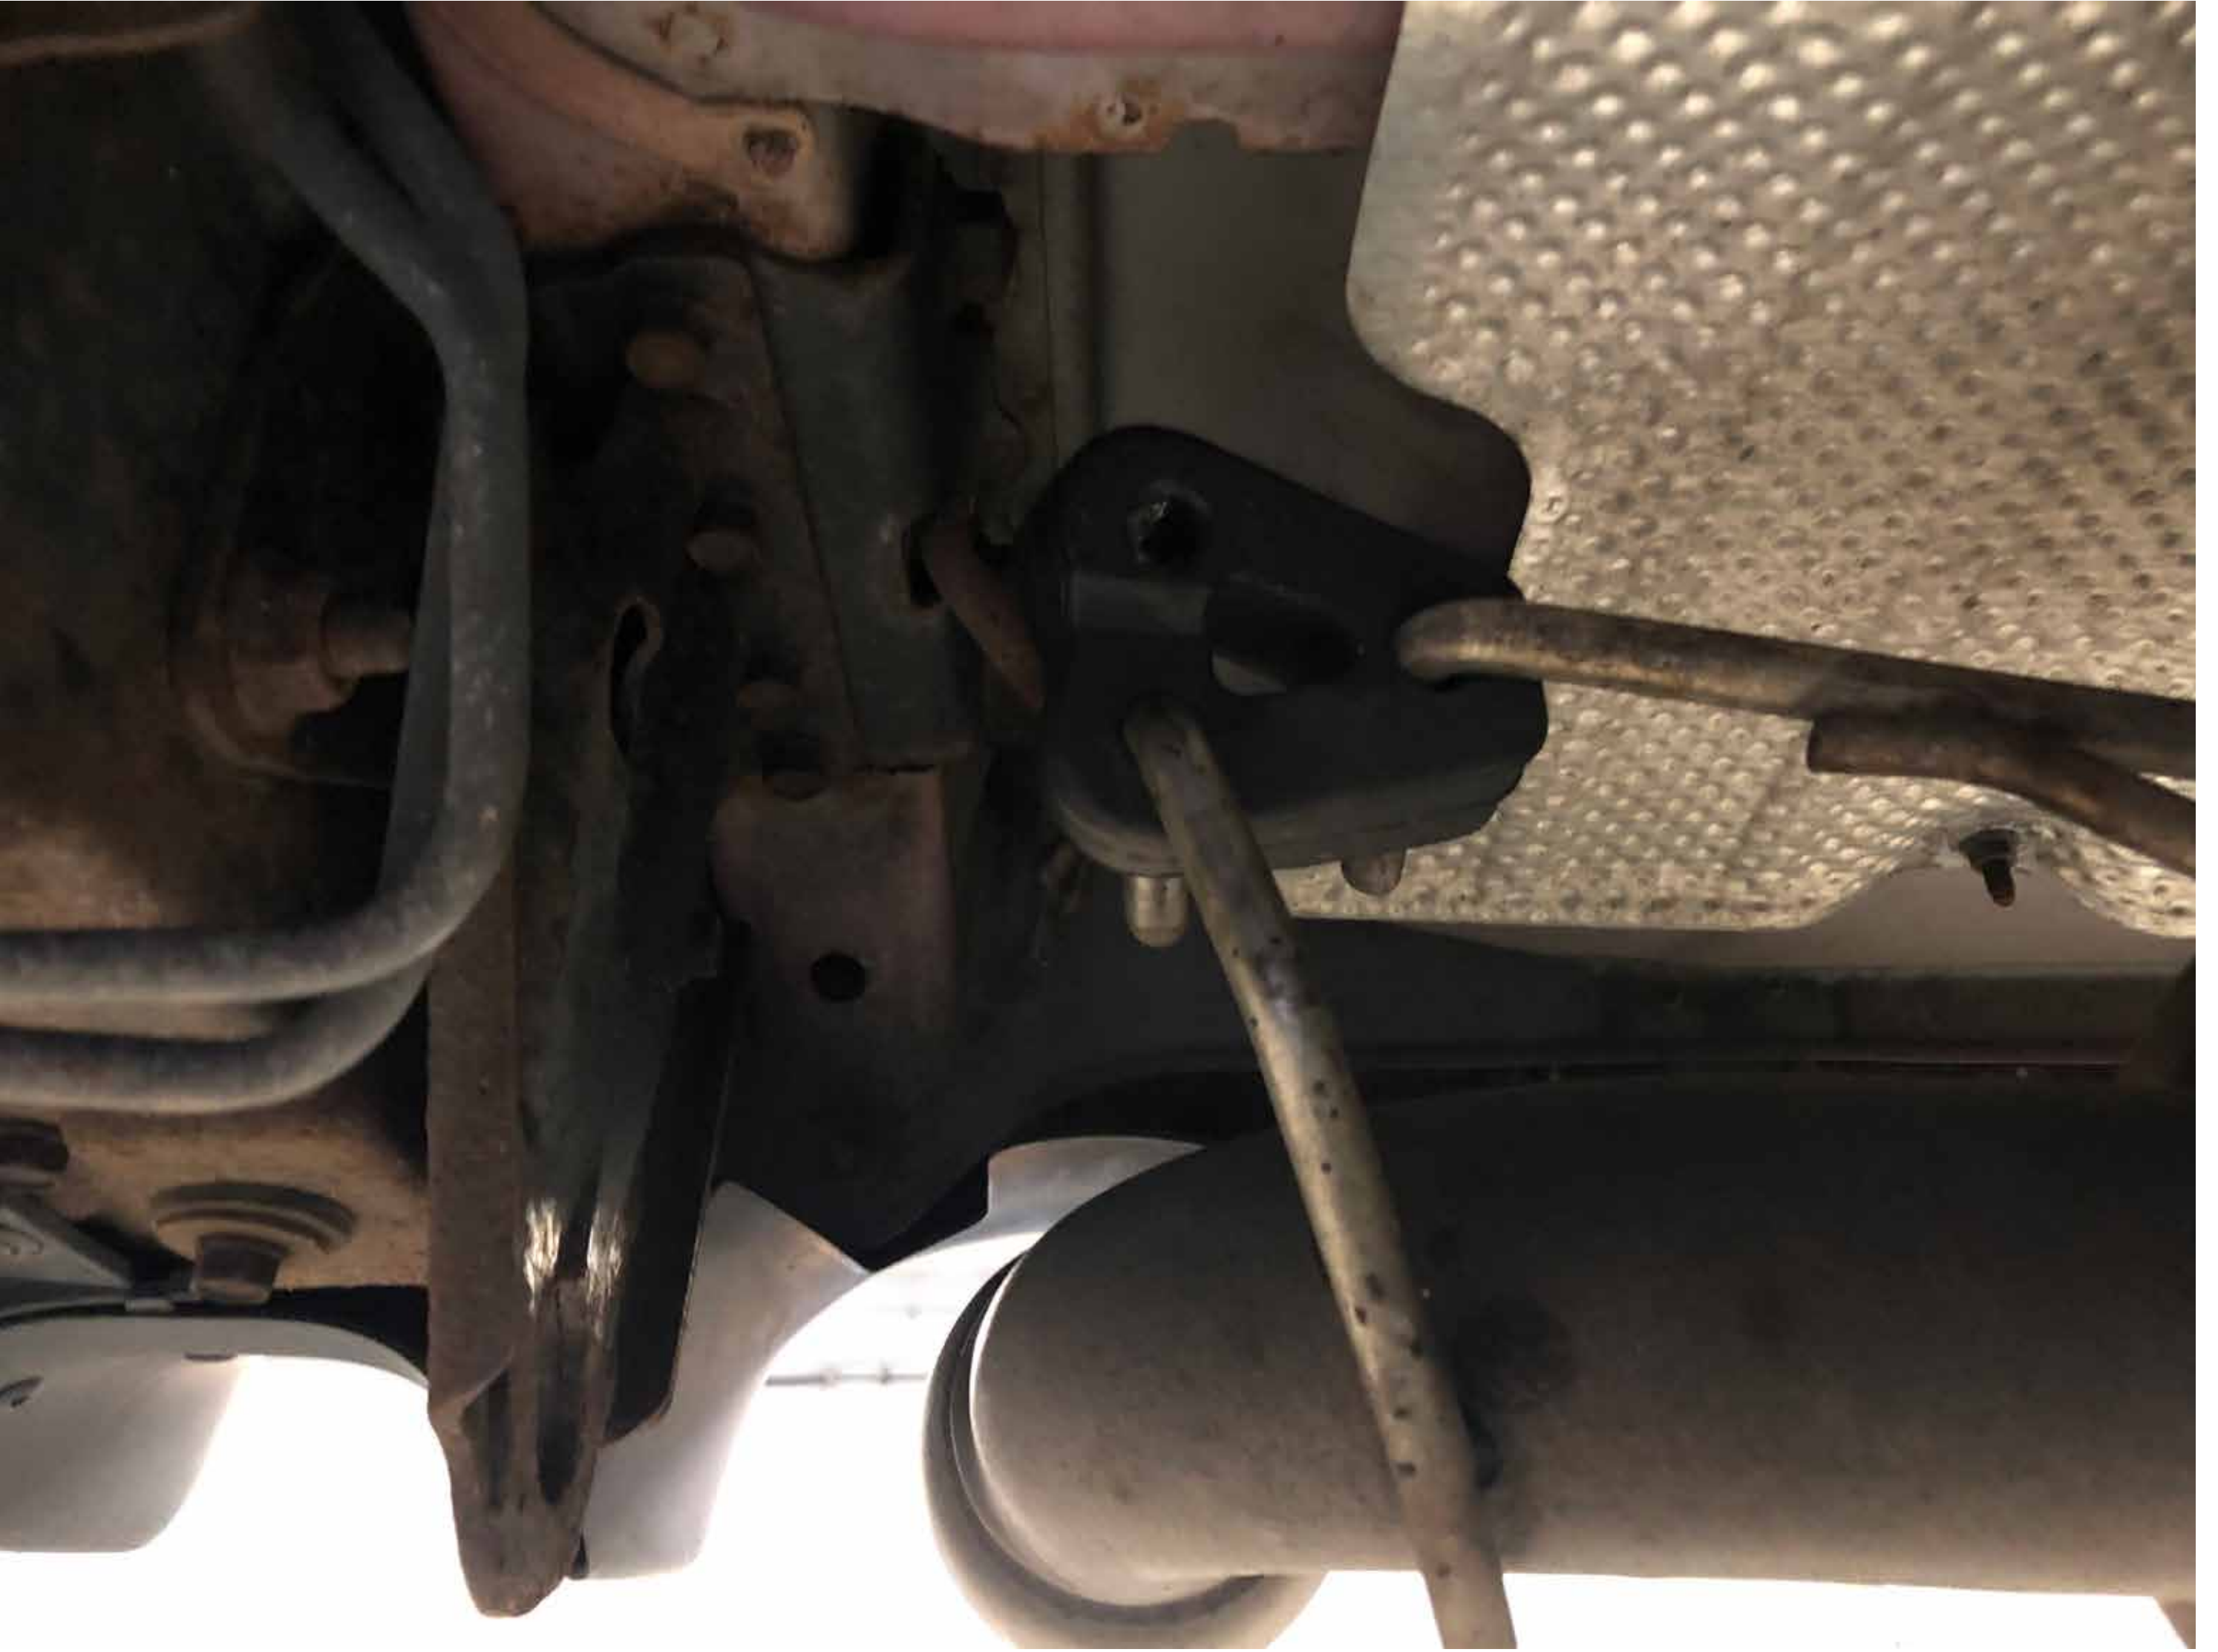

Remove the 2 rubber hangers securing the muffler to vehicle

# Step 4



Remove the rubber hanger near the diff, this should allow the factory catback to be completely removed

# Step 5



Install provided hardware and gaskets onto the catalytic converter or test pipe

# Step 6



Install front half of the cat back onto the catalytic converter or test pipe



# Step 7



Install rubber hangers onto the muffler section, then install the mufflers into the vehicle securing it by the rubber hangers

# Step 8




Install included v band clamp, ensure you have the proper fitment before tightening

# Step 9



*Only follow this step if you have dual exhaust option.* Install slip clamp between 2 muffler sections, ensure mufflers are clocked straight before tightening clamp

# Step 10

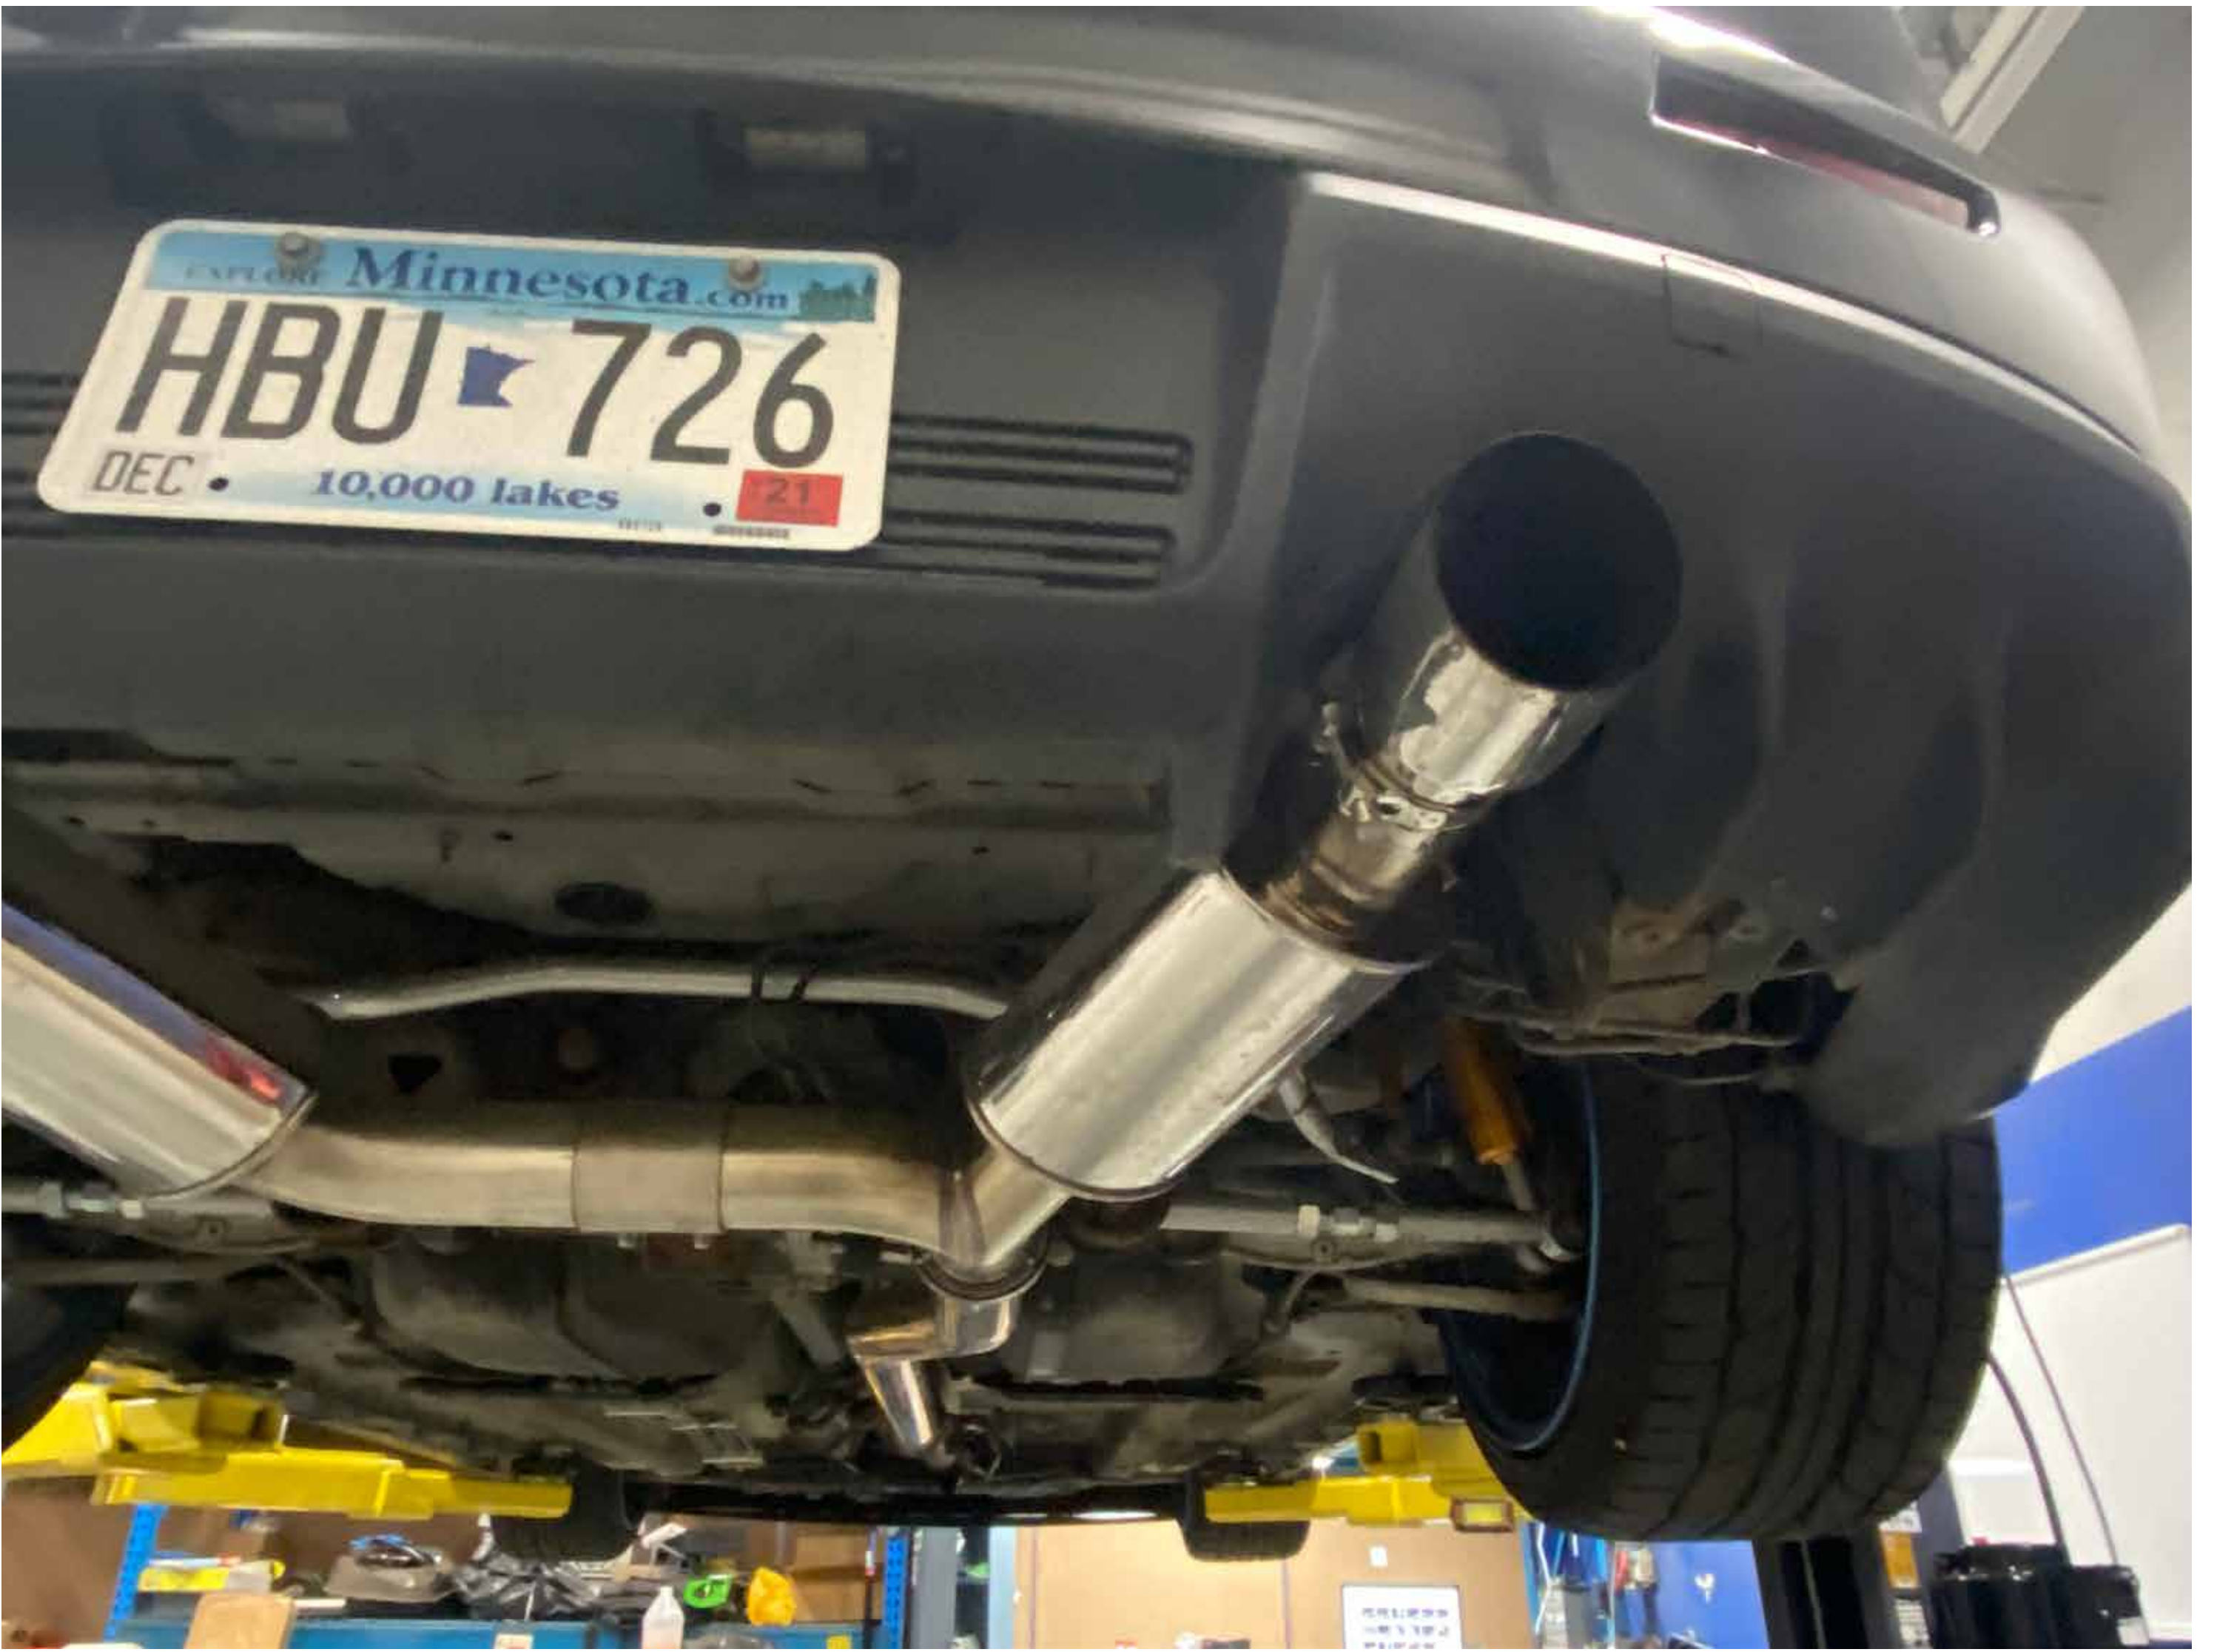


Install included slip on tips, ensure you are using anti seize grease on provided clamp to avoid galling. Start and check for leaks

We hope you enjoy your purchase! Reach out to us with any issues or concerns.



1-888-627-3736

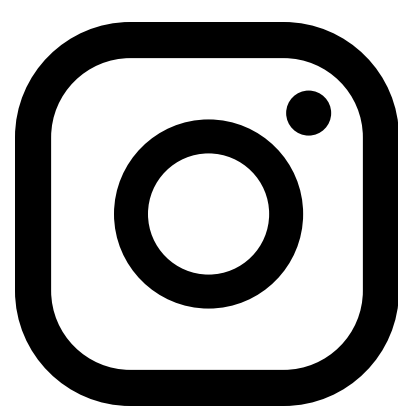

@maperformance



support@maperformance.com



www.facebook.com/modernautomotiveperformance/

