


INSTALLATION GUIDE

2015+ SUBARU STI INTAKE

MAPerformance.com

TOOLS REQUIRED:


Pliers
10mm wrench
10mm socket + extension
2.5 Allen (?????)
Phillips + Reg screwdriver

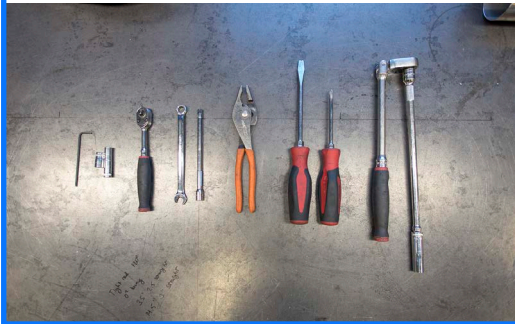

WHAT'S IN THE BOX:

1 Air Intake Pipe
1 (Optional) Heat Shield
1 Green Filter
1 Velocity Stack
2 Couplers
4 Clamps
1 Intake Silencer Plug
Required Hardware

1. REMOVE THE BATTERY - 10MM WRENCH

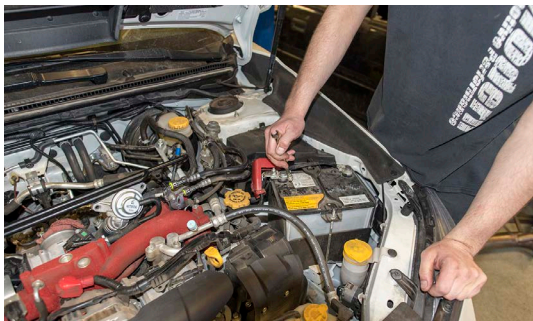


2. REMOVE SOUND TUBE AND PLUG W/ SUPPLIED PLUG - 2 HOSE CLAMPS



3. REMOVE TWO 10MM BOLTS FOR SOUND TUBE



**4. REMOVE PUSH CLIPS FOR
INTAKE SNORKE**

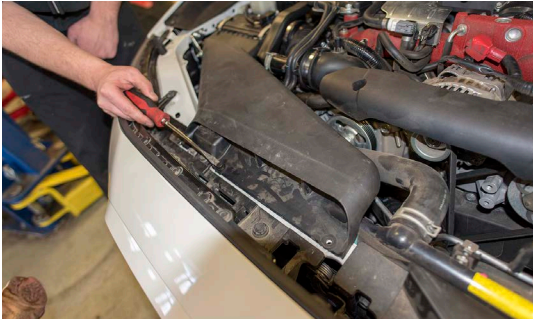


5. REMOVE INTAKE SNORKEL




6. UNPLUG MAF SENSOR



**7. REMOVE TWO 8MM INTAKE CLAMPS
- CAN ALSO USE FLAT HEAD**

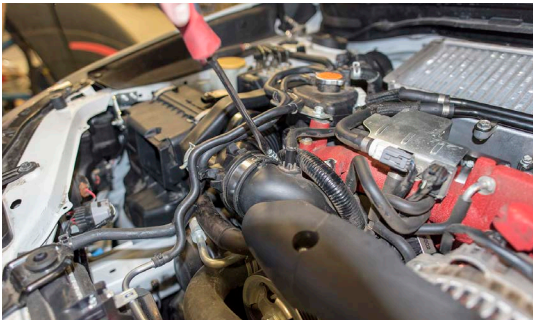


8. REMOVE THE STOCK INTAKE

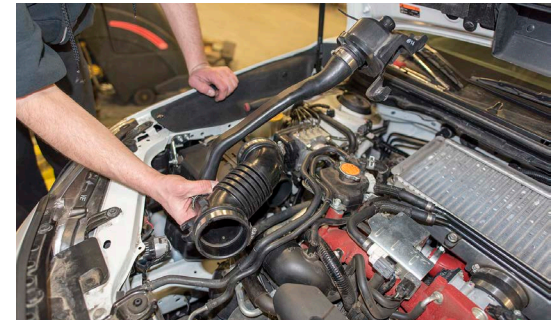


**9. REMOVE 10MM BOLT HOLDING AIR BOX
TO FRAME RAIL**



10. UNCLIP AIR BOX

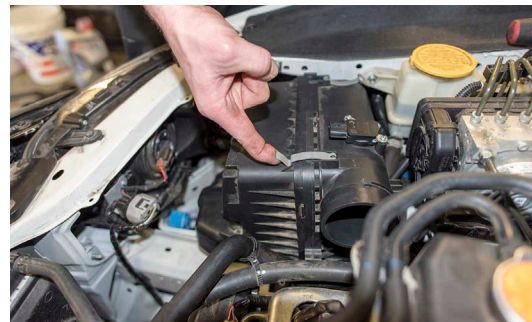

11. REMOVE REAR SECTION OF AIR BOX

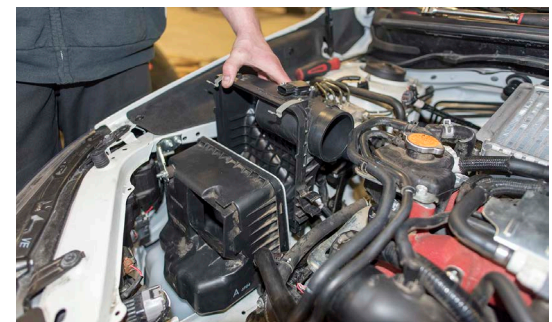

12. REMOVE TWO 10MM NUTS FROM AIR BOX BRACKET



13. REMOVE FRONT SECTION OF AIR BOX



14. REMOVE AND SAVE THE BRACKET



15. REINSTALL BRACKET



16. REMOVE MAF SENSOR FROM STOCK AIR BOX




17. REINSTALL MAF SENSOR ONTO MAP INTAKE WITH SUPPLIED HARDWARE



18. ASSEMBLE INTAKE WITH SUPPLIED COUPLERS AND CLAMPS



19. REMOVE 10MM GROUND BOLT

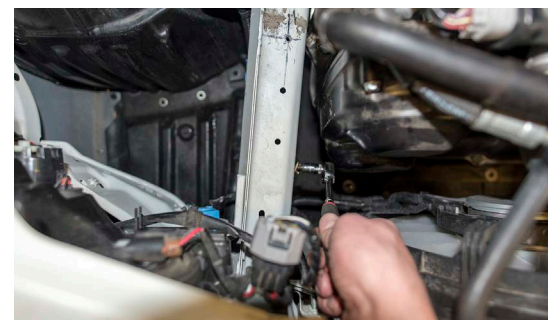

2018+ MODELS WILL NOT INSTALL FILTER ONTO THE INTAKE ON THIS STEP

20. SLIDE MAP HEAT SHIELD CAREFULLY INTO PLACE




21. REINSTALL 10MM GROUND BOLT



22. INSTALL SUPPLIED 10MM BOLT TO HOLD MAP HEAT SHIELD TO THE FRAME




23. WHILE PULLING UP ON THE SHIELD, FULLY TIGHTEN GROUND BOLT, THEN FRAME BOLT

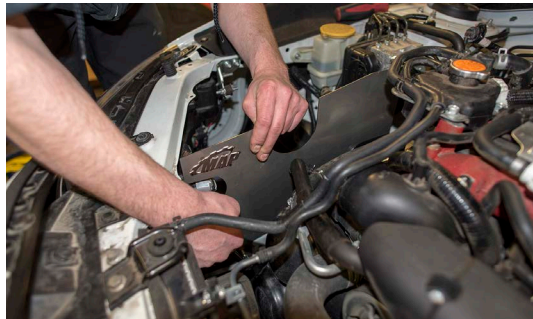


**24. SLIDE MAP INTAKE INTO PLACE
- REMEMBER BRACKET**


2018+ MODELS WILL NOW LIFT THE CAR UP AND REMOVE THE 2 PUSH PINS AND ONE 10MM SCREW HOLDING THE SPLASH SHIELD FLAP, ALLOWING YOU TO INSTALL THE FILTER ON TO THE INTAKE PIPE AS PICTURED.

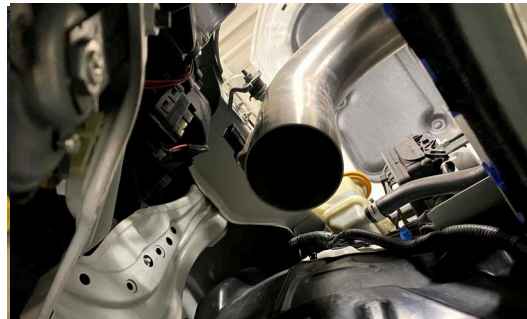

25. PLUG IN MAF SENSOR

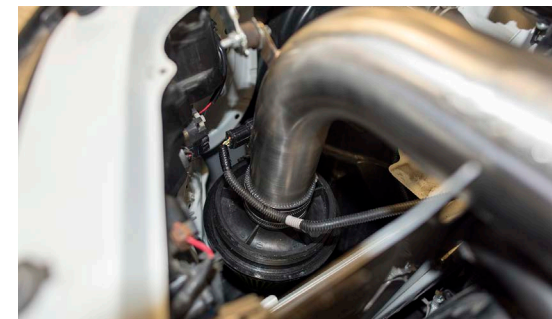


26. CENTER THE INTAKE AND TIGHTEN DOWN ALL

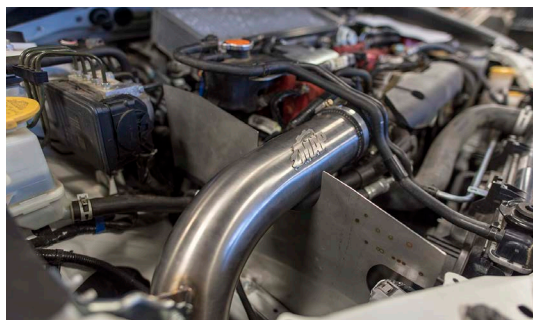

MAKE SURE HEAT SHIELD IS INSTALLED PROPERLY FOR PERFECT FIT OF INTAKE



27. SAY HI TO HANK

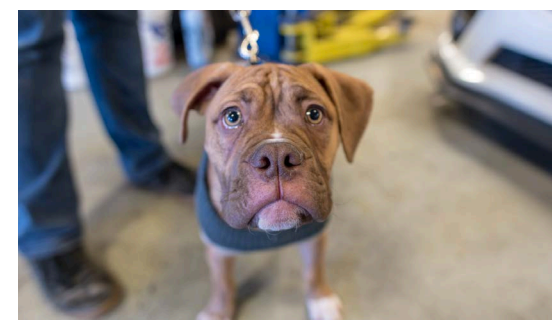

28. PLUG IN THE BATTERY - DONE!



THANK YOU FOR CHOOSING MAPERFORMANCE!

If you have any problems or concerns during installation of this product, feel free to call or email us:

1-888-MAPERFORMANCE

ajohnson@maperformance.com

Show us some photos! [@maperformance](#) / [#maperformance](#)