# **INSTALLATION GUIDE**

### MAPerformance.com

### 2015+ SUBARU STI INTAKE

#### **TOOLS REQUIRED:**

Pliers 10mm wrench 10mm socket + extension 2.5 Allen (????) Phillips + Reg screwdriver



#### WHAT'S IN THE BOX:

- 1 Air Intake Pipe
- 1 (Optional) Heat Shield
- 1 Green Filter
- 1 Velocity Stack
- 2 Couplers
- 4 Clamps
- 1 Intake Silencer Plug Required Hardware

#### 1. REMOVE THE BATTERY - 10MM WRENCH



## 2. REMOVE SOUND TUBE AND PLUG W/ SUPPLIED PLUG - 2 HOSE CLAMPS



#### 3. REMOVE TWO 10MM BOLTS FOR SOUND TUBE



4. REMOVE PUSH CLIPS FOR INTAKE SNORKE




**5. REMOVE INTAKE SNORKEL** 



**6. UNPLUG MAF SENSOR** 



7. REMOVE TWO 8MM INTAKE CLAMPS
- CAN ALSO USE FLAT HEAD

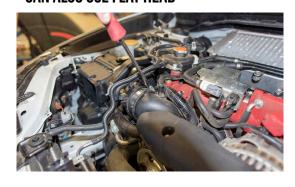

8. REMOVE THE STOCK INTAKE



9. REMOVE 10MM BOLT HOLDING AIR BOX TO FRAME RAIL



**10. UNCLIP AIR BOX** 



11. REMOVE REAR SECTION OF AIR BOX



12. REMOVE TWO 10MM NUTS FROM **AIR BOX BRACKET** 



13. REMOVE FRONT SECTION OF AIR BOX



14. REMOVE AND SAVE THE BRACKET



15. REINSTALL BRACKET





16. REMOVE MAF SENSOR FROM STOCK AIR BOX



17. REINSTALL MAF SENSOR ONTO MAP INTAKE WITH SUPPLIED HARDWARE



18. ASSEMBLE INTAKE WITH SUPPLIED **COUPLERS AND CLAMPS** 



19. REMOVE 10MM GROUND BOLT



20. SLIDE MAP HEAT SHIELD CAREFULLY INTO PLACE



21. REINSTALL 10MM GROUND BOLT




22. INSTALL SUPPLIED 10MM BOLT TO HOLD MAP HEAT SHIELD TO THE FRAME



23. WHILE PULLING UP ON THE SHIELD, FULLY TIGHTEN GROUND BOLT, THEN FRAME BOLT



24. SLIDE MAP INTAKE INTO PLACE
- REMEMBER BRACKET

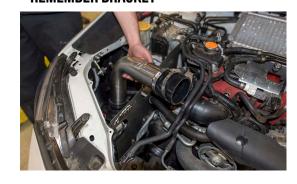

25. PLUG IN MAF SENSOR



26. CENTER THE INTAKE AND TIGHTEN DOWN ALL



MAKE SURE HEAT SHIELD IS INSTALLED PROPERLY FOR PERFECT FIT OF INTAKE



27. SAY HI TO HANK



#### 28. PLUG IN THE BATTERY - DONE!









#### THANK YOU FOR CHOOSING MAPERFORMANCE!

If you have any problems or concerns during installation of this product, feel free to call or email us:

1-888-MAPERFORMANCE
ajohnson@maperformance.com
Show us some photos! @maperformance / #maperformance