



MAP WRX-5G-RMD

Install Instructions



What's in the box?

x2 MAP Axlebacks

x2 MAP 3.5" Dual Tips

x2 Tip Clamps

x4 M10x1.25x40mm Bolts

x4 M10x1.25 Flanged Nuts

x1 Anti-seize

Tools needed



You will need:


- 10mm socket
- 14mm socket
- 3/8ths ratchet

Step 1



1. Place vehicle on lift

Step 2

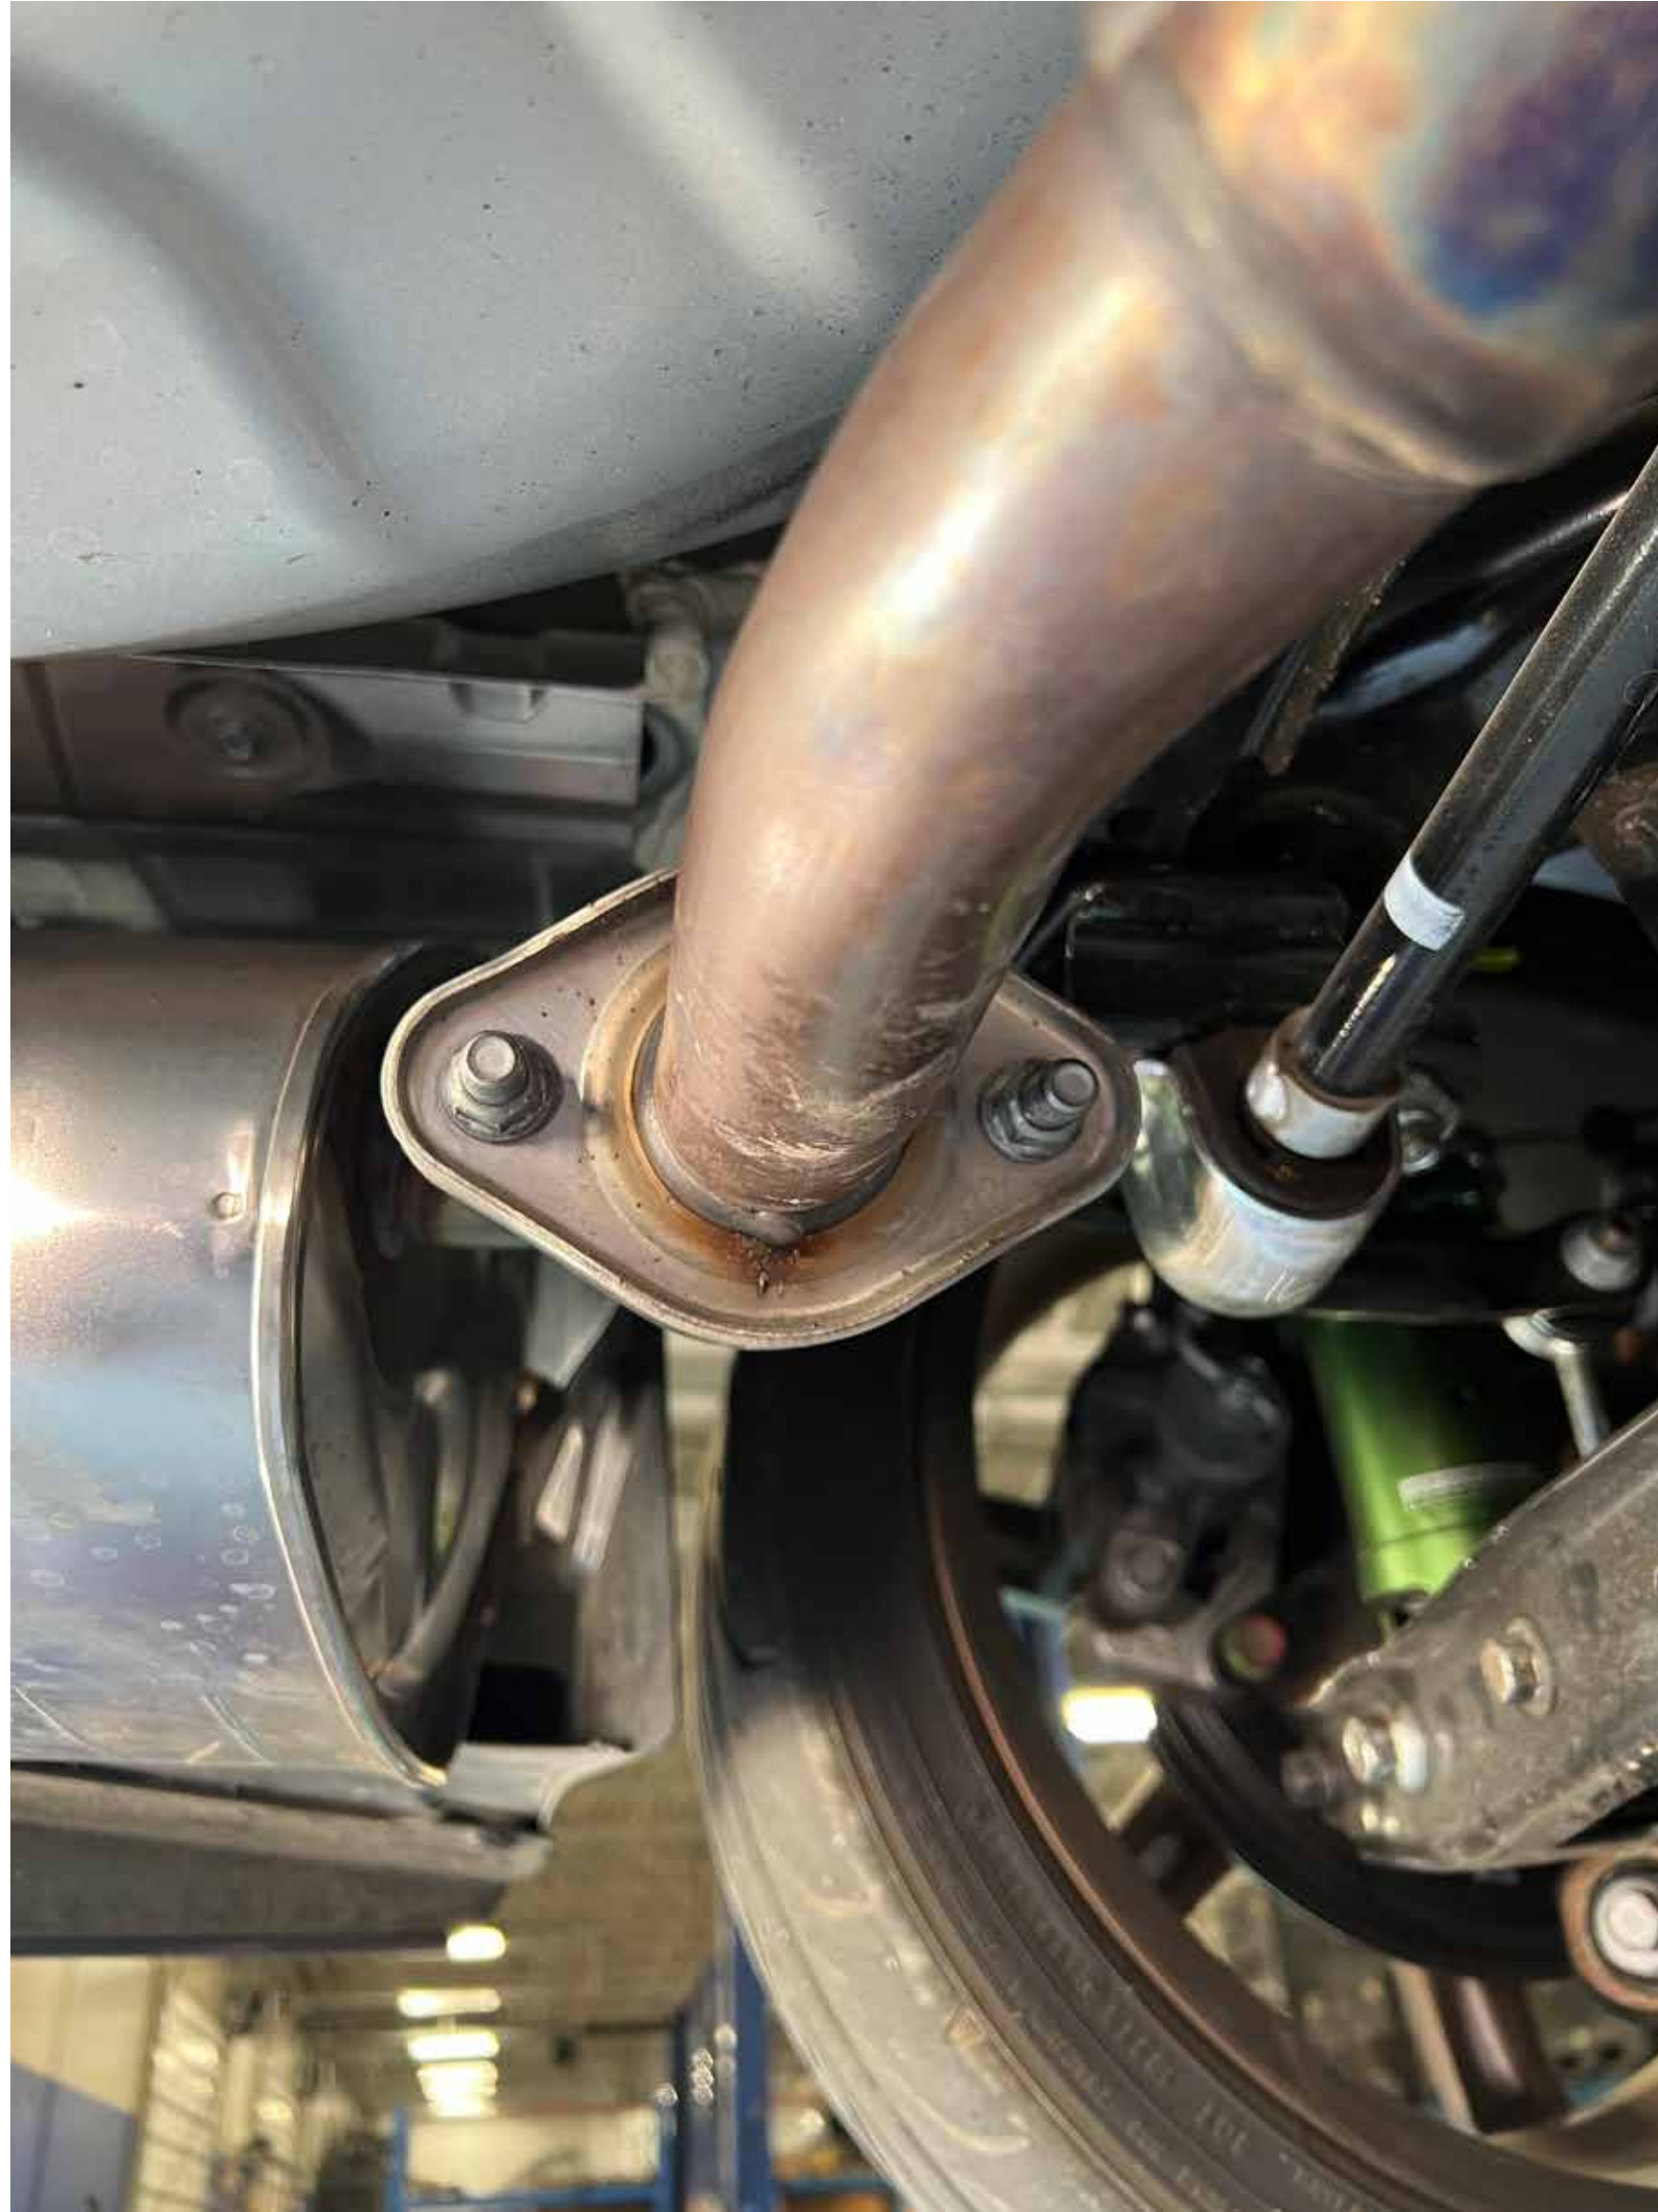


2. Remove 4 y-pipe bolts from both mufflers (14mm socket)

Step 3



3. Remove 4 rubber hangers from both mufflers and remove mufflers

Step 4

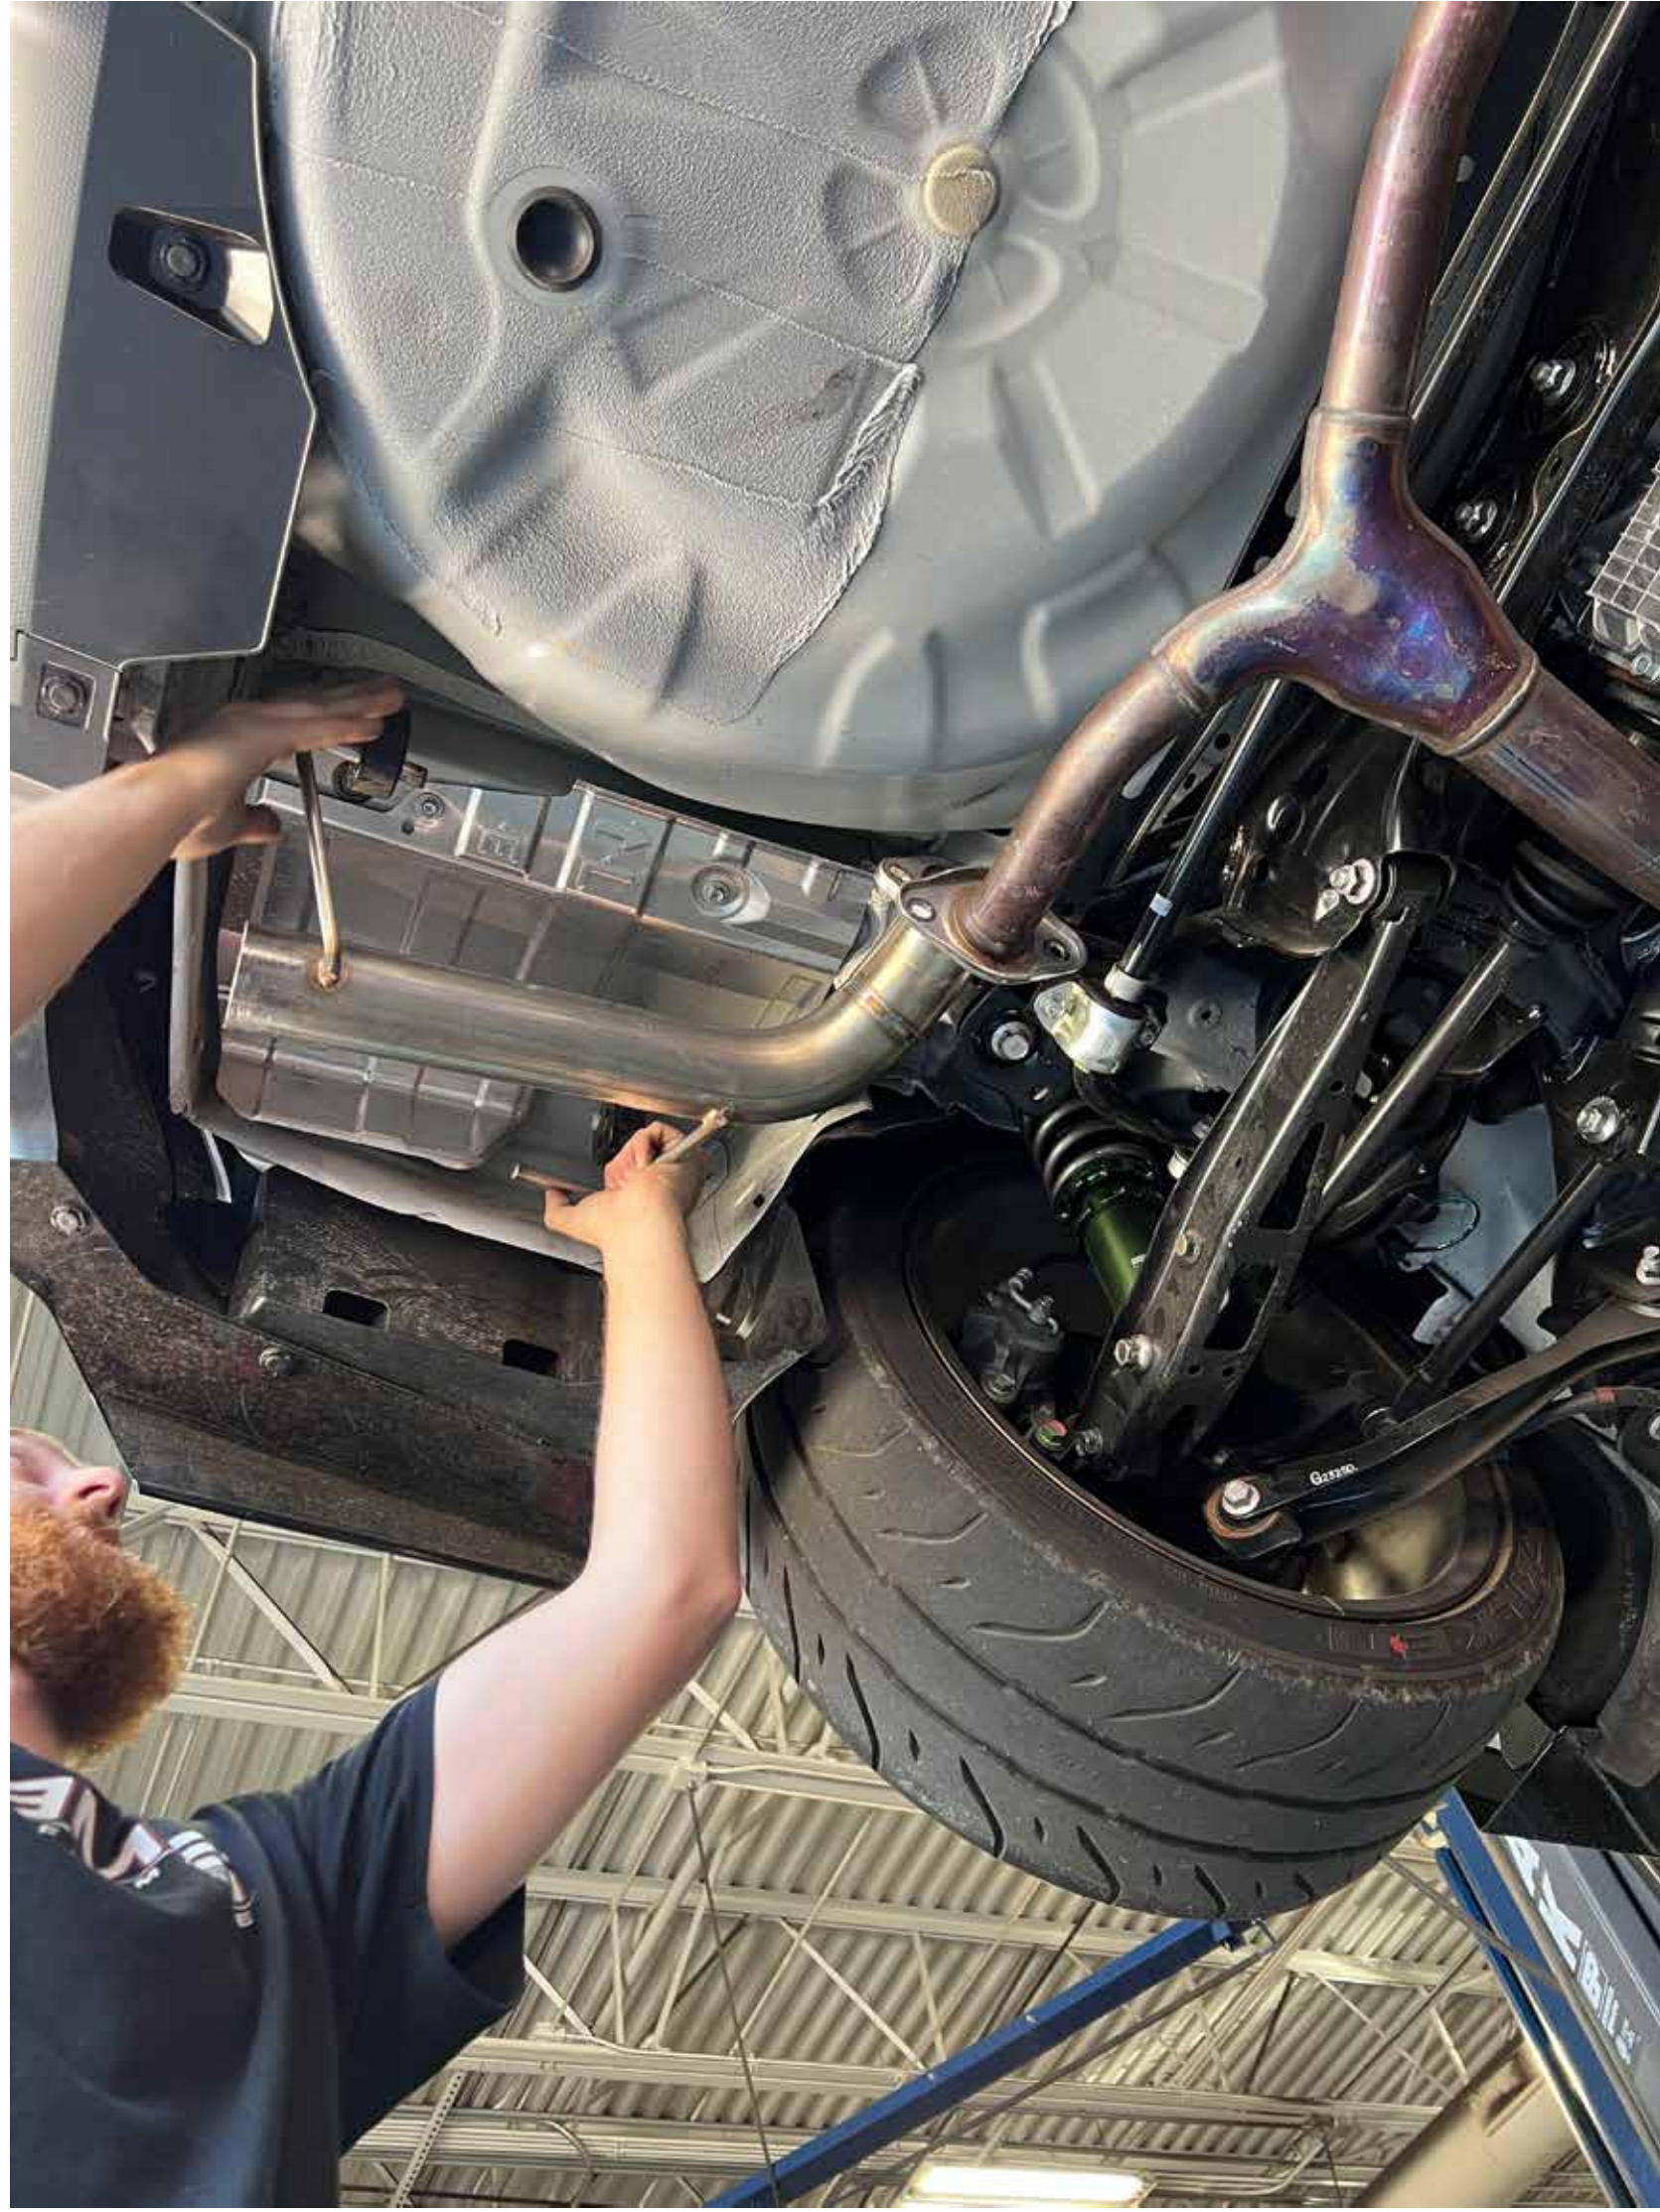


4. Ensure gasket is still in place on the y pipe ends and place MAPerformance muffler delete in place securing with factory hangers

Step 5



5. Secure MAP muffler delete to factory Y pipe with oem bolts you removed in step 4

Step 6

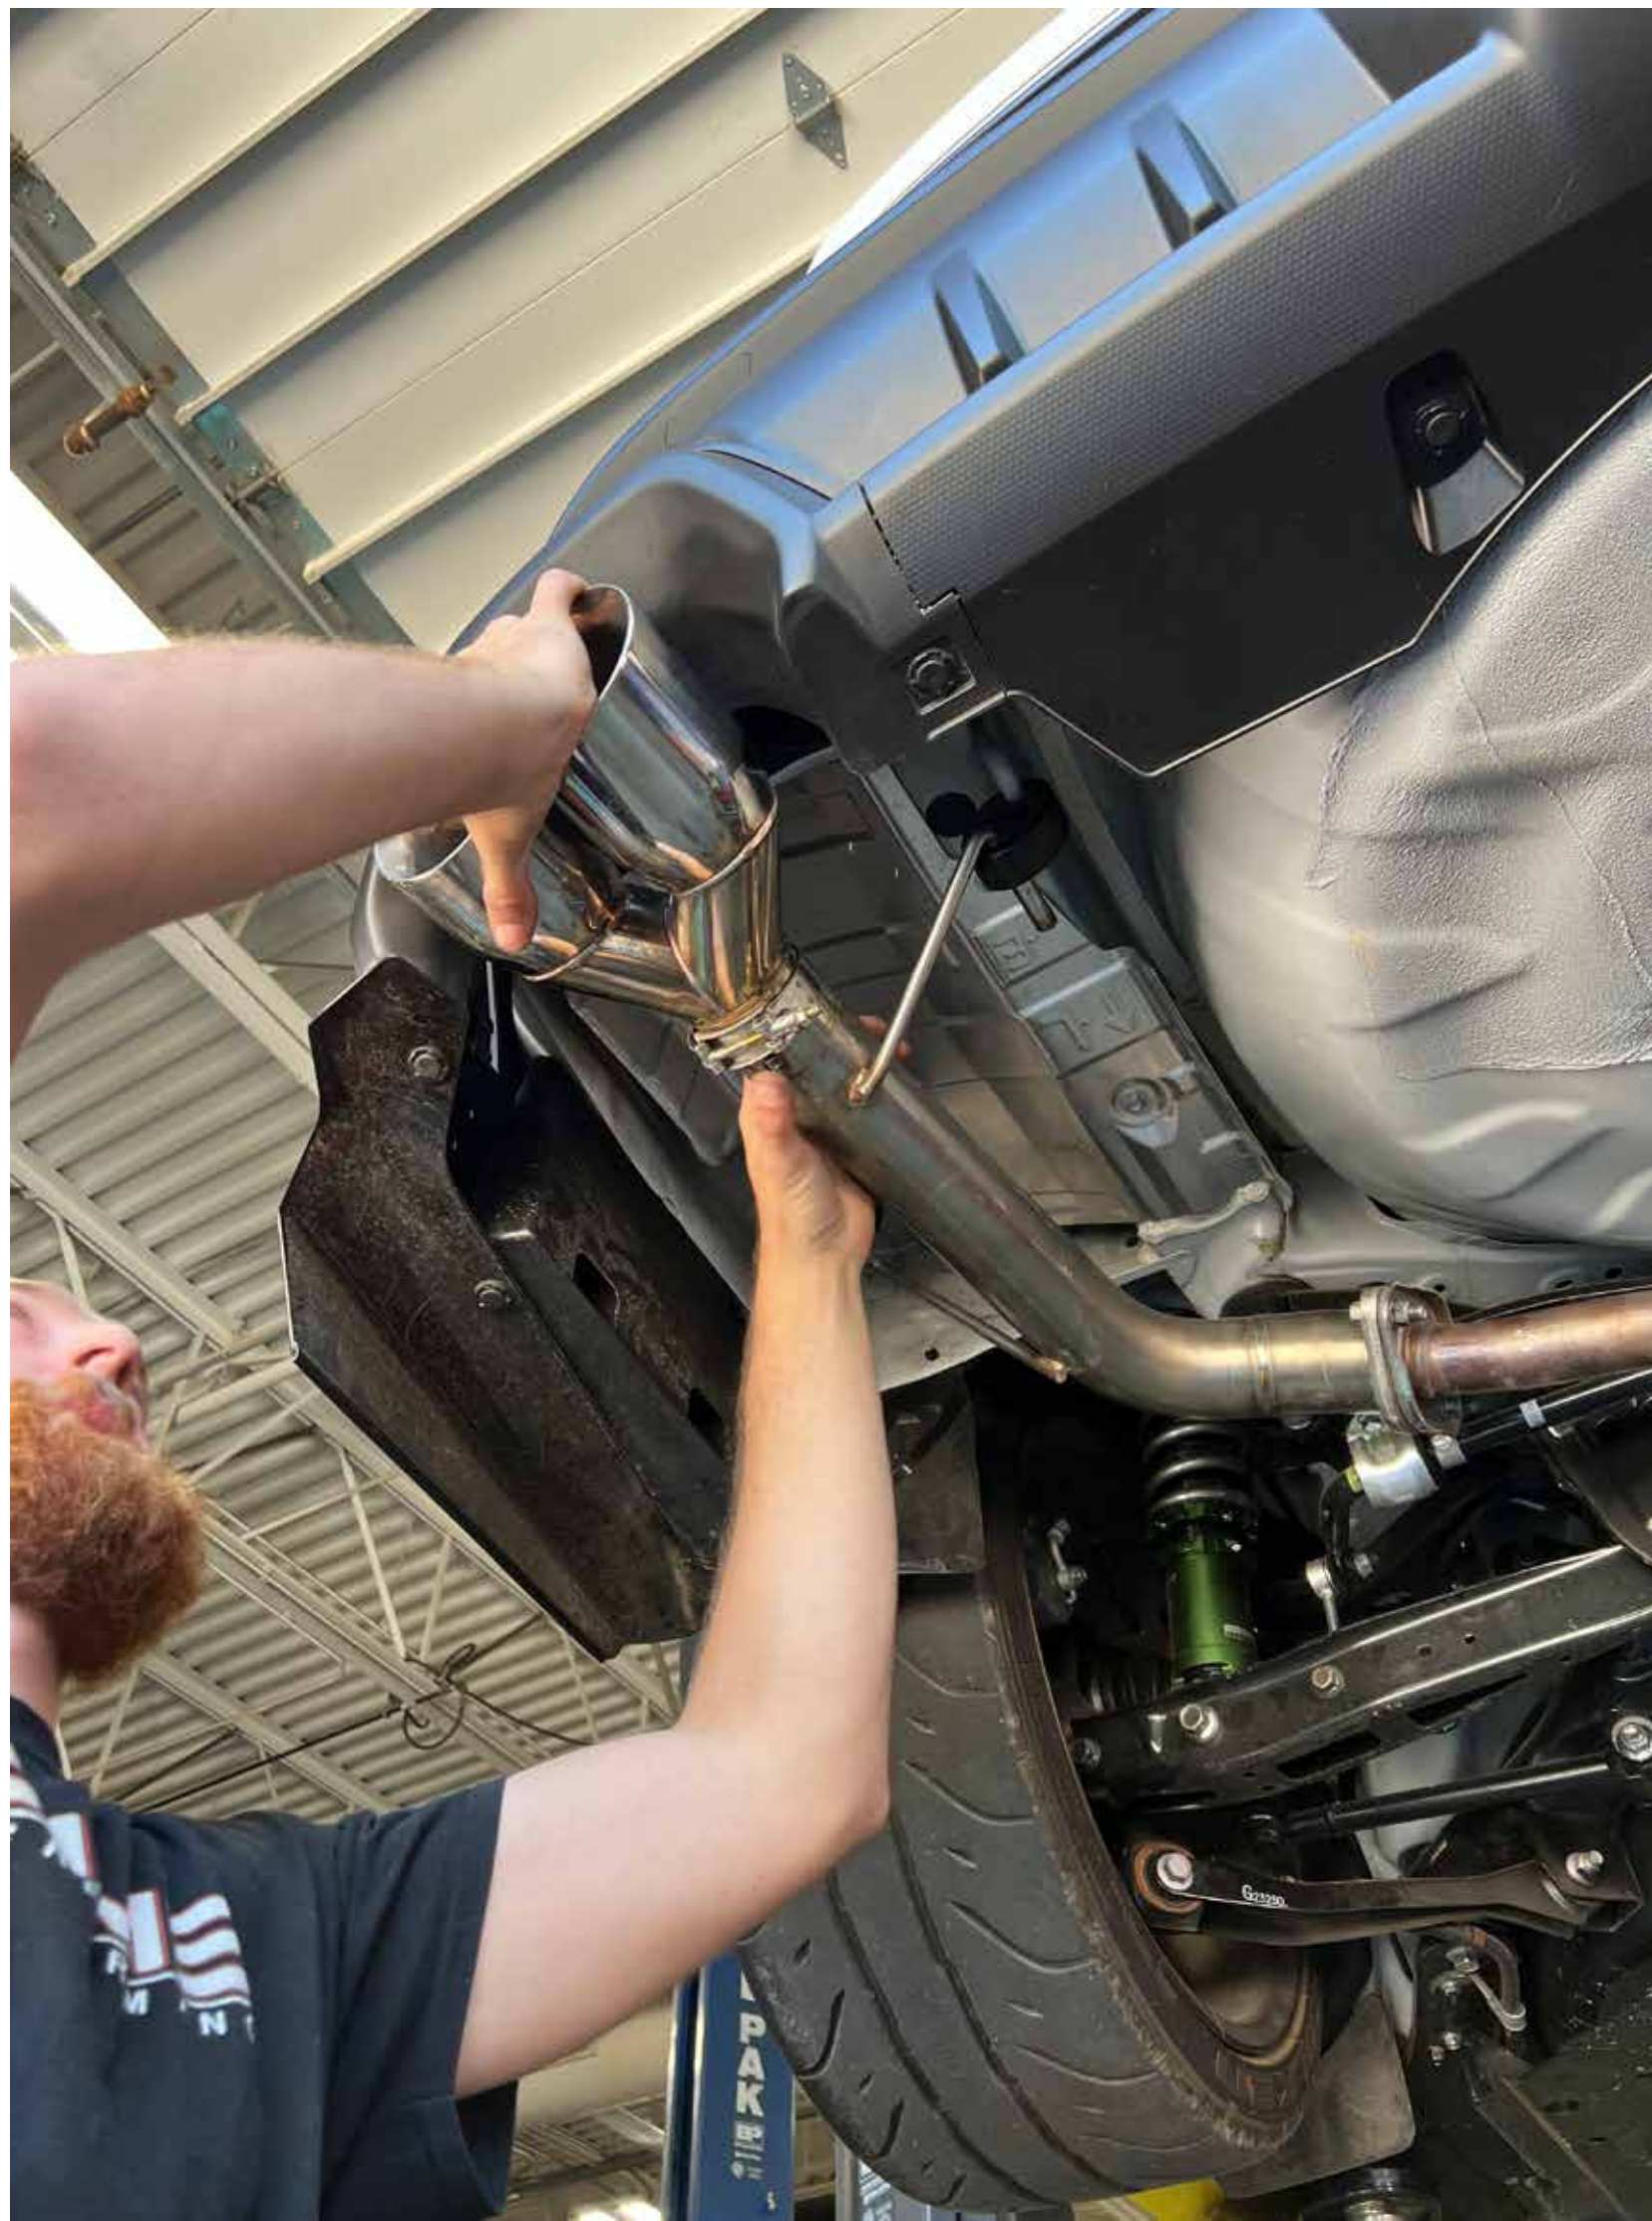

6. Install included exhaust tips, securing with included clamps

be sure to use included anti seize on the threads of the clamp and use hand tools to tighten clamps

Step 7




7. Start and check for leaks, ensure your tips are straight!

We hope you enjoy your purchase! Reach out to us with any issues or concerns.



1-888-627-3736

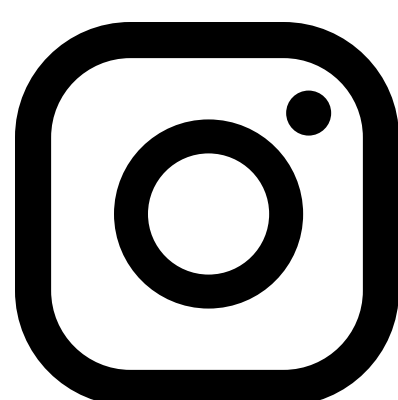

@maperformance



support@maperformance.com



www.facebook.com/modernautomotiveperformance/

