



MAP WRX-4G-IN-AB

Install Instructions



What's in the box?

1x MAP Air Box

1x Bracket

3x M6x12 Flanged Bolts

2x M6 Locknuts

2x Washers


Tools needed



You will need:

- 10mm socket
- 10mm wrench
- Phillips screwdriver
- Ratchet
- Various extensions

Step 1

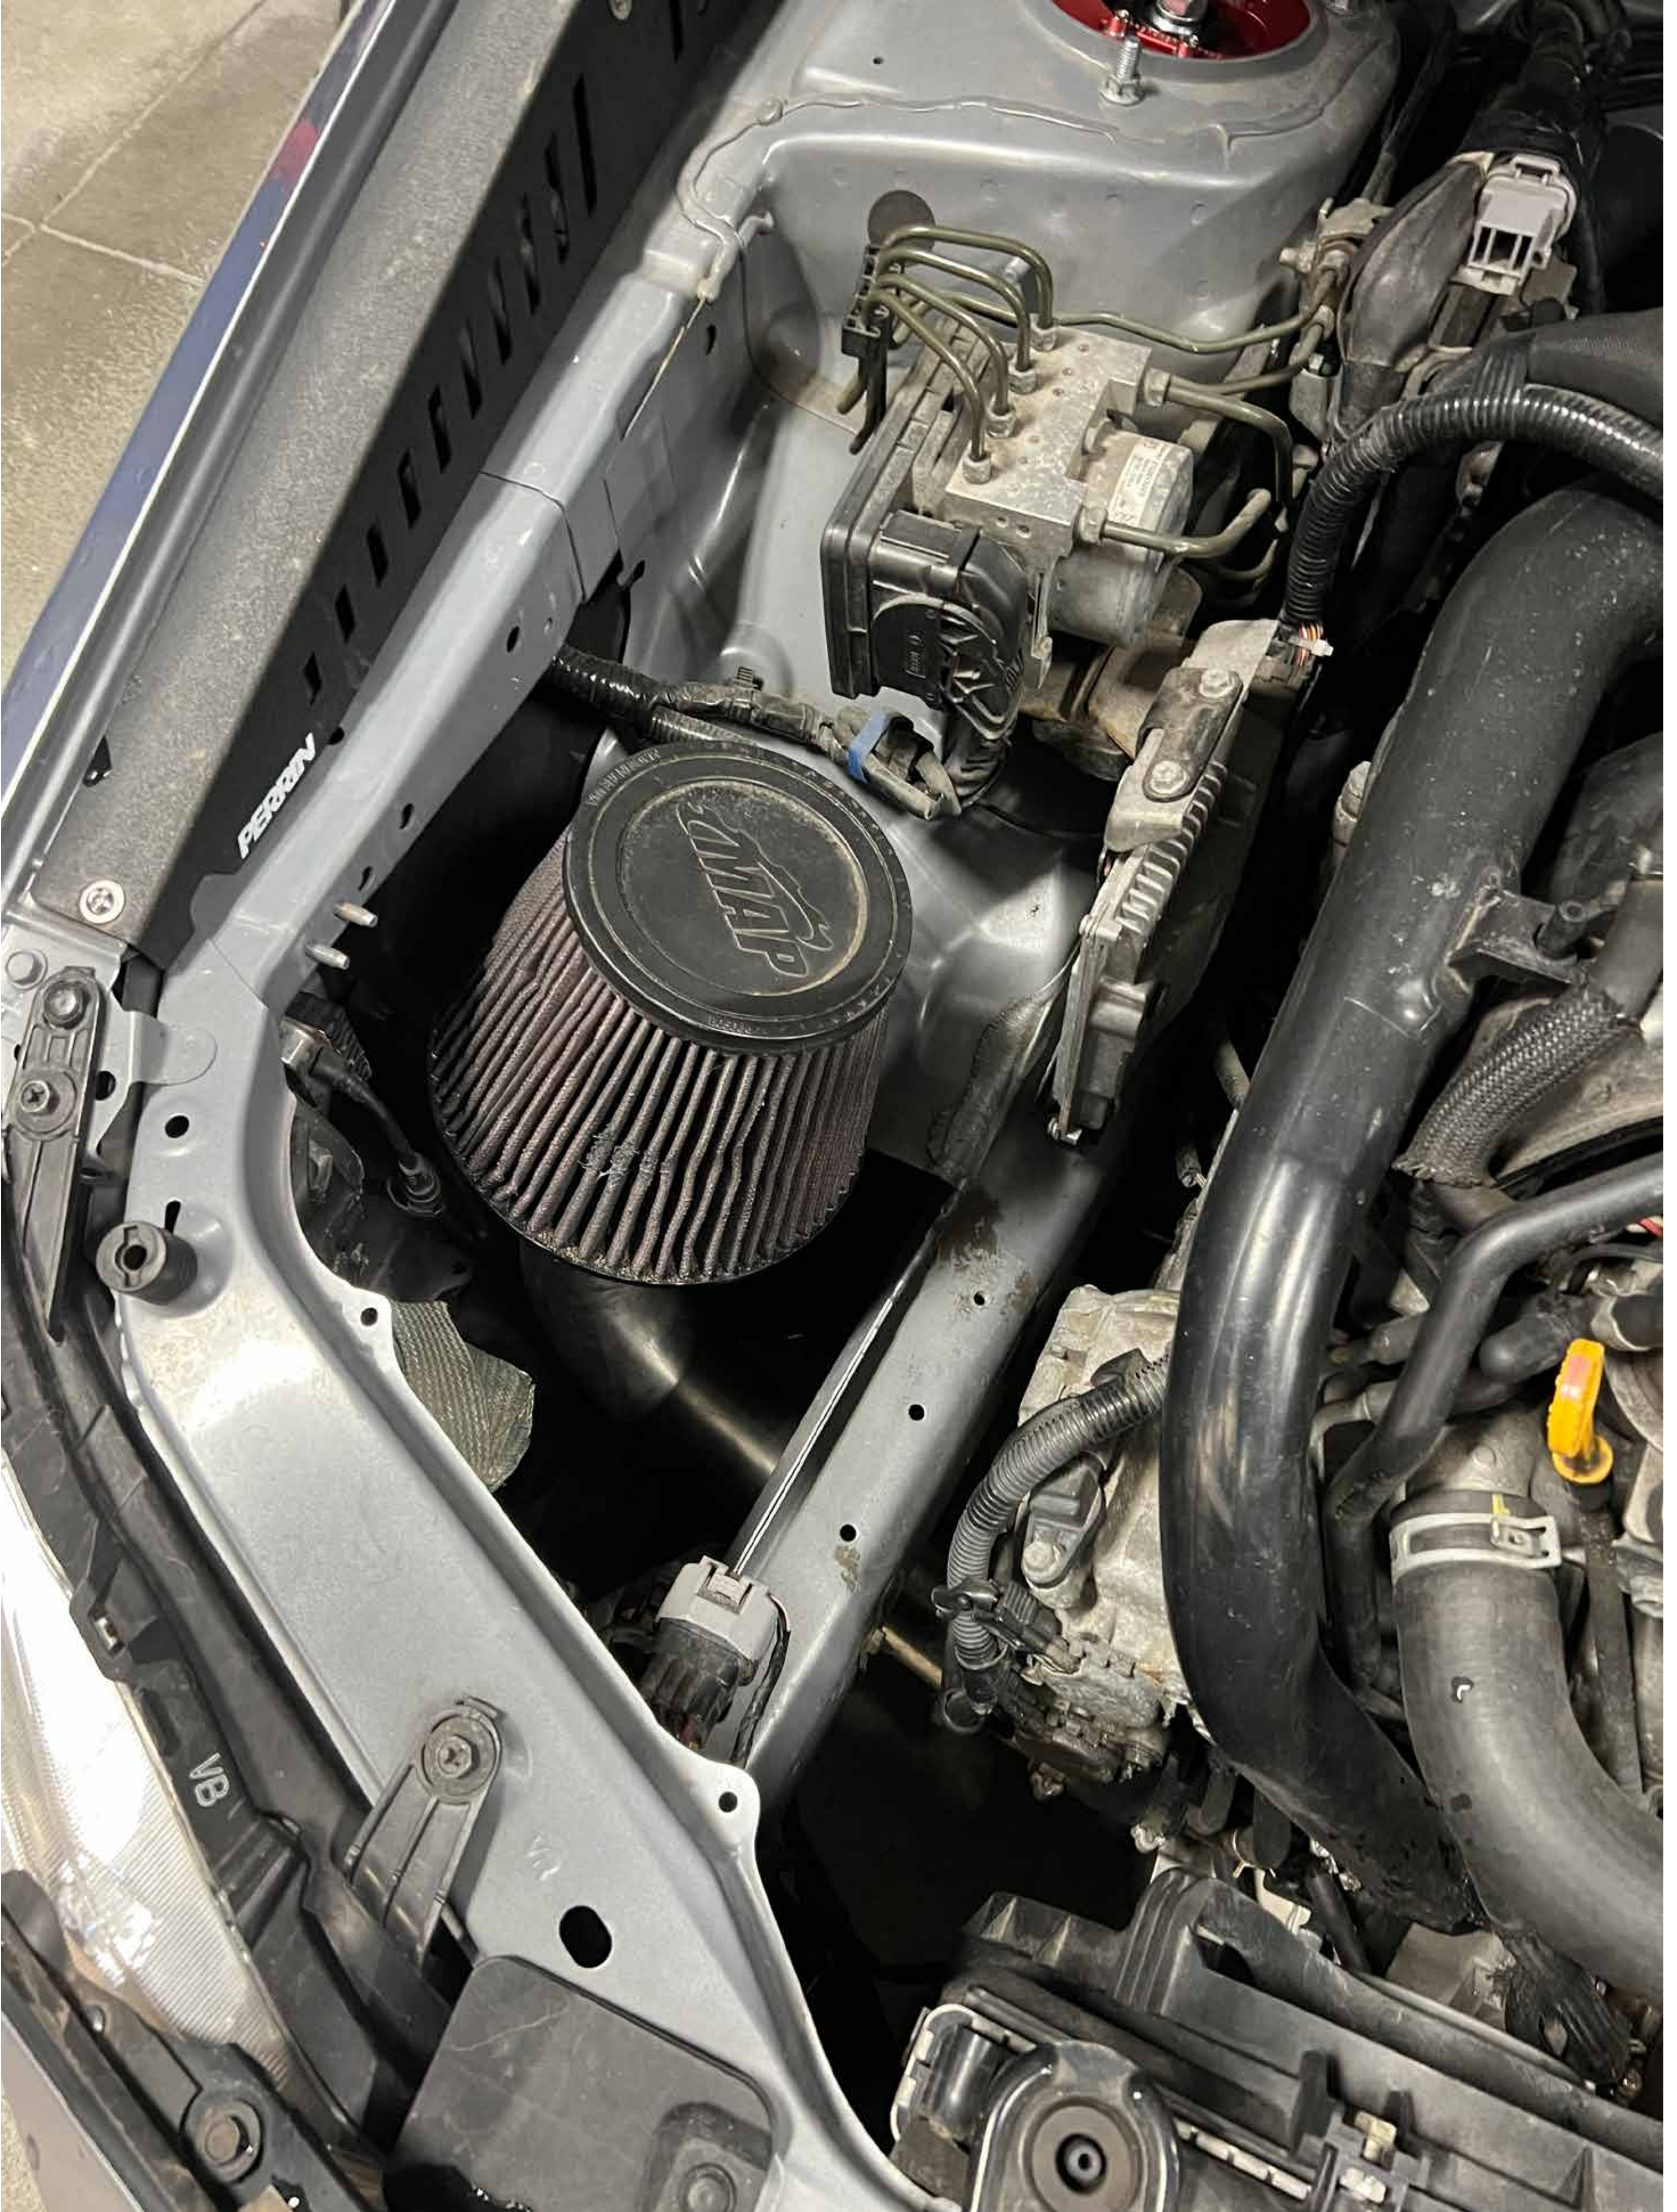

Remove existing airbox/heat shield from the car, and remove oem filter bracket

Step 2



Install included bracket to airbox, securing using included hardware. Be sure to place washers on the inside of the airbox.

Step 2.1



Install included bracket to airbox, securing using included hardware. Be sure to place washers on the inside of the airbox.

Step 3



Slip MAP WRX airbox over filter, be sure the studs from the OEM filter bracket key into the holes on the MAP airbox

Step 4



Install included 10mm bolt onto the vehicle,
securing with the bracket

Step 5




Install OEM intake snorkel, securing with OEM push pins


We hope you enjoy your purchase! Reach out to us with any issues or concerns.



1-888-627-3736

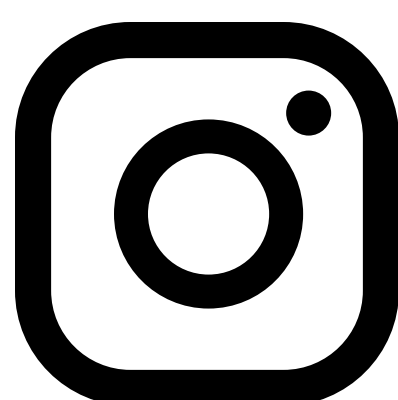

@maperformance

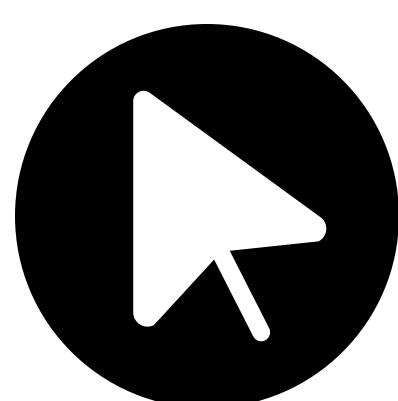

support@maperformance.com



www.facebook.com/modernautomotiveperformance/

