



Regency®

WALL HANGER COLLECTION

SPECIFICATIONS

FINIAL	LENGTH
--------	--------


Pineapple	2 1/2"
-----------	--------

Ball	2"
------	----

Urn	2 1/4"
-----	--------

ROD GAUGE	.031"
-----------	-------



ROD DIAMETER	1/2"
--------------	------

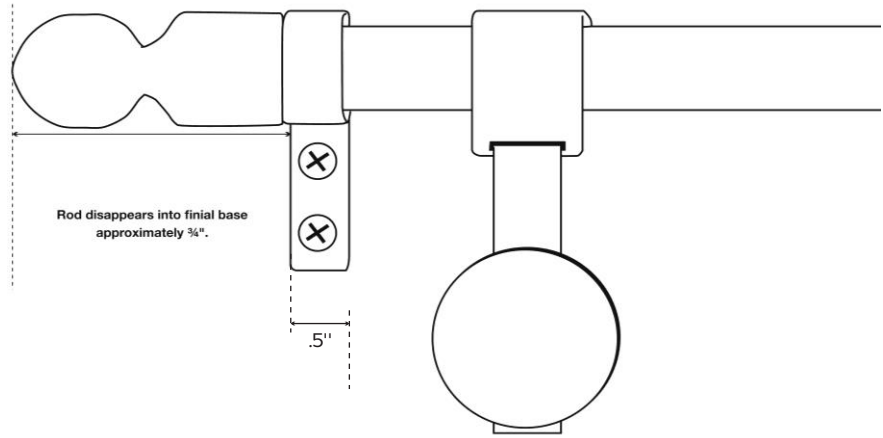

Zoroufy® Regency rods slide into each finial approximately 3/4".
Finials attach to the rod.

Finial measurements vary by style.

INSTALLATION INSTRUCTIONS

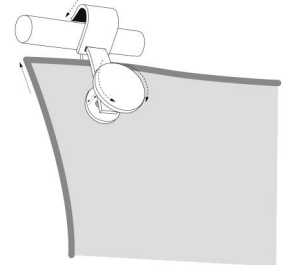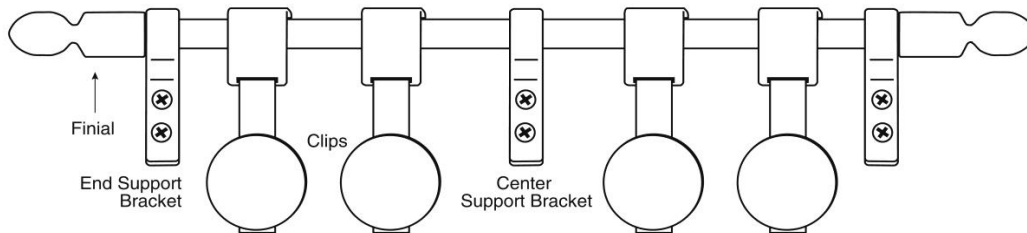

Regency Wall Hanger

1. Attach the finial by inserting the rod into the finial base and tightening the small screw.
2. Slide the first end support bracket onto the rod. Hold the rod in the desired position against wall and mark the position of the holes in the attached end support bracket.
3. While supporting the opposite side, install the first attached end support bracket.
 - a. For Regency Wall Hangers under 72", using a single rod:
 - i. Slide the remaining support brackets onto the rod, level the rod, and install the second end support bracket on the opposite end, leaving room to insert rod into the remaining finial base. Tighten screw.
 - b. For Regency Wall Hangers over 72", using multiple rods:
 - i. Slide support bracket(s) onto the rod, level the rod, and install the double center support bracket on opposite end by inserting the rod half-way.
 - ii. Insert the next rod half-way into the installed double center support bracket.
 - iii. Slide support bracket(s) onto the next rod, level the rod, and install the end support bracket on the opposite end, leaving room to insert the rod into the remaining finial base. Tighten screw.
4. Install the center support bracket(s) evenly between the end support brackets and/or double centers support brackets.
5. Attach the clips to the rug, tapestry, or quilt and secure in place by tightening the disc. Place the clips over the rod.

Wall anchors must be used if bracket screws are not installed into a stud.

ALL PARTS ARE LACQUER COATED TO RESIST TARNISHING. DO NOT USE BRASS CLEANER OR OTHER ABRASIVES. TO CLEAN, SIMPLY WIPE WITH A SOFT DRY CLOTH. PERIODICALLY CHECK AND TIGHTEN ALL SCREWS AND HARDWARE.