

Premium 35mm Universal Shower Mixer Body Only

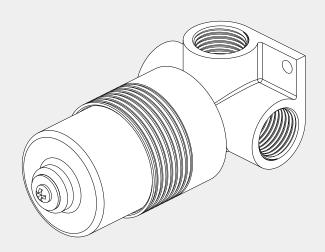



Versions:202311

Top/Back

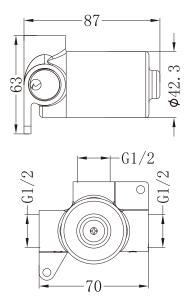

Specifications

SKU

NRUB002P

Watermark License

WM-060073

Temperature Rating Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa

Packaging Includes

1 x shower mixer body


^{*}Dimensions are nominal measurements only.

^{**}Only compatible with all Bianca and Mecca bath / shower mixers.


PREMIUM 35MM UNIVERSAL SHOWER MIXER BODY ONLY-Manual

Installation Instruction For Body Only


ceramic tile plasterboard recommend 51-68 mm

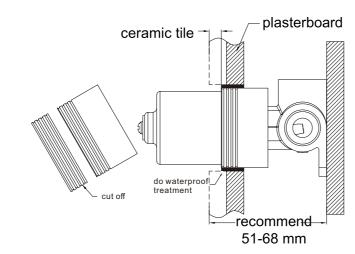

- 1. Secure the mixer body (1) to the nogging, ensuring an installation depth of 51-68mm from the nogging to the ceramic tile. Note: Do not remove the plastic sleeve (2) from the mixer body.
- 2. Connect the cold and hot water supply lines and perform a leak test.
- 3. Drill a $\phi 50 \text{mm}$ hole in the plasterboard for mixer body installation, and then position the plasterboard as shown in the above image.

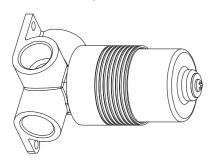


- 4. Mark the plastic sleeve (2) 4-7mm from the ceramic tile surface to the body and waterproof the gap between the plasterboard and body.
- 5. Remove the self-tapping screw, washer, and plastic sleeve, then cut the sleeve at the marked point.
- 6.Reattach the self-tapping screw, washer, and plastic sleeve.

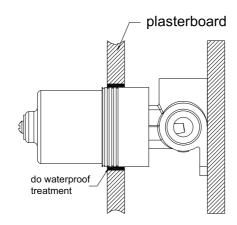


7. Waterproof the gap between the plasterboard and body.

Installation Instruction For Trim Kits Only

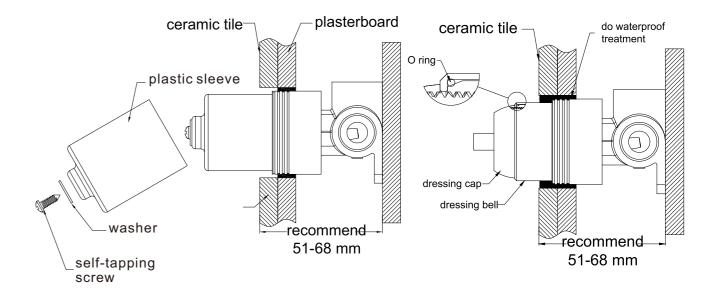

- 1.Drill a φ50mm hole in the ceramic tile, then position it as shown in the above diagram.
- 2. Undo the self-tapping screw, washer, plastic sleeve.

- 3. Insert the O ring to the dressing bell groove, and slide the dressing bell onto cartridge.
- 4. Apply waterproof treatment to the area in the diagram above.

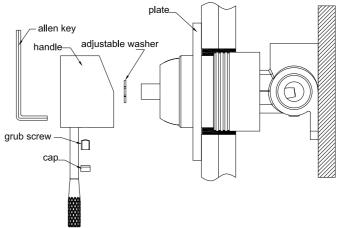

- 6. Slide the backplate onto the wall.
- 7. Attach the washer to the cartridge rod, position the handle, tighten it with a grub screw using an Allen key, and cap the grub screw hole.

Nero