



# How to fit a new Cs88 pedal cable


1. Unscrew the shackle thumb screw, and remove the shackle from the machine

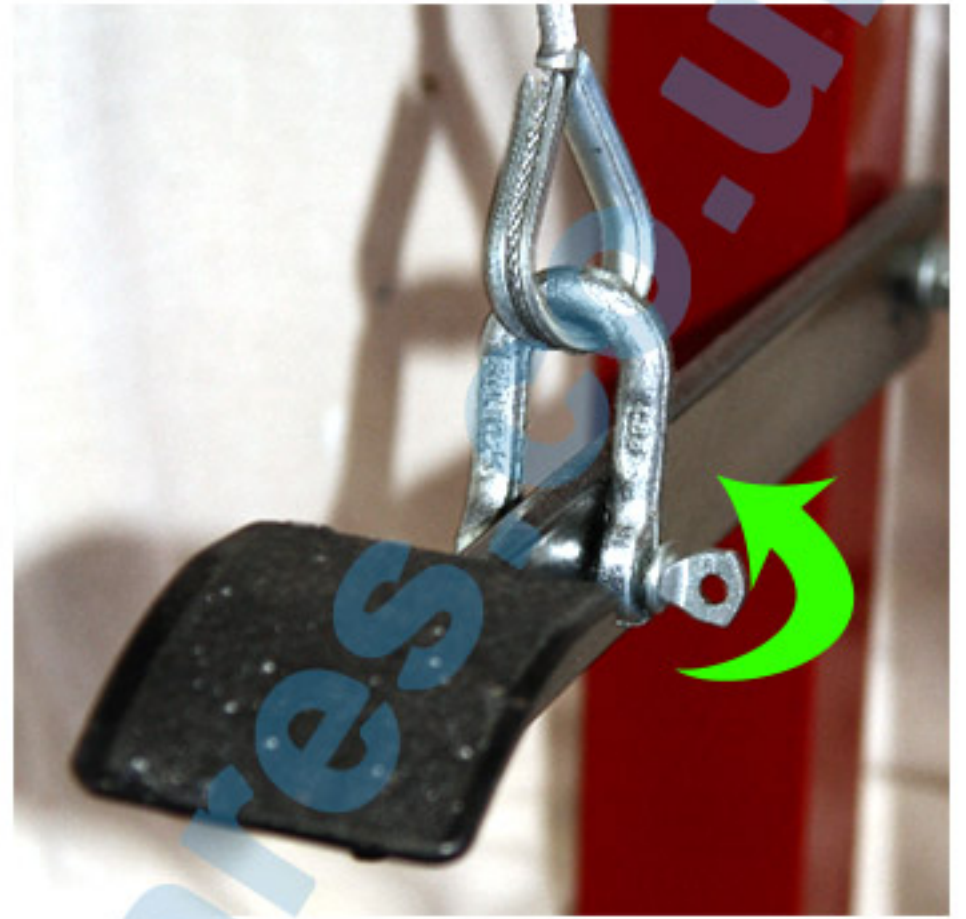

2. Take out the two screws holding the tin box to the machine (there is one screw at either side) and remove the box from the machine.

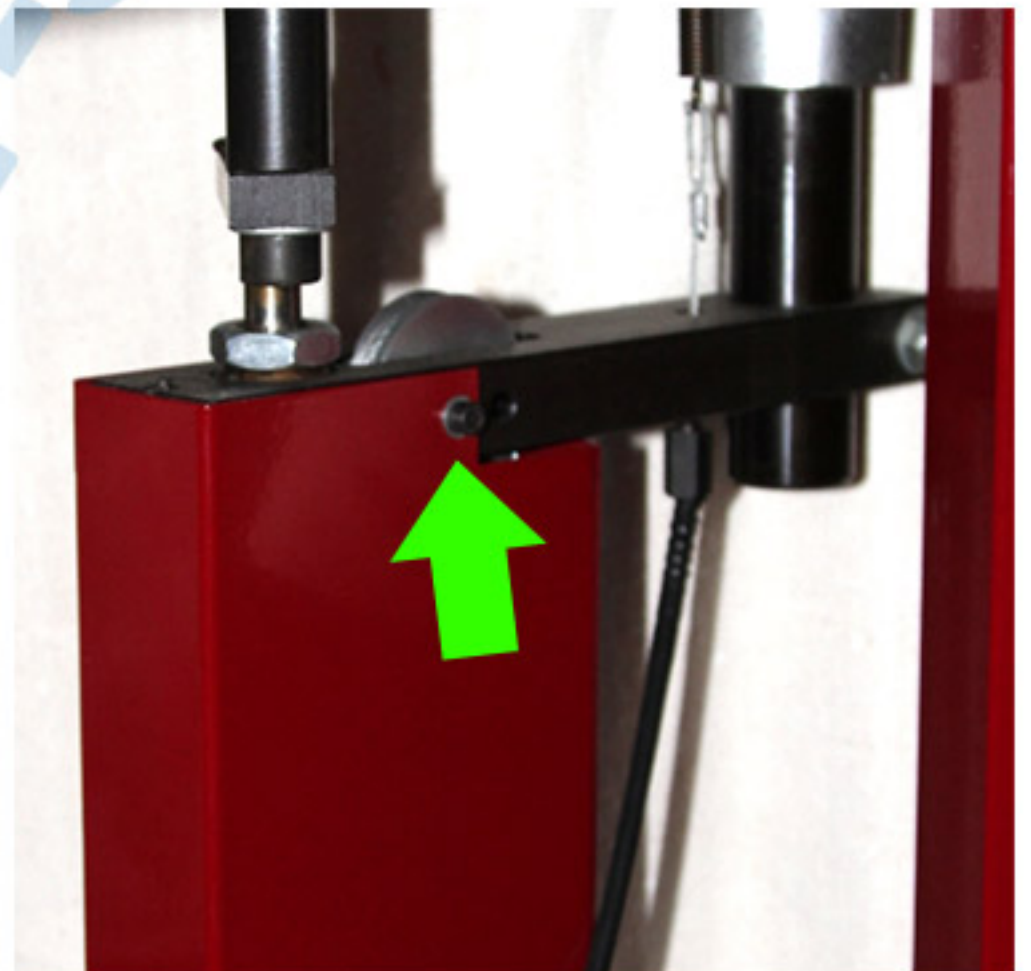

3. Thread the new cable through the grey shelf and around the two pulleys as shown. The end of the cable then slides into a slot in the end of the black steel bar.

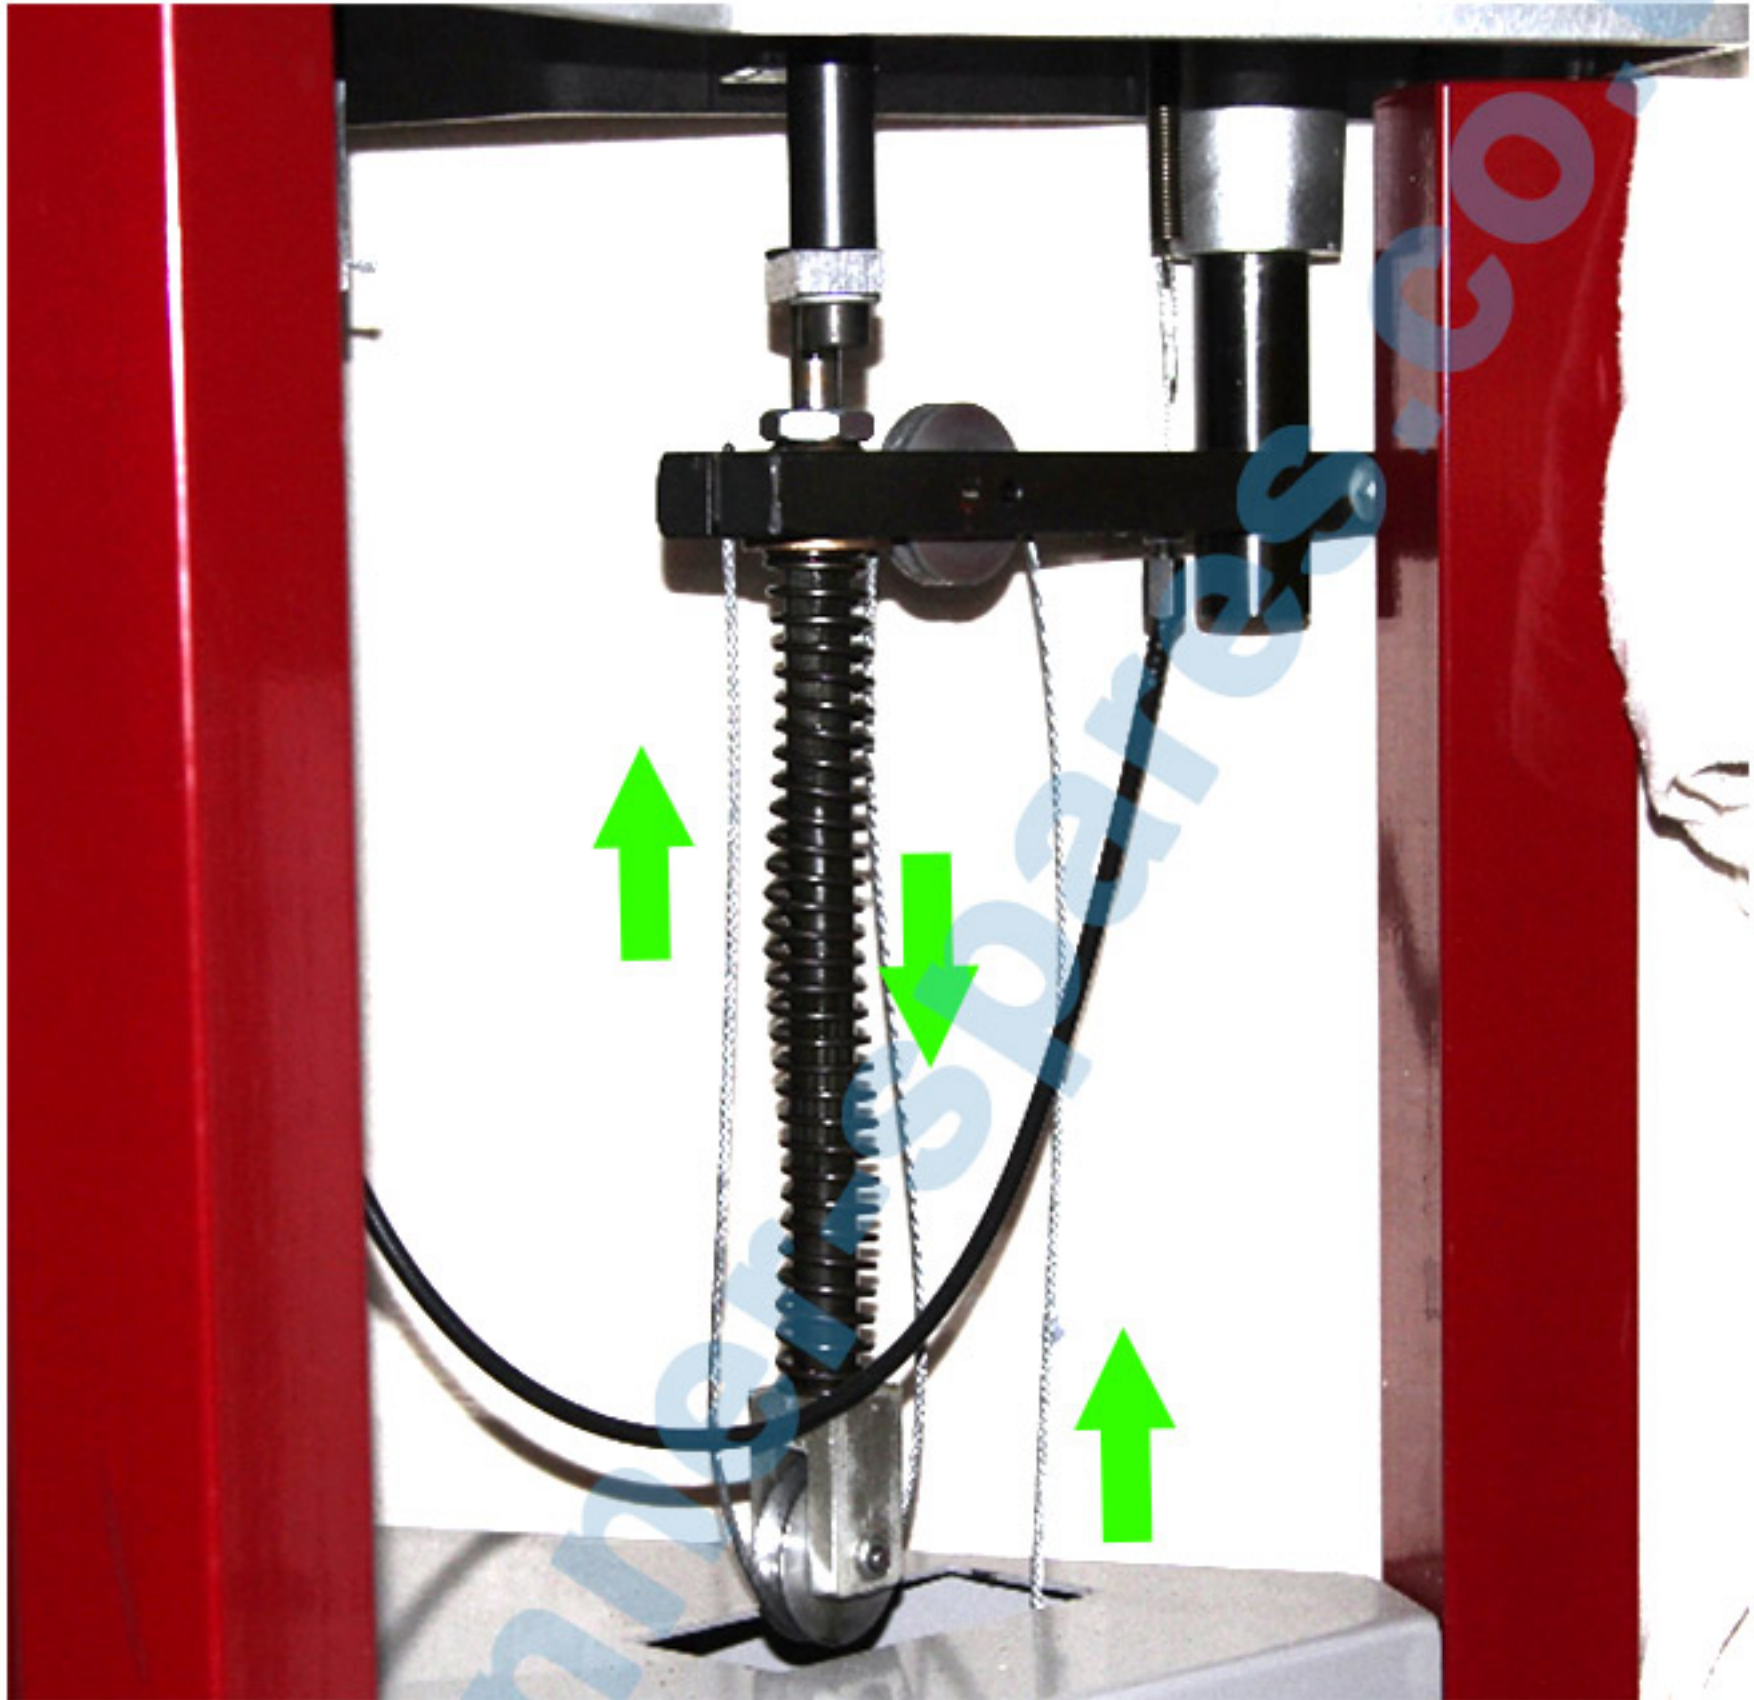

4. Refit the tin box ensuring it cannot catch on the grey shelf. Refit the shackle to the pedal end of the new cable and then refit the thumb screw holding the shackle to the pedal.

5. Do a test chevron to ensure the pedal action is smooth.