


RBM WORKS

DUCATI PANIGALE / STREETFIGHTER

TAILFINS

Installation Guide

1. Prepare the fairing so that the surface is thoroughly cleaned. This is best done with rubbing alcohol.
2. When the surface is cleaned, do a quick mock-up to confirm fitment and location.

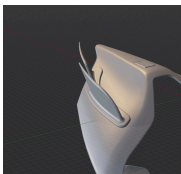

3. Installation

- 3.1. Clean the fairing to ensure no contaminants are on it.
- 3.2. Peel the label on the double sided tape to reveal the adhesive. Stick the tailfin to the fairing and press firmly.



- 3.2. Repeat the same steps with the other side.