



LOAD CLASS INSTALLATION

Note: For all load class installations recess Dura Slope below grade: 1/4" for vehicular traffic, 1/8" for pedestrian traffic. When using iron frame DS-200 no additional recess is needed.

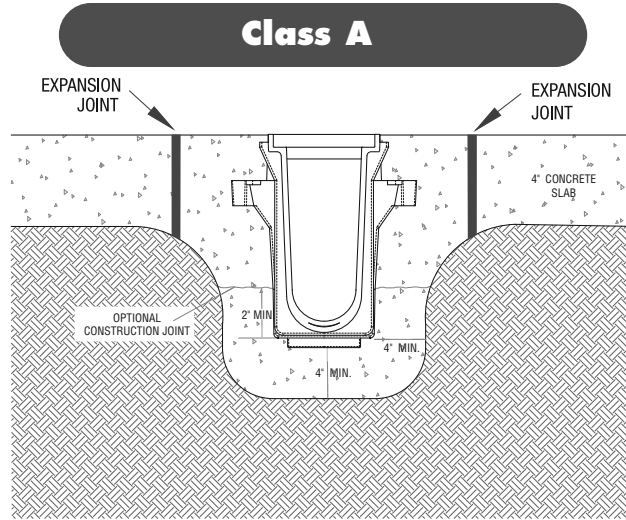


Set trench drain in channel surrounded by 4" of concrete or thickness of the concrete slab with a minimum of 2,500 psi.

Class B

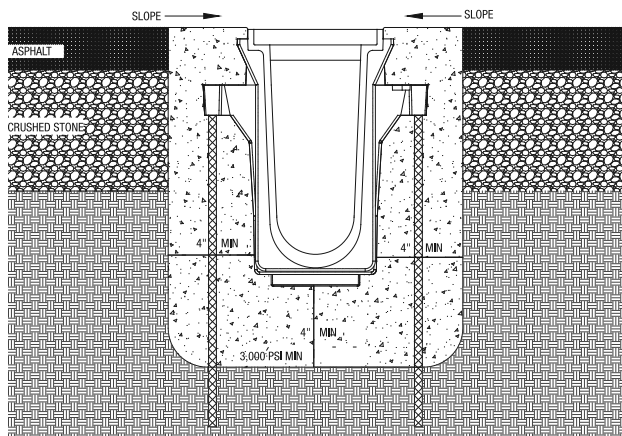

Set trench drain in channel surrounded by 4" of concrete with a minimum of 3,000 psi. Install #4 re-bar to stabilize drain while concrete is being poured. Make sure re-bar is 1" below finished surface.

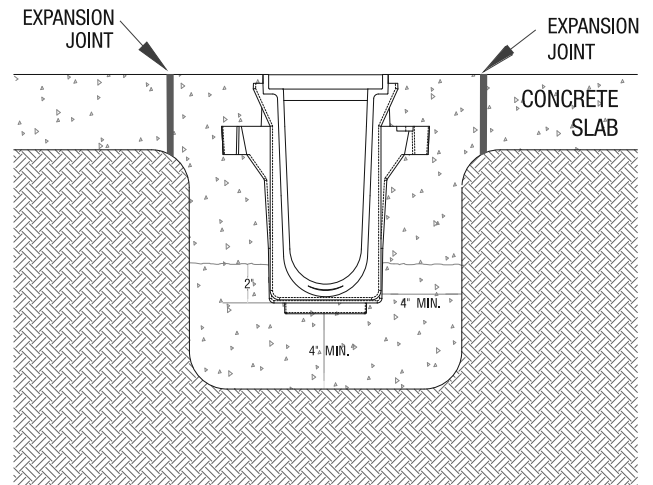

Set trench drain in channel surrounded by 4" of concrete or thickness of the concrete slab with a minimum of 3,000 psi.