



# BIRD KITE

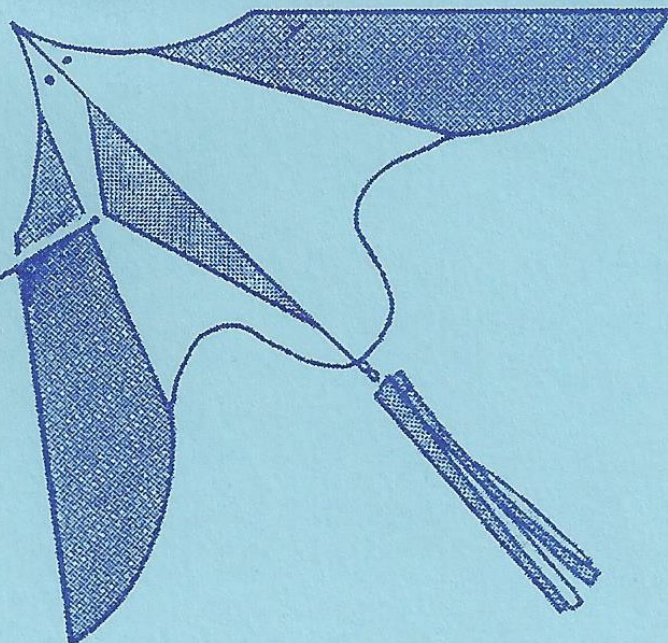

English, IN 47118

## Directions for assembling and flying your Sun Oak Bird Kite.

1. Unroll kite.
2. Insert cross-stick in pockets #2 on either side of back side of kite.
3. Attach flying line to keel ring (#3) of kite (front side).
4. Hold kite into wind (with your back to the wind) and allow it to take line. Give line quickly to stop a nose dive, pull on line to increase altitude. Fly in a 5 - 20 m.p.h. wind on 30 lb. test line. (Flying line not included.)

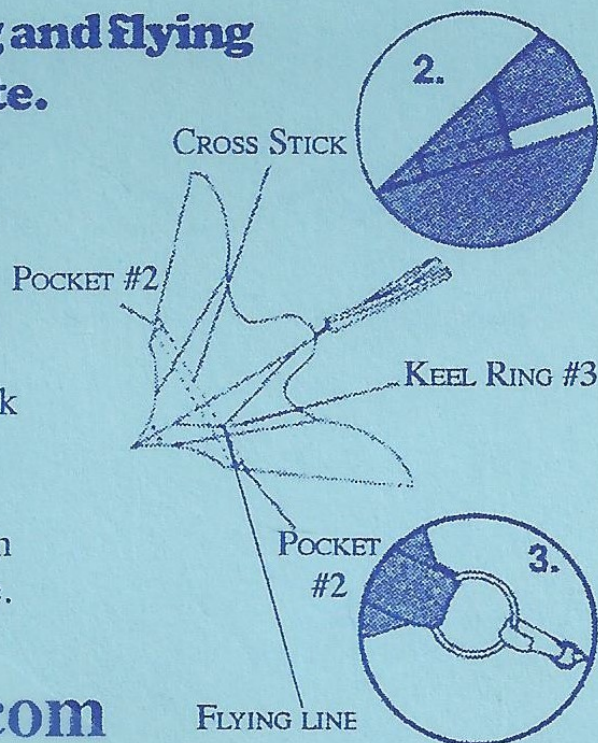

[www.sunoakkites.com](http://www.sunoakkites.com)