


Make: Subaru

Model: 2013-2017 Crosstrek XV

Application: Rocker Panel Guards

PACKAGE CONTENTS				TOOLS	
QTY		QTY			
2	Rocker Panel Guards - (Left & Right Sides)	2	1/4"-20 x 1" Socket Buttonhead Bolt	7/16" Socket/Wrench 5/32" Hex Key 1/4" Drill Bit 1/8"-3/8" Unibit/Drill Bit Set	
		2	3/8" Spacer		
10	1/4"-20 x 3/4" Socket Buttonhead Bolt				
22	1/4" Flat Washer				
12	1/4" Split Lock Washer				
12	1/4"-20 Nut				

INSTALLATION INSTRUCTIONS

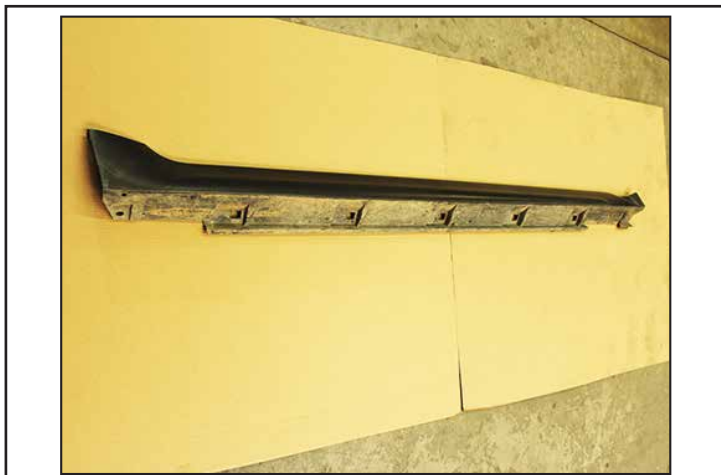

Remove the factory rocker panels. Note: There are (5) large fasteners, (1) Screw, and the front mudflaps that need to be removed. Be careful when prying the panel off the car to preserve the factory clips.

1




Set the factory rocker panel on top of the new rocker panel guard. Ensure it sits right up against the guard. Carefully turn over the assembly to mark the locations for the mounting holes on the bottom.

2



Align the rear edge of the rocker panel guard to the factory plastic as shown above.

3

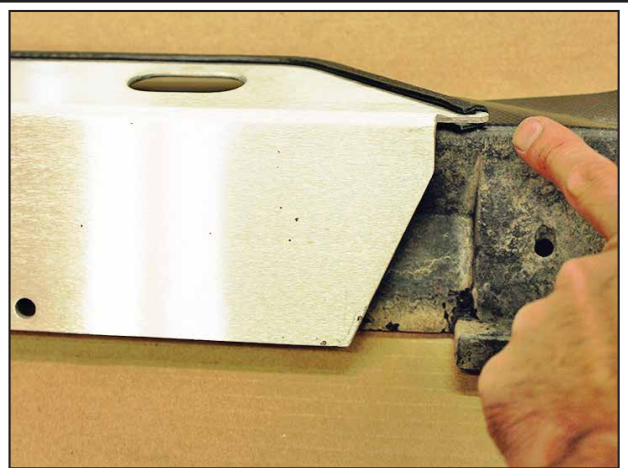

Align the front edge of the rocker panel guard to the factory panel as shown above.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.




Helpful tip: Use a clamp to hold the two pieces in place while you mark the holes for drilling on the underside.

5



Mark the mounting holes for drilling on the factory plastic using the pre-drilled holes on the rocker panel guard as a template. Note: Only (6) holes need to be drilled in the plastic to mount the new panel to the factory panel.

6

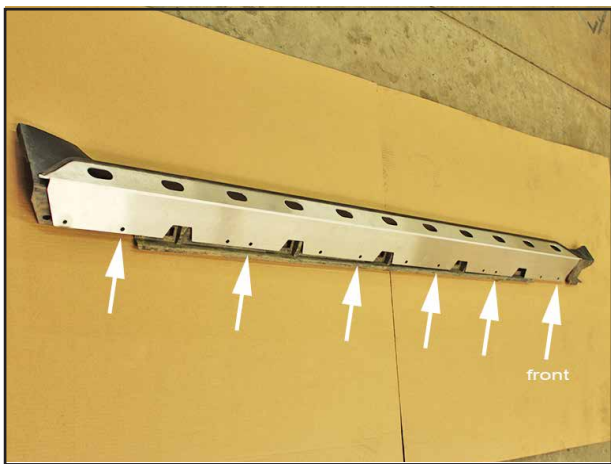

Only (6) holes are needed to mount the rocker panel guard to the factory plastic panel.

7



Install the longer 1/4"-20 bolt into the front hole in the orientation as follows: 1/4"-20" Bolt, Spacer (inbetween rocker guard and factory plastic), 1/4" Washer, 1/4" Lock Washer, and Nut.

8



Install the shorter 1/4"-20 x 3/4" long bolts in the remaining (5) holes in the orientation as follows for each hole: 1/4"-20 bolt, (2) 1/4" Washer, factory plastic guard, rocker panel guard, 1/4" Washer, 1/4" Lock Washer, and Nut. One side of rocker panel guard should now be completely fastened to the factory plastic panel. Repeat the previous steps on the opposite side.

9



Reattach the rocker panels back to the vehicle.

Completed assembly shown.

10



11



12