

Make: Subaru

Model: 18+ Crosstrek XV

Application: Rocker Panel Guards

| PACKAGE CONTENTS |  |     |                                     | TOOLS  |  |
|------------------|--|-----|-------------------------------------|--|--|
| QTY              |  | QTY |                                     |  |  |
| 2                | Rocker Panel Guards - (Left & Right Sides) | 4   | 1/4"-20 x 1" Socket Buttonhead Bolt | 7/16" Socket/Wrench<br>5/32" Hex Key<br>1/4" Drill Bit<br>1/8"-3/8" Unibit/Drill Bit Set |  |
|                  |  | 4   | 3/8" Spacer                         |  |  |
| 8                | 1/4"-20 x 3/4" Socket Buttonhead Bolt      | 4   | 1/4"-20 Lock Nut                    |  |  |
| 24               | 1/4" Flat Washer                           |     |                                     |  |  |
| 8                | 1/4" Split Lock Washer                     |     |                                     |  |  |
| 8                | 1/4"-20 Nut                                |     |                                     |  |  |

## INSTALLATION INSTRUCTIONS



Remove the factory rocker panels. There are (5) large fasteners underneath and the front mudflaps that need to be removed. Be careful when prying the panel off the car to preserve the factory clips.

1



Set the factory rocker panel on top of the new rocker panel guard. Ensure it sits right up against the guard. Carefully turn over the assembly to mark the locations for the mounting holes on the bottom.

2



Helpful tip: Use a clamp to hold the two pieces in place while you mark the holes for drilling on the underside.


3



Mark the mounting holes for drilling on the rocker panel using the pre-drilled holes on the rocker panel guard as a template. Note: Only (6) holes need to be drilled to mount the new panel to the factory panel.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.

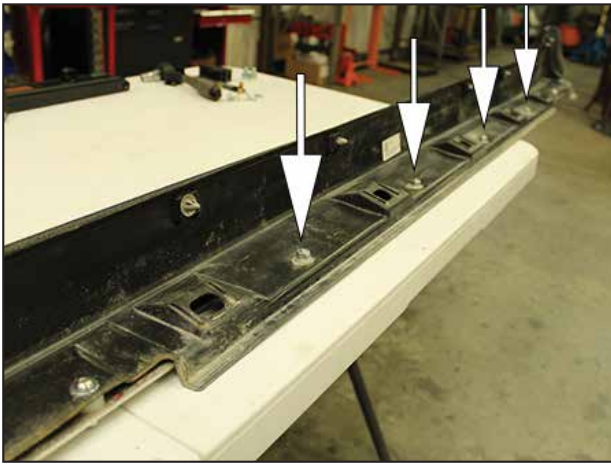

Drill out the (4) middle holes to 1/4". Install 1/4" hardware in the orientation as follows, 1/4"x3/4" Bolt & Washer (head facing the ground, insert up through rocker guard and factory plastic), 1/4" Washer, 1/4" Lock Washer, and 1/4" Nut. Repeat for each hole.

5



Drill out the (2) end holes with a 1/4" drill bit and install the 1/4" hardware in the orientation as follows, 1/4" Buttonhead Bolt (head facing the sky), 1/4" Washer, Spacer (inbetween the rocker guard and factory plastic), 1/4" Washer, and 1/4" Lock Nut. Repeat on the opposite end hole.

6



Repeat all the steps on the opposite side rocker panel.

Tighten all hardware.

7



Reinstall the rocker panels in the factory location and return all factory fasteners to corresponding holes.

Completed assembly shown.

8