



Make: Ford

Model: 2013+ Fusion

Applications: Side Splitter

PACKAGE CONTENTS				TOOLS
QTY		QTY		
2	Side Splitter			Flat Head Screwdriver Ratchet 1/2" Socket 1/2" Wrench 3/8" Drill Bit Power Drill
12	5/16"-18 x 1" Button Head			
12	5/16" Washer			
12	5/16" Lock Washer			
12	5/16" Nut			


INSTALLATION INSTRUCTIONS

Figure 1



- 1) It is recommended to lift the vehicle to gain access to the bottom of the side skirt.
- 2) Remove the plastic clips on the bottom of the side skirt so that the side skirt can be pulled down.
- 3) Line up the rear edge of the splitter to the end of the side skirt. The side splitter should extend 1" from the side of the side skirt.
- 4) Drill the rear most 3/8" hole and attach the supplied hardware. The hardware should be attached as shown in Figure 2.
- 5) Align the splitter straight and drill the next 3/8" hole and attach the supplied hardware. Make sure the side splitter is flat against the skirt before drilling.

Figure 2:

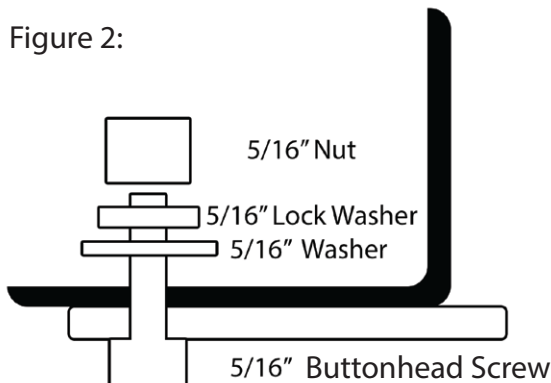

- 6) Drill and install the remaining hardware so the side splitter is firm on the skirt.
- 7) Reinstall plastic clips on side skirt.

Optional: Remove side skirts entirely for easier installation.