



Make: Ford

Model: 2015+ Focus ST

Applications: 3-Piece Front Splitter

| PACKAGE CONTENTS | | | | TOOLS |
|------------------|-------------------------------------|-----|-------------------|--|
| QTY | | QTY | | 3/8" Drill Bit 1/2" Socket or Wrench 3/16" Hex Key Sharp cutting tool |
| 1 | Splitter Center Piece | 10 | 5/16" Lock Washer | |
| 2 | Splitter Side Pieces | | | |
| 2 | 5/16" - 18 x 1.25" Buttonhead Screw | | | |
| 8 | 5/16" - 18 x 1.00" Buttonhead Screw | | | |
| 10 | 5/16" - 18 Hex Nut | | | |
| 10 | 5/16" Flat Washer | | | |

INSTALLATION INSTRUCTIONS

Remove the front splash guard attached to the front bumper.

1

Cut the splash guard on both sides as shown. Extend the cut approximately 1.5" onto the top face.

2


Re-insert splash guard, but do not attach hardware. Reach through the back to insert mounting hardware for the splitter.

3

Remove lowermost screw on fender liner and pull away for clearance.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.

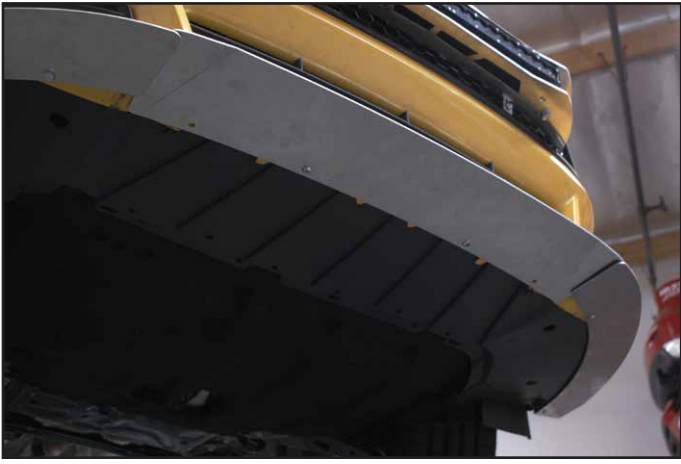

Attach center piece, then side pieces using OEM hardware. Optional: Drill out OEM holes and use supplied 5/16"x1" hardware.

5



Check that the center piece rests on top of the side pieces. Check alignment on both sides and tighten hardware.

6



Drill out remaining holes on the center piece with a 3/8" Drill Bit.

7



Insert (2) 5/16"x1.25" Buttonhead Screws and secure with Flat Washer, Lock Washer, and Nut. Tighten all hardware.

8