

Make: Ford

Model: 2010-2014 Mustang

Applications: Side Splitter

PACKAGE CONTENTS				TOOLS	
QTY		QTY			
2	Side Splitter			Flat Head Screwdriver Panel Pry Removal Tool Torx Screwdriver Set 1/8" Drill Bit 3/8" Drill Bit	
14	5/16" - 18 x 1" Buttonhead Screw				
14	5/16" Washer				
14	5/16" Lock Washer				
14	5/16" Nut				

INSTALLATION INSTRUCTIONS

Figure 1.




1) Lift the vehicle to gain access to the bottom of the side skirt.

2) Remove the plastic clips/screws on the bottom and ends of the side skirt so that the side skirt can be pulled down. (Figure 2) Note: Panel Pry Removal Tool and Torx Screwdriver are needed for this step.

3) Line up the rear edge of the splitter to the end of the side skirt. The side splitter should extend out approximately 1" from the side of the side skirt.

4) Mark and drill the rear most 3/8" hole and attach the supplied hardware. (Starting with a 1/8" drill bit to create a pilot hole is recommended.) The hardware should be attached as shown in Figure 3.

Figure 2.

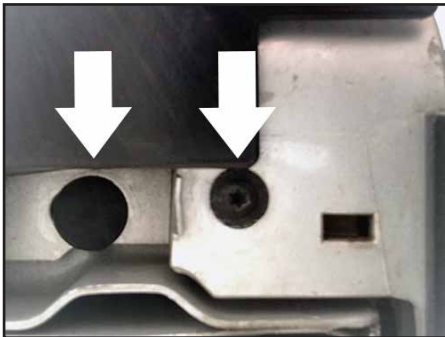

5) Align the splitter parallel with the side skirt and mark center-holes for drilling the remaining mounting holes in the side skirt.

6) Drill and install the remaining hardware onto the splitter and side skirt (refer to mounting holes on the next page).

7) Reinstall plastic clips/screws on side skirt.

8) Repeat steps on the opposite side of vehicle.

9) Installation complete (Figure 4).

Figure 3.

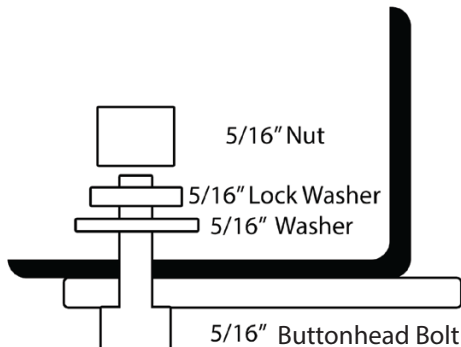


Figure 4.



MOUNTING HOLES

