



Make: Ford


Model: 2016+ Shelby GT350

Applications: Side Splitter

| PACKAGE CONTENTS | | | | TOOLS |
|------------------|----------------------------------|-----|--|---|
| QTY | | QTY | | Flat Head Screwdriver 1/2" Socket/Wrench 3/8" Drill Bit |
| 2 | Side Splitter | | | |
| 12 | 5/16" - 18 x 1" Buttonhead Screw | | | |
| 12 | 5/16" Washer | | | |
| 12 | 5/16" Lock Washer | | | |
| 12 | 5/16" Nut | | | |


INSTALLATION INSTRUCTIONS

Figure 1

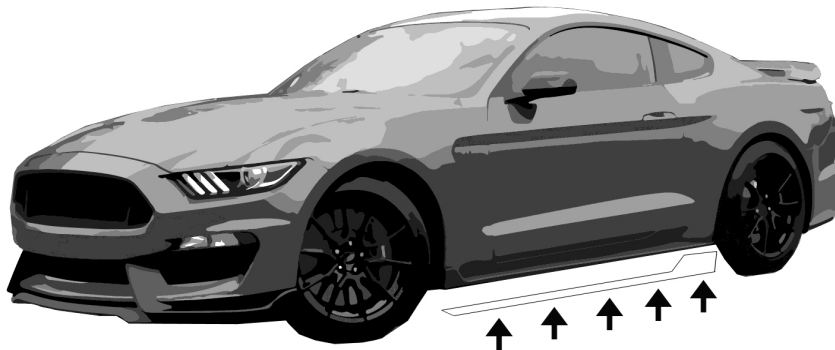

- 1) Lift the vehicle to gain access to the bottom of the side skirt.
- 2) Remove the plastic clips on the bottom of the side skirt so that the side skirt can be pulled down.
- 3) Line up the rear edge of the splitter to the end of the side skirt. The side splitter should extend approximately 1" from the side of the side skirt.
- 4) Drill the rear most 3/8" hole and attach the supplied hardware. The hardware should be attached as shown in Figure 2.
- 5) Align the splitter straight and drill the next 3/8" hole and attach the supplied hardware. Make sure the side splitter is flat against the skirt before drilling.
- 6) Drill and install the remaining hardware so the side splitter is firm on the skirt.
- 7) Reinstall plastic clips on side skirt.

Figure 2:

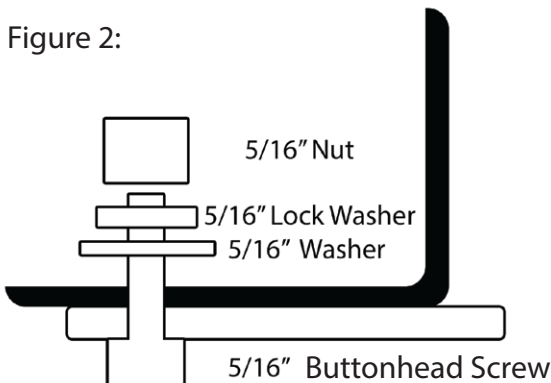

Optional:
Remove side skirts for easier installation.