

Make: Subaru
 Model: 2005-2009 Outback
 Product: Light Conversion

PACKAGE CONTENTS				TOOLS
QTY		QTY		Flat Head Screwdriver Phillips Screwdriver 7/16" Socket or Wrench
2	Light Conversion Bracket	8	1/4" Lock Washer	
8	1/4"- 20 Carriage Bolts			
8	1/4"- 20 Hex Nut			
8	1/4" Flat Washer			

INSTALLATION INSTRUCTIONS

Carefully remove the plastic fasteners to gain access to the area behind the foglight.

1

Carefully pull down the splash guard.

2


Carefully remove (2) plastic rivets from the fog light cover to release the bottom of the fog light.

3

Unplug the foglight by depressing the tab on the connector and carefully sliding the connector off.


4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive, assumes no liability for injury, loss, or incidental or consequential damages in the event of a collision or roll over.

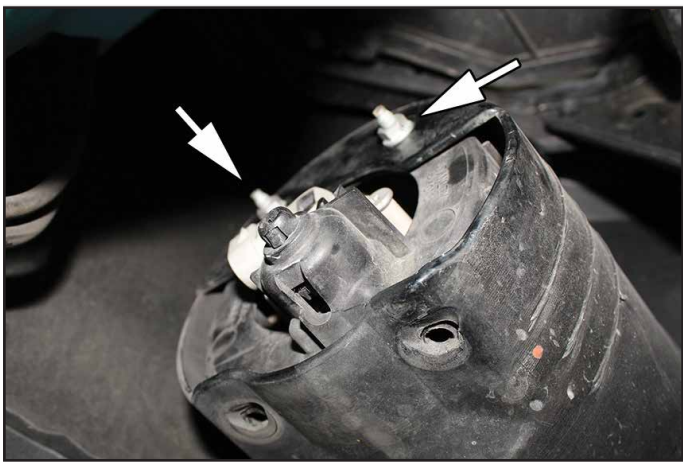

Lastly, remove the (2) nuts holding the top of the foglight in using a 10mm socket wrench.

5

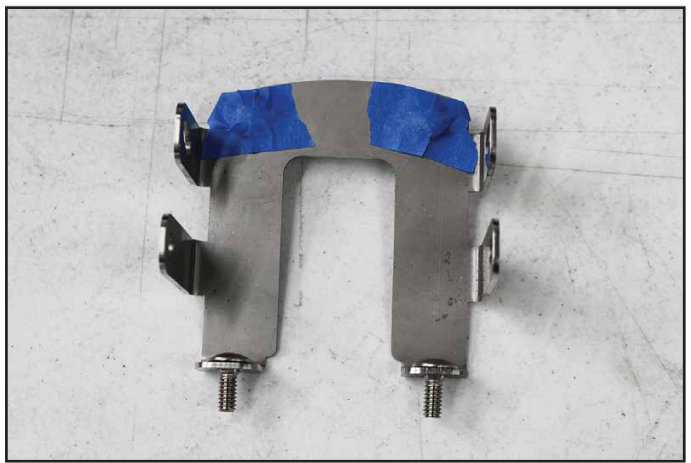


Insert (2) Carriage Bolts into the square holes at the top of the brackets like shown. Ensure the bolts don't fall out by taping the heads to the bracket.

6



Attach the new foglight to the bracket like shown.

7

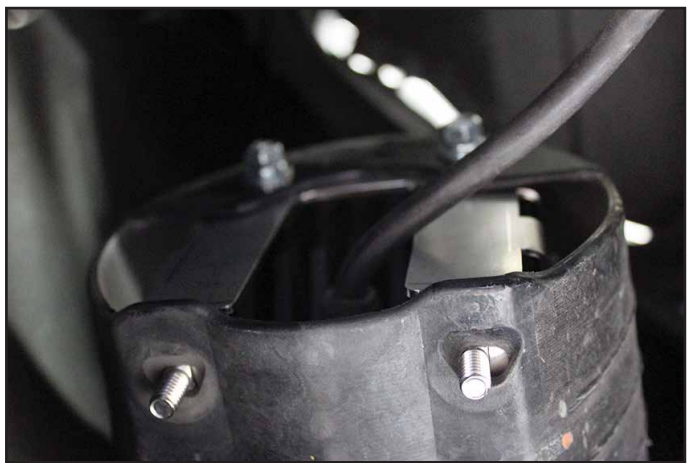

Insert the foglight assembly in the reverse order as the removal of the factory light. It may take a few tries but the top two bolts should slide through the factory holes and then you can fasten them down using (1) 1/4" Flat Washer, (1) Lock Washer and (1) Hex Nut on each bolt.

8



Insert (2) Carriage Bolts in the bottom holes in the fog light bracket through the open space behind the fog light. Fasten them using (1) 1/4" Flat Washer, (1) Lock Washer, and (1) Hex Nut.

9



Completed assembly.

10