

Make: Subaru

Model: 2005-2009 Outback

Application: Rally Light Bar

PACKAGE CONTENTS				TOOLS
QTY		QTY		
1	Rally Light Bar	8	3/8"-16 Nut	Flathead Screwdriver 9/16" Socket or Wrench 7/16" Socket or Wrench Sharp Cutting Tool
1	Mounting Bracket	2	3/8"-16 x 1" Hex Bolt	
2	L-Bracket	2	1/4" x 1" Lag Screw	
2	3/8" Bolt Plate	2	1/4" USS Washer	
4	3/8" - 16 x 2" Hex Bolt			
14	3/8" SAE Flat Washer			
8	3/8" Lock Washer			

INSTALLATION INSTRUCTIONS

Remove the plastic splash guard.
Insert (2) 3/8" Bolt Plates into the slotted holes shown above.

1

Attach Mounting Bracket to the Bolt Plates. Fasten with (1) 3/8" Flat Washer, (1) Lock Washer, and (1) Hex Nut per side. Note the orientation of the Mounting Bracket with the ends pointing forward.

2

Attach the Light Bar to the Mounting Bracket using (2) 3/8" x 2" Hex Bolt, (4) Flat Washers, (2) Lock Washer, and (2) Hex Nut per side.


3

Additional view from Step 3. Note there are also washers on the other side of the bracket.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.

For 08-09 Outback flip L-brackets around, like shown >>

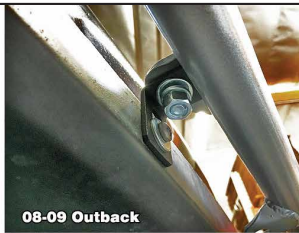

08-09 Outback



05-07 Outback

Install L-bracket as shown, with the slotted side mounted on the bumper. Top hole - use (1) 3/8"-16x1 Hex Bolt, (2) 3/8" Washers, (1) 3/8" Lock Washer, and (1) 3/8"-16 Hex Nut. Slotted hole - Use 1/4" x 1" Lag Screw and 1/4" USS Washer to mount into the bumper.

5



Overall view after light bar has been installed. Tighten all hardware. 08-09 Outback shown.

6



To use splash guard, cut the area around the tape shown to have clearance of the mounting hardware. (2005-2007 2.5i non-turbo shown).

7



Driver Splash Guard (Before)

Driver Splash Guard (After w/ brace installed)



To use splash guard, cut the area around the tape shown to have clearance of the mounting hardware. Repeat trimming on passenger side splash guard. (2008-2009 2.5i PZEV non-turbo shown).

8



Finished install of the light bar. Baja Designs XL-R lights are shown. 05-07 Outback shown.

9



Finished install of the light bar. Baja Designs XL-R lights are shown. 08-09 Outback shown.

10

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.