

Make: Subaru

Model: 2001-2004 Outback
2002-2006 Baja

Application: Fog Light Conversion

PACKAGE CONTENTS				TOOLS	
QTY		QTY		Panel Removal Tool Philips Screwdriver 9/16" Socket/Wrench 7/16" Socket/Wrench 3/16" Hex Key	
2	Fog Light Mounting Bracket	4	1/4" Flat Washer		
2	3/8"-16 x 1" Hex Bolt	2	1/4"-20 Kep Nut		
2	1/4"-20 x 3/4" Hex Bolt	4	#8 x 1/2" Philips Screw		
4	3/8" Flat Washer				
2	3/8" Split Lock Washer				
2	3/8" Hex Nut				

INSTALLATION INSTRUCTIONS

Remove fog light splash guard by unfastening the plastic clip securing it and pulling it downward.

1

10mm-head bolts

Hex nut on the back

Remove the factory fog light by unfastening the factory hardware. There are (2) 10mm-head bolts above the light, that can be accessed from the front of the vehicle and (1) hex nut on the back of the light, accessed from underneath the vehicle.

2

Take the driver side mounting bracket and place it on the mounting surface in the fog light hole. Note the mounting hole locations and align them. Mark the holes located on the sides of the bracket with a pen.

3


Insert 1/4" bolt here

Tighten 1/4" Hex Nut on backside

Set aside the bracket and drill out holes to 7/64". Install new fog light onto the mounting bracket. Insert (1) 1/4"-20 Hex Bolt and (1) 1/4" Flat Washer into the small slot on the bracket. Fasten on the back side with (1) 1/4" Flat Washer and (1) 1/4" Kep Nut.

4


DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.

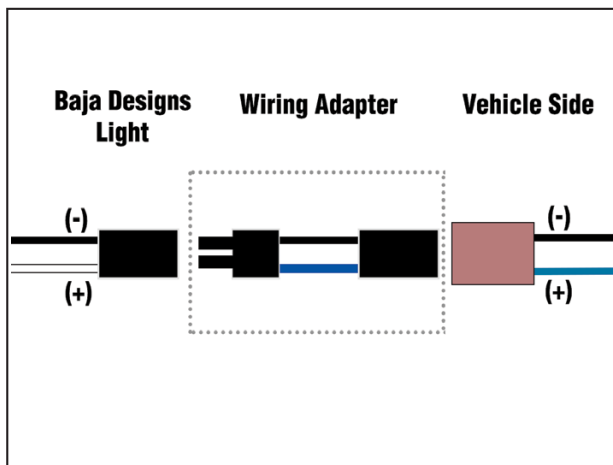

Wiring: Now is a good time to do wiring work to adapt the connection of the new light.


Optional: We chose to snip the old fog light connector and reuse it along with Baja Designs included connector kit to create a new wiring adapter (shown above) to make things plug-n-play.

5

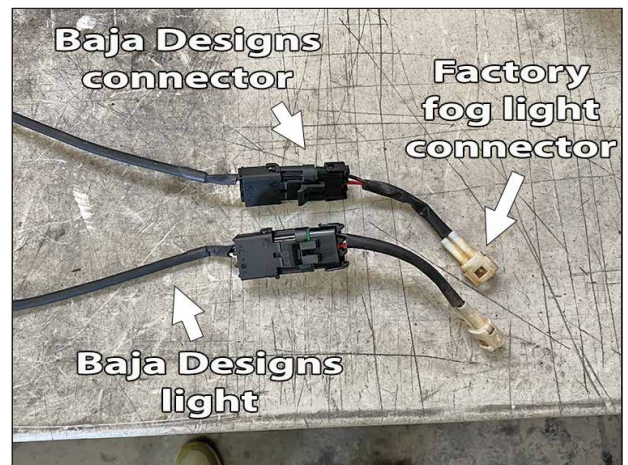

The "new" pair of wiring adapters ready to plug directly into the vehicle harness.

6

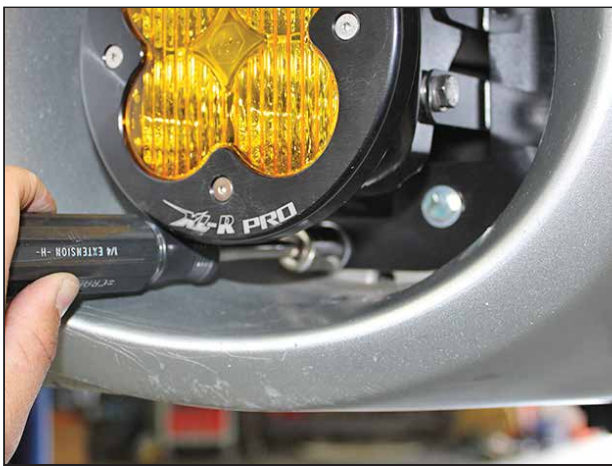

Next, insert (1) 3/8" Hex Head Bolt and (1) 3/8" Flat Washer into the large hole on the bottom of the bracket.

7



Reinstall the splash guard onto the new bolt and fasten with (1) 3/8" Flat Washer, 3/8" Split Lock Washer, and 3/8" Hex Nut.

8



Fasten the #8 screws through the front of the bracket with a Philips screwdriver. Repeat steps on other side.

Completed assembly shown.

9