



Make: Subaru

Model: 2023+ Outback
(Non-Wilderness)

Applications: Light Conversion

PACKAGE CONTENTS				TOOLS	
QTY		QTY			
2	Light Conversion Bracket			Flat Head or Phillips Screwdriver	
1	Wire Harness Adapter Kit			Socket Wrench	
	(Optional)			10mm Socket or Wrench	
				Wire Stripper	
				Wire Crimp	

INSTALLATION INSTRUCTIONS



Remove splash guard.

Note: Removal of front bumper cover is optional, but may be easier for installation of lights.

1



Remove fender plastic rivets to allow access behind the foglights. Unplug the foglight harness and undo the plastic screw and M6 bolt shown above (keep for later).

2



Remove factory foglight from bumper cover.

3



Use lower mounting hole for Squadron lights

Attach new foglight to Light Conversion Bracket like shown above. Repeat on passenger side.


4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.



Attach new foglight assemblies to the bumper cover using the factory hardware (plastic screws and M6 bolts). Tighten screws and bolts. Torque M6 bolt to 11 ft-lbs.

5

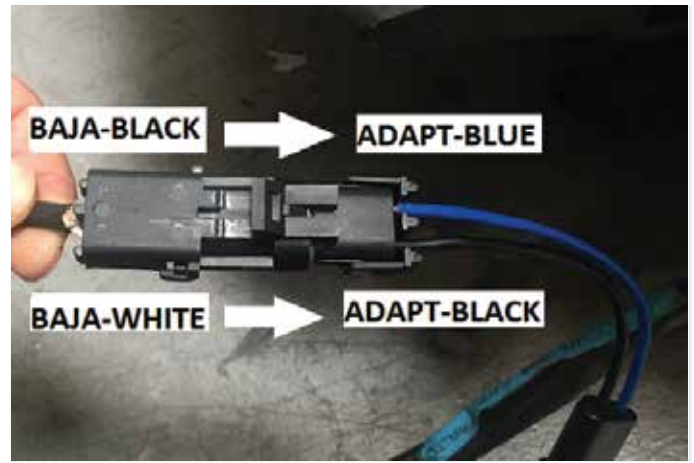

Assembling Wire Adapter (Optional): Note that the provided dual-application adapter requires to reverse the color polarity on this car. Test polarity before assembling wires to the Baja Designs connector. Note that the adapter connects to OEM connector easier on one orientation than the other.

6

Note: Follow the instructions provided by Baja Designs to wire an independent switch.

Troubleshooting: If the light does not come on check the following:

- The connections are not firmly locked. Firmly connect the ends.
- The connection from the adapter to the OEM plug may not be in correct orientation. Rotate the connector.
- The wire polarity on the adapter could be reversed. Disassemble adapter on the Baja Design-Adapter end, and switch the wires.

7



Reinstall fender cover, splash guard, and front bumper cover (if removed) using factory plastic clips.
Pictured: Completed Assembly.

8