

Make: Subaru

Model: 1999-2001 Impreza 2.5RS

Applications: Skid Guard

PACKAGE CONTENTS				TOOLS	
QTY		QTY			
1	Skid Guard	6	3/8" Washer	Ratchet 9/16" Socket 9/16" Wrench 7/16" Wrench	
1	Skid Guard Tube	6	3/8" Lock Washer		
2	5/16"-18 x 1" Hex Bolt	2	3/8" Botl Plate		
2	5/16" Lock Washer				
4	3/8"-16 x 3/4" Hex Bolt				

INSTALLATION INSTRUCTIONS



Attach the fog/driver light base to the light bar with the L tab facing forward.

1




Locate a large and small hole in the frame under the bumper cover. You may need to trim to allow clearance.

2



Insert the bolt plate through the large hole and fish the threaded side through the smaller hole.

3

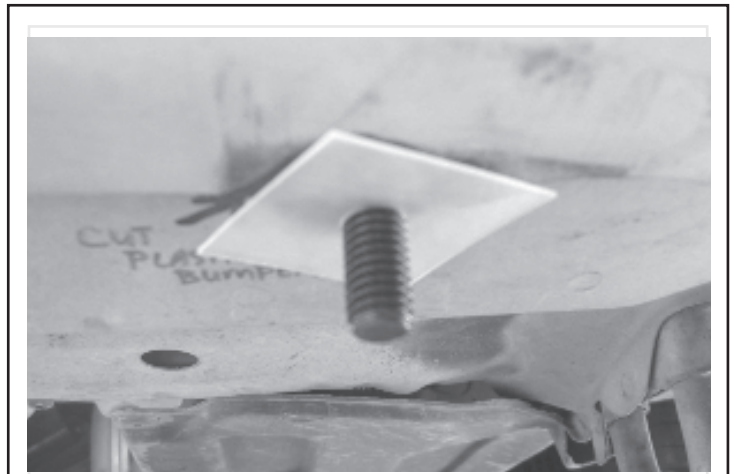


The threaded part of the bolt plate should be sticking through the bottom.

Note: Installation may be easier with retaining washer (Not Supplied)

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.

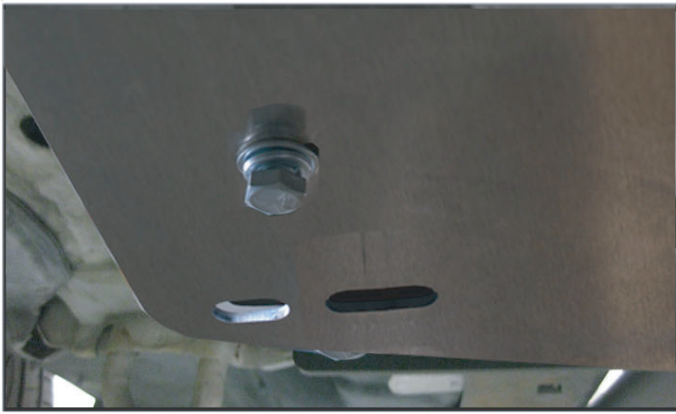

Attach the Skid Guard to the frame using (1) 3/8" washer, (1) 3/8" lock washer, and (1) 3/8" nut per side. Torque 3/8" hardware to 32 ft-lb.

5