

Make: Subaru

Model: 2012-2014 Impreza

Applications: Light Conversion

PACKAGE CONTENTS				TOOLS
QTY		QTY		Flat Head Screwdriver Ratchet 1/2" Socket 1/2" Wrench
2	Light Conversion Bracket	4	1/4" Lock Washer	
4	1/4"-20x1 Hex Bolt	4	1/4"-20 Nut	
8	1/4" Flat Washer			

INSTALLATION INSTRUCTIONS



Take a plastic card or hard card and find the rear-most part of the fog light cover.

1




Carefully pull forward to release the tabs and pull the fog cover towards the front of the vehicle.

2



For Fog cover **without** foglights installed, remove the small cover. Press the circled tab down and push from the rear of the fog cover.

3

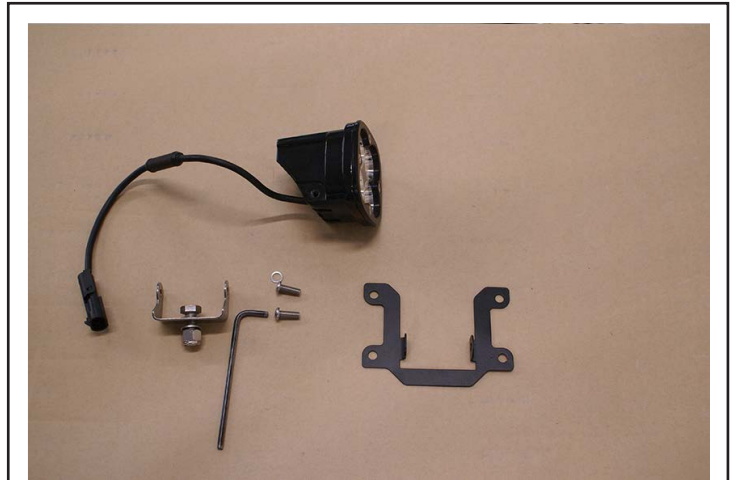

Remove the Baja Designs bracket and replace with Rally Innovations Light Conversion Bracket.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.



Slide the light conversion from the inner-side of the bumper cover.

5



Then slide the outer tabs into the slotted hole on the bumper cover.

6



Attach the hardware to the bottom corner of the bumper cover to the bracket.

Note: It is easier to tighten the screws with the side splash guard pulled down.

7



Install the fog cover back on after inspecting your work.

8

Note: Follow the instructions provided by Baja Designs to wire an independent switch.

For vehicles that come with OEM Fog: Splice the OEM fog harness so that you can attach the Baja Designs plug. Then clip the harness to the Baja Designs lights.

9