

Make: Subaru
 Model: 2013-2019 Outback
 Product: Light Conversion

PACKAGE CONTENTS				TOOLS
QTY		QTY		Flat Head Screwdriver Phillips Screwdriver 7/16" Socket or Wrench
2	Light Conversion Bracket	8	1/4" Lock Washer	
8	1/4"- 20 x 5/8" Carriage Bolt	2	Wiring Adapter Pigtail (optional)	
8	1/4" - 20 Hex Nut			
8	1/4" Flat Washer			

INSTALLATION INSTRUCTIONS

Carefully release (4) plastic rivets from the splash guard to access the fog light area.

1

Carefully pull down plastic splash guard to access the fog light hardware.

2

Carefully remove (1) plastic rivet from the fog light cover. Pull down (2) plastic tabs to release the fog light cover. **For vehicles with OEM fog lights installed:** remove the hardware securing the fog light assembly (2 nuts and 2 plastic rivets), including the connecting plug.

3

Tape the upper screw heads to the bracket to temporarily hold in place during install.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive, assumes no liability for injury, loss, or incidental or consequential damages in the event of a collision or roll over.



Place the upgraded fog assembly into the fog light pocket until the bracket meets the plastic face of the bumper cavity.

5




Install (1) 1/4"-20 x 5/8" carriage bolt, (1) washer, (1) lock washer, and (1) hex nut on (2) bottom mounting points. Install (1) washer, (1) lock washer, and (1) 1/4"-20 hex nut on (2) top mounting points.

6



Double-check installation and re-attach the splash guard with the plastic rivets.

7

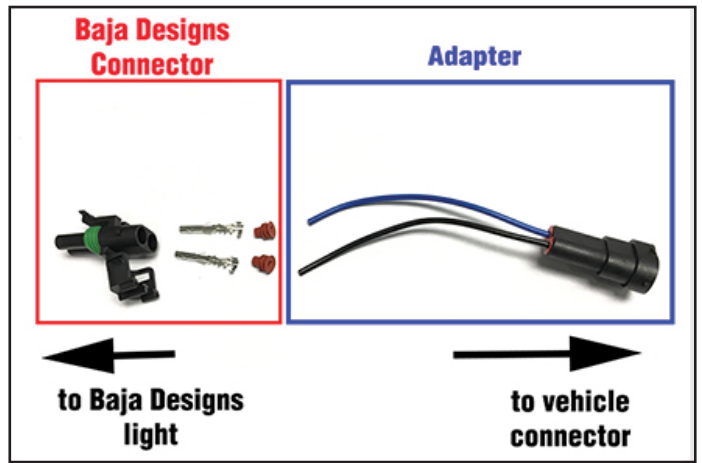

Assembling Wiring Adapter (Optional):

Locate the ground wire on your vehicle foglight connector. Note: It may not be a black colored wire. Assemble the optional Wiring Adapter to the Baja Designs connector in the orientation shown above. Note: The ground wire must route to the Black wire (-) on the Baja Designs light.

8

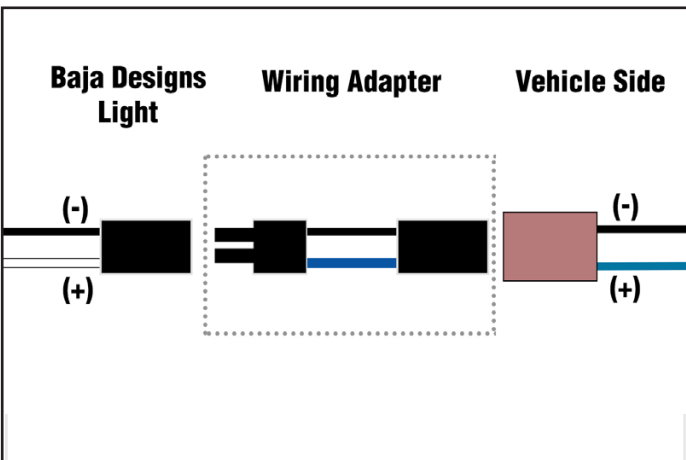


Diagram - Wiring Adapter (Optional):

Sometimes the Wiring Adapter wire color will not match the ground wire color (-) from the vehicle, this is fine as long as the ground mates to the Black wire (-) on the Baja Designs light.

9



Completed pigtail assembly.

Note: The XL-R Pro Lights have a 3-wire plug, but only the white and black wires will be used. The XL-R Sport Lights have a 2-wire plug.

10