


Make: Subaru

Model: 2015-2019 Outback

Applications: Rally Light Bar

PACKAGE CONTENTS				TOOLS
QTY		QTY		
1	Rally Light Bar	2	3/8" - 16 x 1.75" Hex Bolt	Flat Head Screwdriver 1/2" Socket/Wrench 9/16" Socket/Wrench Sharp Cutting Tool
2	Upper Bracket	2	3/8" - 16 x 2.5" Hex Bolt	
1	Lower Brace	4	3/8" - 16 Hex Nut	
6	5/16" Bolt Plate	8	3/8" Flat Washer	
6	5/16" Flat Washer USS	4	3/8" Lock Washer	
6	5/16" Lock Washer	2	3/4" Nylon Spacer	
6	5/16"-18 Hex Nut			

INSTALLATION INSTRUCTIONS

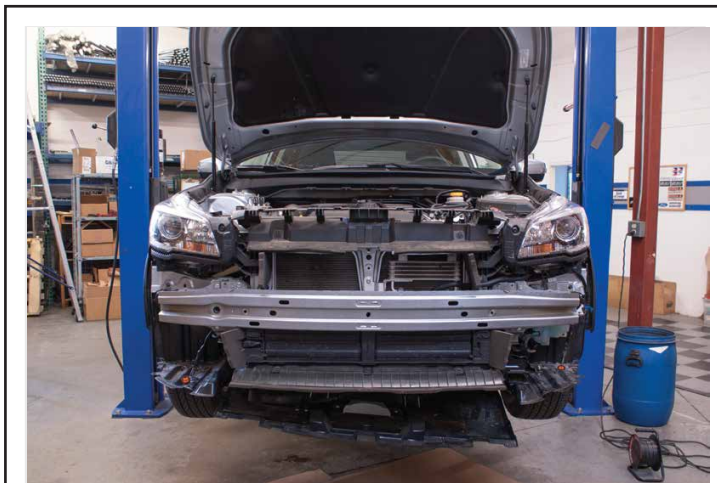

Remove the front bumper cover and the foam piece in front of the bumper beam.

1



Insert (4) 5/16" Bolt Plates into the holes shown. Slide the Bolt Plates towards the center of the vehicle.

2



Attach (2) Upper Brackets to the bumper beam. Fasten with (1) 5/16" Flat Washer, Lock Washer, and Hex Nut on each Bolt Plate.

3



Insert (2) 5/16" Bolt Plates into the outer holes on the lower radiator support. Hold up the brace to verify fitment.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.



Attach the brace with (1) 5/16" Flat Washer and (1) Lock Washer per side.

5



Carefully reattach the bumper cover with the Upper Brackets through the grill as shown.

6



Attach the Light Bar as shown with (1) 3/8" x 1.75" Hex Bolt, (1) Flat Washer, (1) 3/4" Nylon Spacer, (1) Flat Washer, (1) Lock Washer, and (1) Hex Nut per side.

7



Attach the Light Bar to the Lower Brace with (1) 3/8" x 2.5" Hex Bolt, (2) Flat Washers, (1) Lock Washer, and (1) Hex Nut.

8



Cut the splash guard as shown by the tape.

9



Cut the splash guard by following the outer crease until the bar clears.

10

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability what9ver fo rthe installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.