




Make: Subaru

Model: 2018-2020 Crosstrek

Applications: Light Conversion

PACKAGE CONTENTS				TOOLS	
QTY		QTY		Flat Head or Phillips Screwdriver Ratchet 7/16" Socket or Wrench 11mm Socket or Wrench Wire Stripper Wire Crimp	
2	Light Conversion Bracket	4	1/4" Lock Washer		
4	1/4"-20x1 Hex Bolt	4	1/4"-20 Nut		
6	1/4" Flat Washer				
		1	Wire Harness Adapter Kit		

## INSTALLATION INSTRUCTIONS

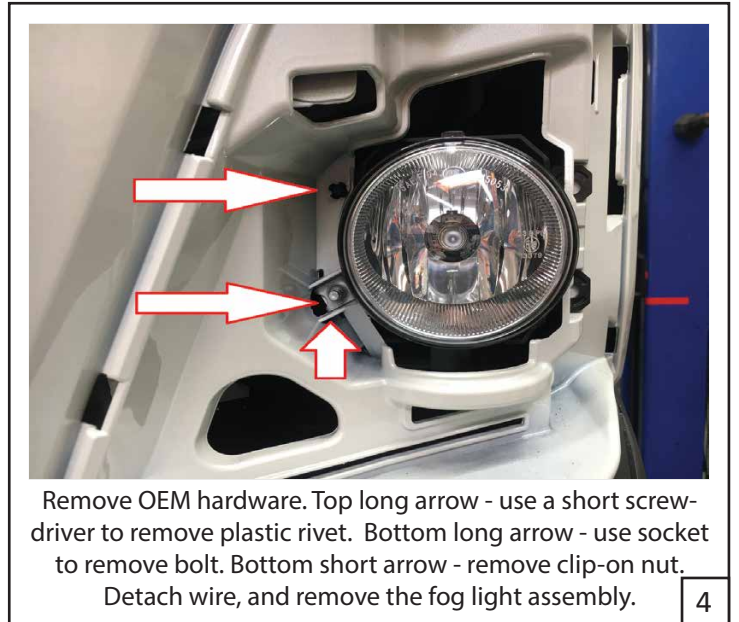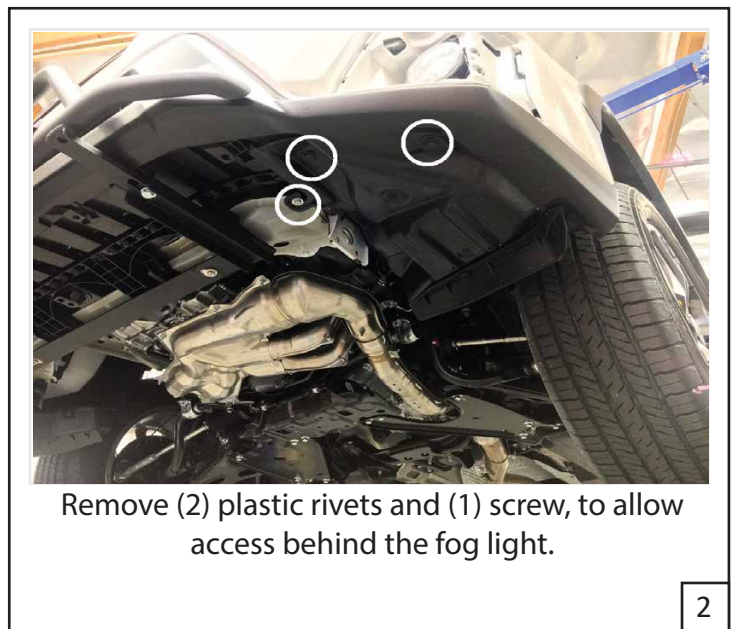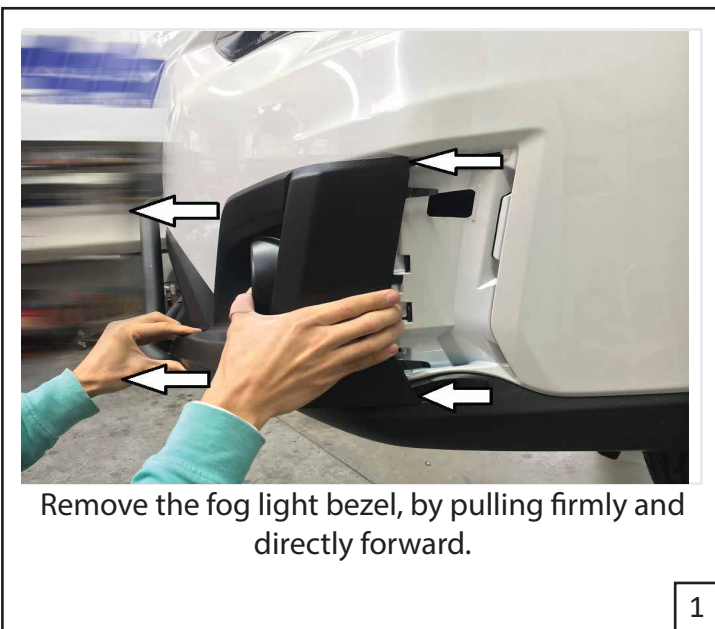


DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.



Slide in the Baja Designs light and Rally Innovations bracket assembly into the (2) slots, shown above.

5

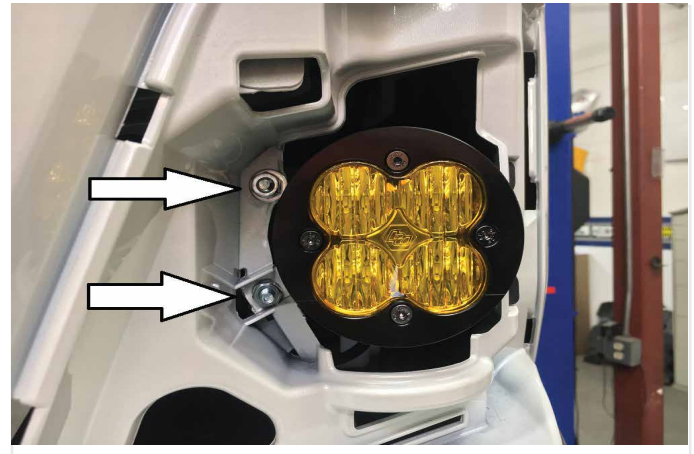


Top arrow - install using (1) 1/4-20 bolt, (2) 1/4 washers, (1) lock washer, and (1) 1/4-20 nut.  
Bottom arrow - install using (1) 1/4-20 bolt, (1) 1/4 washer on rear side only, (1) lock washer, and (1) 1/4-20 nut.

6



Tighten all hardware and reinstall fog light bezel.

7

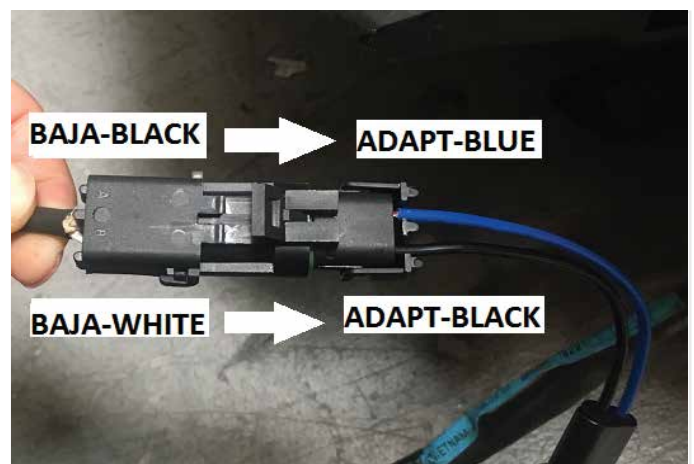

**Assembling Wire Adapter:** Note that the provided dual-application adapter requires to reverse the color polarity on this car. Simply switch wire when assembling wires to the Baja Designs connector. Note that the adapter connects to OEM connector easier on one orientation than the other.

8

**Note:** Follow the instructions provided by Baja Designs to wire an independent switch.

**Troubleshooting:** If the light does not come on check the following:

- The connections are not firmly locked. Firmly connect the ends.
- The connection from the adapter to the OEM plug may not be in correct orientation. Rotate the connector.
- The wire polarity on the adapter could be reversed. Disassemble adapter on the Baja Design-Adapter end, and switch the wires.

9