



PACKAGE CONTENTS					TOOLS	
QTY		QTY		QTY		
2	Light Conversion Brackets (L & R)					7/16" Socket/Wrench 10mm Socket/Wrench 5/32" Hex Key Panel Removal Tool
4	1/4"-20 x 3/4" Hex Bolt					
4	1/4" SAE Flat Washer					
4	1/4" Split Lock Washer					
1	Wiring Adapter Kit					

INSTALLATION INSTRUCTIONS

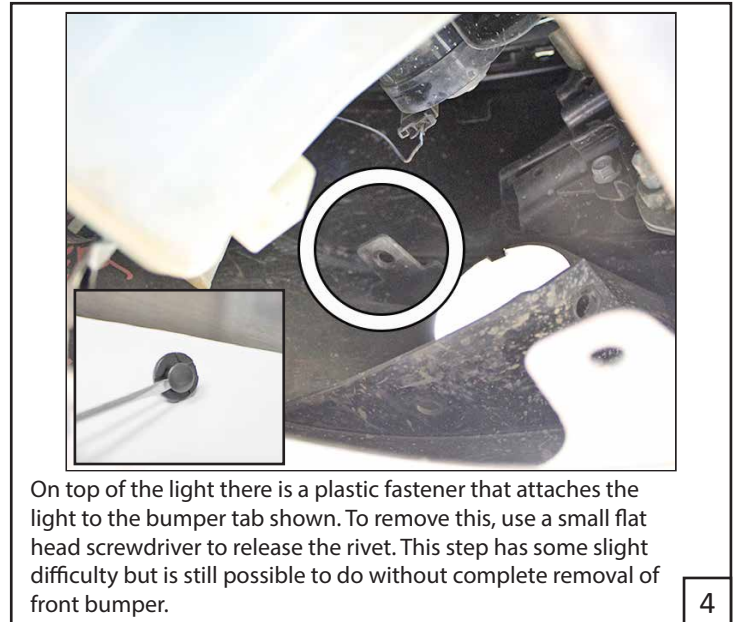


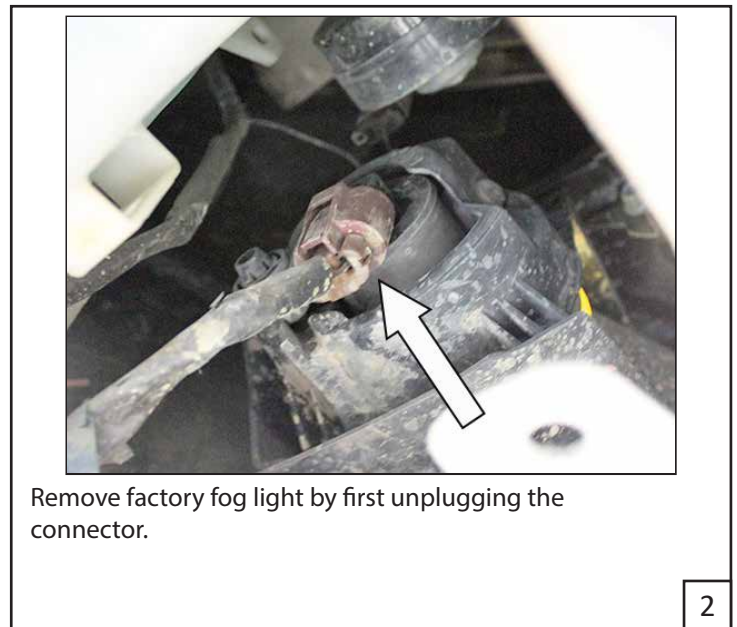

Driver side shown

Assemble the new lights into the conversion brackets like shown. Arrow indicates mounting points for lights. Assemble the passenger side mirrored from the driver side.


5

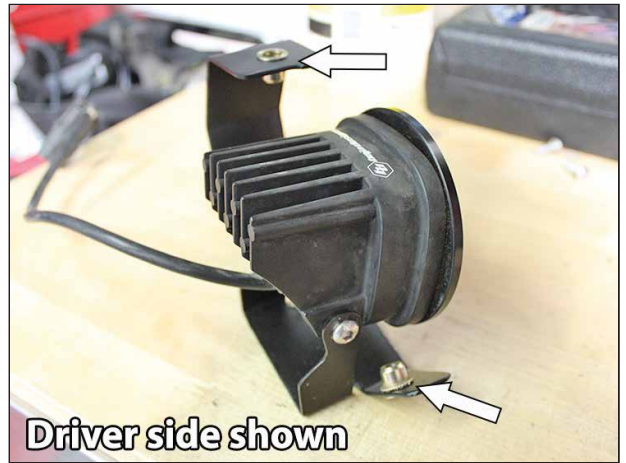

Driver side shown

The mounting points onto the bumper are shown above. (Driver side shown).

6

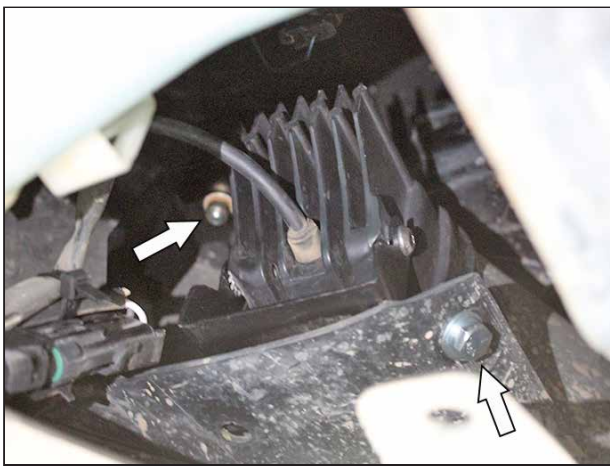

Light assembly installed in the bumper using (1) 1/4"-20 x 3/4" Hex Bolt, (1) 1/4" Split Lock Washer and (1) 1/4" SAE Flat Washer into each mounting point (shown by arrows).


7



Completed assembly shown.


(Repeat steps on the passenger side.)

8

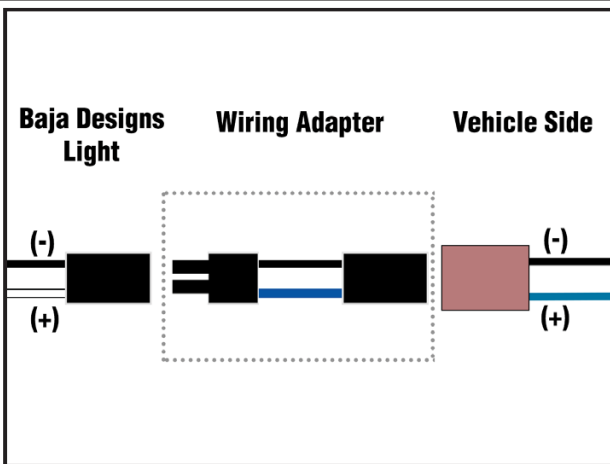

Installing Pigtail Adapter (Optional): Note the orientation of the optional pigtail adapter.

9

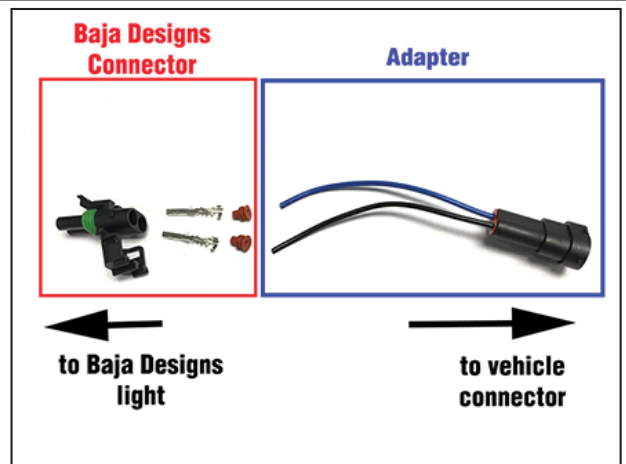

Assemble the Baja Designs light connector onto the optional pigtail adapter in the order shown above. Remember to note the polarity shown in the previous step before proceeding, you only get one shot installing the connector.

10