

Make: Subaru

Model: 2009-2013 Forester

Application: Fog Light Conversion

PACKAGE CONTENTS		TOOLS	
QTY		QTY	
2	Fog Light Bezel		Panel Removal Tool
2	Fog Light Mounting Bracket		Flat Head Screwdriver
6	1/4"-20 x 3/4" Carriage Bolt		7/16" Socket/Wrench
6	1/4" Flat Washer		10mm Socket/Wrench
6	1/4" Kep Nut		5/32" Hex Key
			Wire Cutter/Crimping Tool

INSTALLATION INSTRUCTIONS

Remove the fog light splash guard by unfastening the plastic clips holding it in place using a panel removal tool.

1

Remove factory fog light, if present. If vehicle did not come with fog lights, remove cap on bumper to access fog light hole. To do this, pry carefully with panel removal tool while pushing from behind with your other hand.

2

Assemble new fog light into mounting bracket. First, slip on the fog light bezel onto fog light housing, then attach fog light to the mounting bracket via included screws. Fasten screws using 5/32" hex key.

3

Insert the fog light assembly into the fog light hole in the front bumper. Align the top two carriage bolts with the holes in the bumper.


4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.




Fasten the carriage bolts with (1) Flat Washer and (1) Kep Nut on the threaded end of each bolt.

5

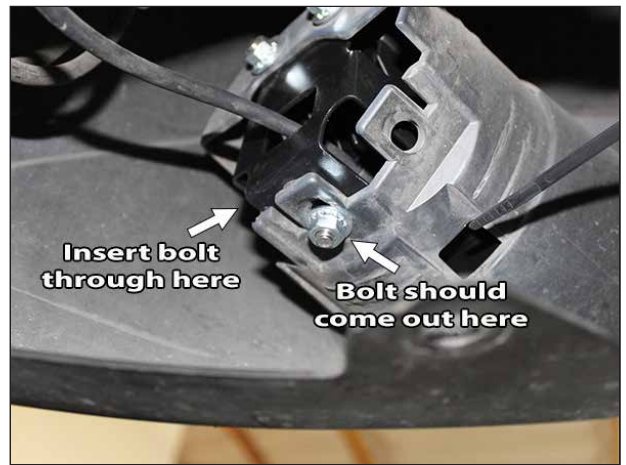

Insert the last carriage bolt through the opening on the side of the mounting bracket and down into the slot. Fasten using (1) Flat Washer and (1) Kep Nut on the threaded end. Tighten all hardware.


6

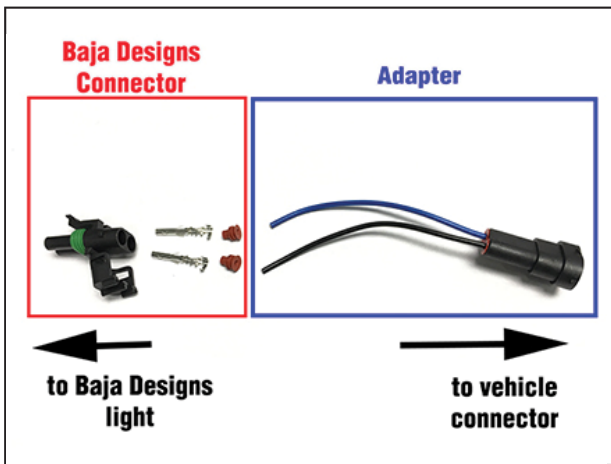

Wiring adapter (optional) - Orientation

Connect the included Baja Designs connector to the wiring adapter pigtail in the orientation shown above.

7

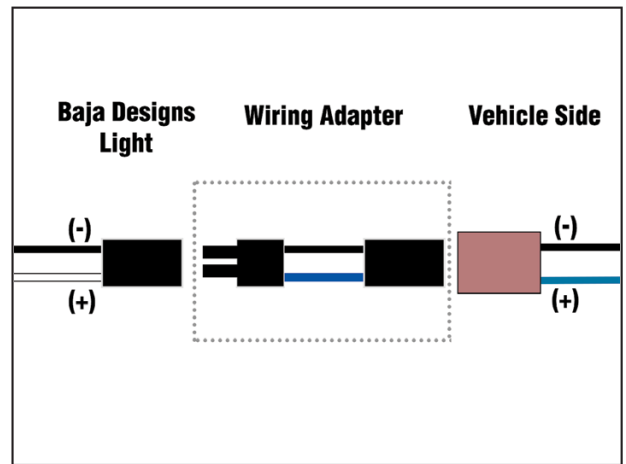

Wiring adapter (optional) - Wiring Diagram

The black wire coming from the light connects to the ground wire (-) on the vehicle harness. You may need to verify which wire is ground on the vehicle side (using a multimeter) as the wire color may not always be black.

8



Repeat all steps for installation of the passenger side fog light.

9



Completed assembly shown.

10