

Make: Subaru

Model: 2014-2018 Forester

Applications: Light Conversion

PACKAGE CONTENTS				TOOLS	
QTY		QTY			
2	Light Conversion Bracket	4	1/4"-20 x 3/4" Hex Bolt	Flat Head or Phillips Screwdriver Socket Wrench 7/16 & 10mm Socket or Wrench Wire Stripper Wire Crimp	
1	Wire Harness Adapter Kit (Optional)	8	1/4" SAE Flat Washer		
		4	1/4" Lock Washer		
		4	1/4"-20 Hex Nut		

## INSTALLATION INSTRUCTIONS



Remove splash guard underneath foglight on driver and passenger sides to gain access to foglight area. (Save factory hardware and clips for later).

1



Remove the factory foglight and the metal j-clip shown above. Repeat on the passenger side.

2



Attach the new foglight in the Light Conversion Bracket like shown above. Repeat on the passenger side.

3



Attach new foglight assemblies to the bumper like shown above using the included 1/4"-20 hardware.


4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.



Note hardware orientation above.  
 (Assembly order: bolt, flat washer, flat washer, lock washer, nut)

5

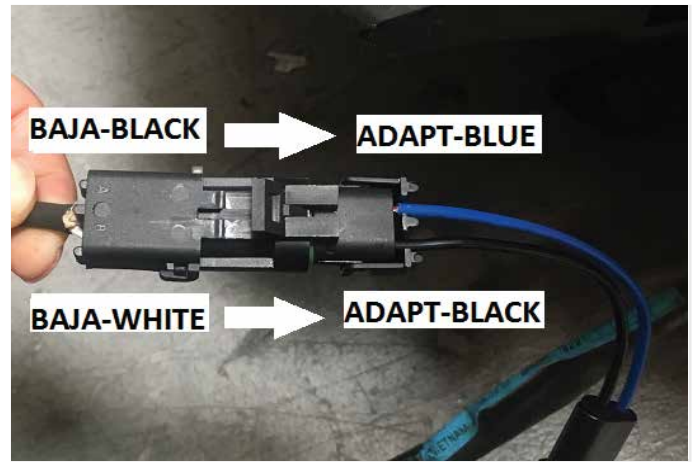

**Assembling Wire Adapter (Optional):** Note that the provided dual-application adapter requires to reverse the color polarity on this car. Test polarity before assembling wires to the Baja Designs connector. Note that the adapter connects to OEM connector easier on one orientation than the other.

6

**Note:** Follow the instructions provided by Baja Designs to wire an independent switch.

**Troubleshooting:** If the light does not come on check the following:

- The connections are not firmly locked. Firmly connect the ends.
- The connection from the adapter to the OEM plug may not be in correct orientation. Rotate the connector.
- The wire polarity on the adapter could be reversed. Disassemble adapter on the Baja Design-Adapter end, and switch the wires.

7



Reinstall splash guard, and front bumper cover (if removed) using factory plastic clips.  
*Pictured: Completed Assembly.*

8