

Make: Subaru

Model: 2014-2018 Forester

Application: Rally Light Bar


PACKAGE CONTENTS				TOOLS
QTY		QTY		
1	Rally Light Bar	2	3/8"-16 x 1.75" Hex Bolt	Flathead Screwdriver Philips Screwdriver Cutting Tool Sander/Grinder 10mm Wrench and Socket 9/16" Wrench and Socket
1	Lower Mounting Brace	6	3/8"-16 Hex Nut	
1	Upper Mounting Brace	6	3/8" Lock Washer	
2	3/8" Bolt Plate	10 (14)	3/8" Flat Washer	
2	3/4" Nylon Spacer			
2	3/8"-16 x 2.50" Hex Bolt			

## INSTALLATION INSTRUCTIONS




Remove the front splash guard.  
XT splash guard shown.

1




Insert (2) 3/8" Bolt Plates through the slots shown.

2



Remove the plastic clip covering the hose in front of the engine. Reattach after inserting Lower Mounting Brace.

3



Insert Lower Mounting Brace with the C-channels pointed up; slide up and over the car's frame. Enter through the passenger side. Attach to Bolt Plates with (1) 3/8" Flat Washer, (1) Lock Washer, and (1) Hex Nut per side.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.




Open the hood and remove the air deflector. Loosen the front bumper cover to access the headlight mounts.

5



Remove the (4) indicated screws and the grill entirely.

6

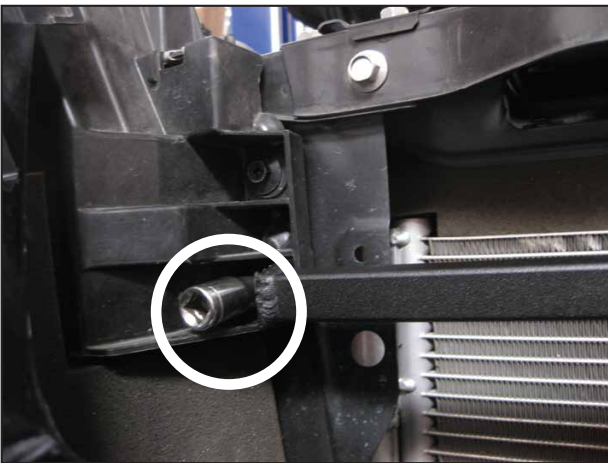

Remove the lower bolt attached to the headlight housing shown. Attach Upper Mounting Brace with the same bolt.

7



**Non-XT:**  
Cut the front bumper cover as shown.

8



Attach Light Bar to Upper Brace with (1) 3/8" x 1.75" Hex Bolt, (1) Nylon Spacer, (2) Flat Washers, (1) Lock Washer, and (1) Hex Nut per side.

9



Attach Light Bar to Lower Brace with (1) 3/8" x 2.50" Hex Bolt, (2) Flat Washers, (1) Lock Washer, and (1) Hex Nut per side.

10



Trim along the edge of the tab as shown.

11



**Non-XT:**  
Trim the splash guard as shown.

12



**XT:**  
File the metal skid plate accordingly. Tolerances, fit,  
and finish may vary.

13



Completed assembly shown.

14