



Make: Subaru  
 Model: 2015+ Impreza WRX/STI  
 Product: Light Conversion

PACKAGE CONTENTS				TOOLS	
QTY		QTY			
2	Light Conversion Bracket	4	1/4" Lock Washer	Flat Head Screwdriver Phillips Screwdriver 7/16" Socket or Wrench 5/32" Hex Key	
4	1/4"- 20 x 1" Hex Bolt	4	1/4" - 20 Hex Nut		
8	1/4" Flat Washer				

## INSTALLATION INSTRUCTIONS



Carefully pull forward to release the tabs and pull the fog cover towards the front of the vehicle.

1



The tabs are placed around the outer perimeter of the fog bezel. It is recommended to pull from the middle rib of the fog cover.

2



For vehicles **without** foglights installed, cut the bezel to create a circular hole for the fog lights to shine through. Alternatively, source OEM fog covers with the opening.

3



Remove (2) Pop-clips under each side splash shield. This allows you to reach behind the fog light to remove/install the screws.


4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive, assumes no liability for injury, loss, or incidental or consequential damages in the event of a collision or roll over.



Remove the OEM Fog assembly with a screw driver. The two screws are positioned on the outer edge of the fog light.

5

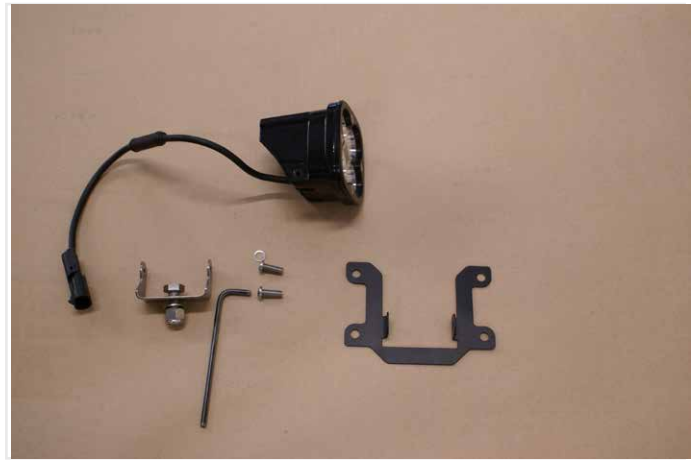

Replace the Baja Squadron bracket with the provided conversion bracket.

6



Install the Fog Light into the bumper. Install the inner tabs first, then attach the 1/4" hardware.  
**Note:** It is easier to tighten the screws with the side splash guard pulled down.

7



Double-check installation and re-attach fog covers.

8

**Note:** Follow the instructions provided by Baja Designs to wire an independent switch.

**For vehicles that come with OEM Fog:** Splice the OEM fog harness so that you can attach the Baja Designs plug. Then clip the harness to the Baja Designs lights.

**If Optional Wire Harness Was Purchased:** Attach the plugs with the corresponding harness. Make sure the ground (black) wire is connected correctly with the following black wire. Attach the colored wire to the positive wires (as shown in the image)

9



10