



Make: Subaru

Model: 2015+ WRX/STI

Application: Rally Light Bar

PACKAGE CONTENTS				TOOLS	
QTY		QTY		QTY	
1	Rally Light Bar	8	3/8"-16 Hex Nut		7/16" Wrench or Socket
1	Lower Brace	14	3/8" Flat Washer		9/16" Wrench or Socket
1	License Bracket	6	3/8" Lock Washer		12mm Socket
2	3/8" Bolt Plate	2	1/4" Lag Screw		Screwdriver
4	3/8"-16 x 1" Hex Bolt	2	1/4" Flat Washer		Cutting Tool
2	3/8"-16 x 1.75" Hex Bolt				

INSTALLATION INSTRUCTIONS



Optional: Attach (1) light bracket to the light bar using (1) 3/8"-16 x 1.75" Hex Bolt, (2) 3/8" Flat Washer, and (1) 3/8" Hex Nut per side.
(PIAA light bracket shown)

1




Remove the splash guard and locate the two indicated slots on the frame. Insert (1) 3/8" Bolt Plate in each slot.
WRX Shown

2



WRX: Slide the lower brace on by inserting it from the passenger side, then rotating it to clear the frame, engine, and turbo.
Tip: You may want to lower the chassis brace shown above to ease install of the lower brace. Be sure to reinstall it once the lower brace is installed.

3

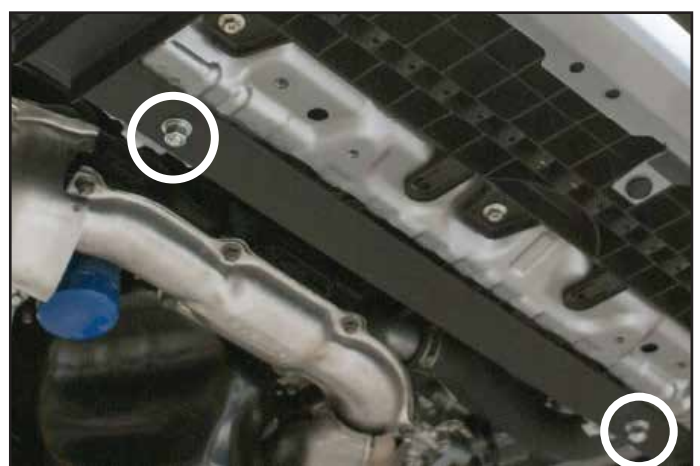

Attach the lower brace to the bolt plates using (1) 3/8" Flat Washer, (1) 3/8" Lock Washer, and (1) 3/8" Hex Nut on each side.
STI Shown

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.



Attach the License Bracket to the bumper via the license plate holes using (2) 1/4" Lag Screws and (2) 1/4" Flat Washers.

5



Attach the light bar to the upper bracket using (1) 3/8" x 1" Hex Bolt, (2) 3/8" Flat Washers, and (1) 3/8" Hex Nut on each side.

6



Attach the light bar to the lower brace using (1) 3/8" x 1" Hex Bolt, (1) Lock Washer, and (1) Flat Washer on each side.

7



Check fitment, tighten all hardware, and re-attach splash guard. See below for cutting instructions.

8



For WRX: Cut the splash guard as shown above.

9



For STI: Cut the splash guard as shown above.

Reattach splash guard. Installation Complete.

10