

Make: Subaru

Model: 2015-2017 Subaru WRX/STI

Application: Ultimate Light Bar

PACKAGE CONTENTS				TOOLS	
QTY		QTY			
1	Ultimate Light Bar	2	1/4" Flat Washer	Rivnut Tool (Included)	
1	Skid Guard	2	3/8" Bolt Plate	Flathead Screwdriver	
1	Lower Mounting Brace	2	3/8"-16 x .75" Hex Bolt	7/16" Wrench or Socket	
2	Upper Mounting Brackets	2	3/8"-16 x 1" Hex Bolt	9/16" Wrench or Socket	
2	Upper Mounting Tubes	2	3/8"-16 x 2" Hex Bolt	10mm Socket	
1	Rivnut Tool	6	3/8"-16 Hex Nut	12mm Socket	
2	1/4" Rivnut	8	3/8" Lock Washer	13mm Socket	
2	1/4"-20 x 3/4" Hex Bolt	14	3/8" Washer	Cutting Tool	
2	1/4" Lock Washer	2	M8 x 25 Flanged Hex Bolt		

INSTALLATION INSTRUCTIONS



Remove front bumper cover and splash guard.

1



Remove the upper bumper beam by removing indicated bolts.

2



Remove the top plastic piece and intake snorkel.


3



Attach (2) Rivnuts to each of the metal tabs on the upper radiator support. Use a 9/16" Wrench to hold the nut while tightening with a 7/16" Wrench or Socket.

4

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.

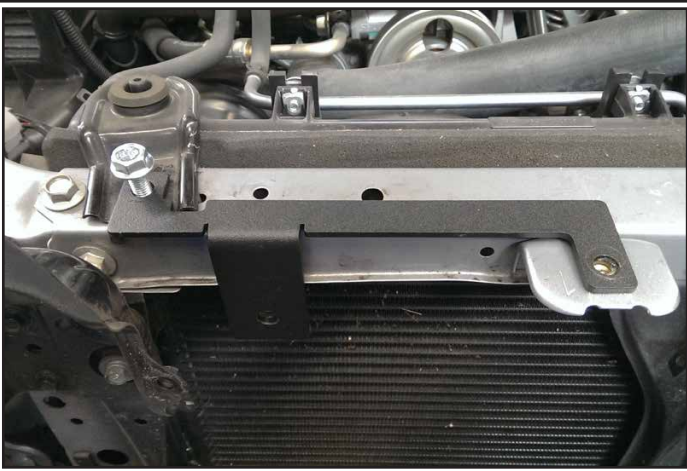

Remove (2) M8 bolts from upper radiator brackets. Attach Upper Mounting Brackets and fasten with provided (2) M8 x 25 Flanged Hex Bolts.

5



Thread Upper Mounting Tubes to Upper Brackets with (1) 3/8" Flat Washer in between.

6



Reinstall upper plastic piece, intake snorkel, and upper bumper beam. Fasten upper brackets with (2) 1/4" Hex Bolts, Lock Washers, and Flat Washers.

7



Reattach front bumper cover. Ensure that the Upper Mounting Tubes protrude through the second gap in the grill as shown.

8



Slip (2) 3/8" Bolt Plates into the slots shown underneath the car.

9



For WRX: Swing the Lower Mounting Brace over the metal plate. Take care not to damage any engine components above.

10



Fasten the Lower Mounting Brace to the Bolt Plates using (2) 3/8" Hex Nuts, Lock Washers, and Flat Washers. Cut and reattach splash guard. See below for cutting instructions

11



Slide the Skid Guard between the brace and bumper cover. Fasten with (1) 3/8" x 1" Hex Bolt, (2) Flat Washers, (1) Lock Washer, and (1) Hex Nut per side.

12



Attach Ultimate Light Bar to the Upper Tubes and fasten with (1) 3/8" x 2" Hex Bolt, (2) Flat Washers, (1) Lock Washer, and (1) Hex Nut per side.


Note: May need to apply pressure to Tubes to fit.

13



Fasten Ultimate Light Bar to Skid Guard with (2) 3/8" x .75" Hex Bolts, (2) Lock Washers, and (2) Flat Washers.

14

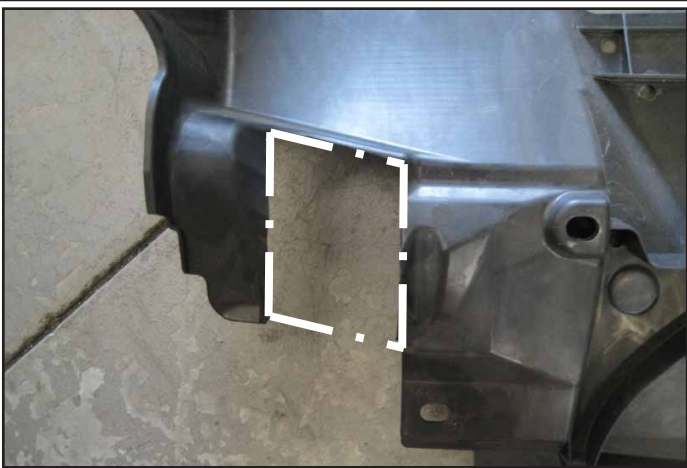

For WRX: Cut the splash guard as shown and reattach prior to/above Skid Guard.

15



For STI: Cut the splash guard as shown and reattach prior to/above Skid Guard.

16