


PACKAGE CONTENTS		TOOLS	
QTY		QTY	
2	Light Conversion Bracket		10MM SOCKET/WRENCH
2	Light Conversion Adapter Pigtail (optional)		1/4" SOCKET/WRENCH
			FLATHEAD SCREWDRIVER
			PANEL REMOVAL TOOL
			WIRE CRIMPS

INSTALLATION INSTRUCTIONS




Remove the necessary clips from the foglight splash guard, which is located in front of each front wheel and below the front bumper. This will allow access to the foglight area.

1



Pull down the foglight splash guard to gain access to the foglight area.

2



Remove the plastic screw clip with a flathead screwdriver. Then, remove the 10mm flangehead bolt with a 10mm socket. This will free up the foglight and it should slip out. Don't forget to unplug the light from its harness.

3



Here is what you should have removed in the previous step. Retain the hardware for install of the new light assembly.

4



Assemble Baja Designs light and light conversion bracket using the included small screws in the Baja Designs light package. Mount the light to the top holes on the bracket like shown in the picture.


5



Here is the foglight ready to install in the vehicle.


Note: the face of the foglight should be parallel with the face of the mounting bracket.

6

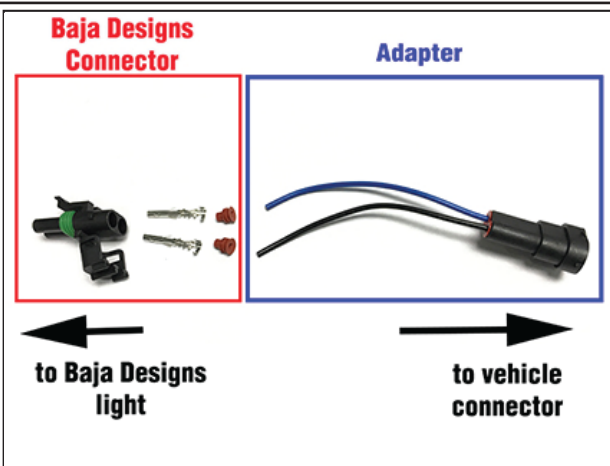

Wiring adapter (optional) - Orientation
Connect the included Baja Designs connector to the wiring adapter pigtail in the orientation shown above.

7

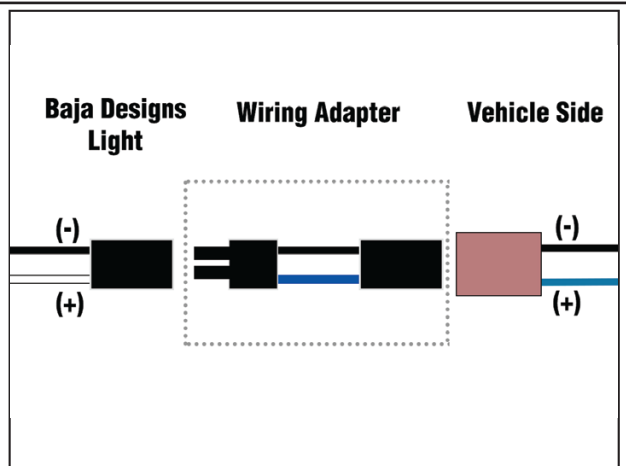

Wiring adapter (optional) - Wiring Diagram
The black wire coming from the light connects to the ground wire (-) on the vehicle harness. You may need to verify which wire is ground on the vehicle side (using a multimeter) as the wire color may not always be black.

8



Install the new light assembly into the vehicle in the reverse order of removing the factory foglight. Reuse the factory hardware. Plug in the wiring adapter harness (if you have it) into the light and then into the vehicle harness. Fasten the harness to a secure location.

9



Repeat previous steps on the opposite foglight assembly. Once complete check to see that both lights turn on and then return the foglight splash guards and clips to their place.

Install complete.

10

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.