

Make: Subaru

Model: 2017-2020 BRZ

Application: Fog Light Conversion

PACKAGE CONTENTS		TOOLS	
QTY		QTY	
2	Fog Light Mounting Bracket		Panel Removal Tool Philips Screwdriver 5/32" Hex Key
1	Fog Light Adapter Kit (optional)		
6	1/4"-20 x 3/4" Carriage Bolt		
6	1/4" Flat Washer		
6	1/4"-20 Kep Nut		

INSTALLATION INSTRUCTIONS

Remove fog light splash guard by unfastening the plastic clips securing it to the front bumper.

1

Remove factory fog light by undoing the (3) fasteners on the backside of the light (behind front bumper). One of the fasteners is a plastic clip that can be removed using a panel removal tool, while the two others are removed using a philips screwdriver. Retain hardware for reinstallation later.

2

Use upper mounting hole for S2 lights


Install new fog light into mounting bracket. Use the top mounting hole for this application.

3

Install light assembly into the fog light area from behind the front bumper. Fasten the assembly to the front bumper using the original hardware removed in step 2.

4


DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.

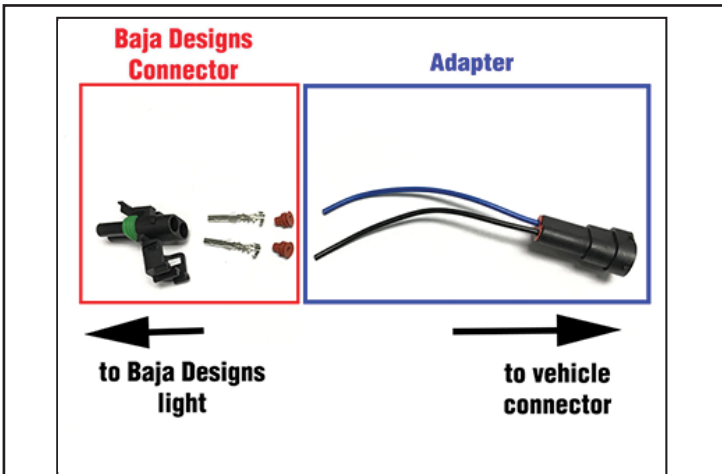

Wiring adapter (optional) - Orientation

Connect the included Baja Designs connector to the wiring adapter pigtail in the orientation shown above.

5

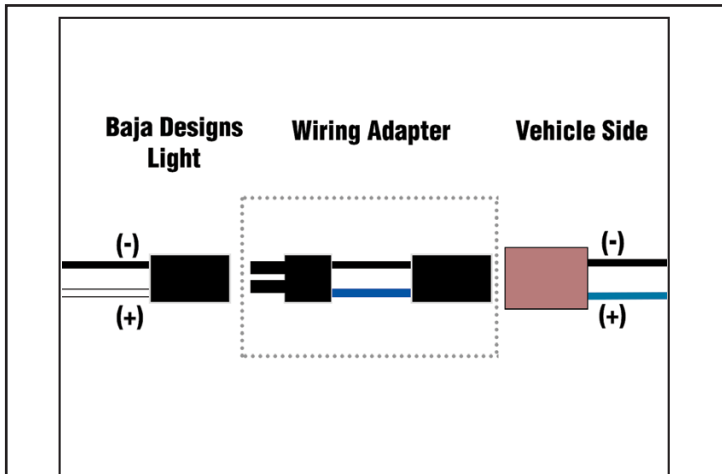

Wiring adapter (optional) - Wiring Diagram

The black wire coming from the light connects to the ground wire (-) on the vehicle harness. You may need to verify which wire is ground on the vehicle side (using a multimeter) as the wire color may not always be black.

6



Reinstall the fog light splash guard and repeat all steps for the installation of the passenger side fog light.

7



Completed assembly shown.

8