


Make: Subaru

Model: 2022+ BRZ


Application: Side Splitter

PACKAGE CONTENTS			TOOLS
QTY		QTY	7/16" Socket or Wrench
2	Side Splitter - (Left & Right Sides)		5/32" Hex Key
14	1/4"-20 x 1" Socket Buttonhead Bolt		Panel Removal Tool
14	1/4" Flat Washer		1/4" Drill Bit
14	1/4" Split Lock Washer		_,
14	1/4"-20 Hex Nut		

INSTALLATION INSTRUCTIONS

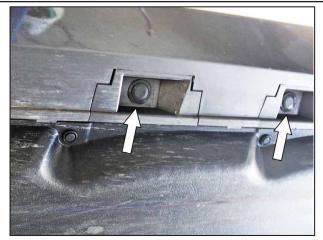


Remove the plastic fasteners along the underside of the rocker panel using a panel removal tool or flat head screwdriver.

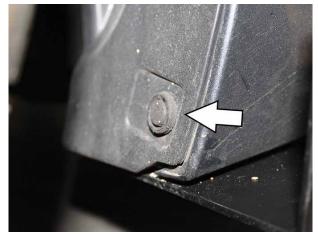

Remove the plastic fastener located directly behind the front wheel in the wheel well.

2

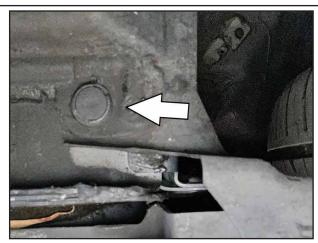

Staying behind the front wheel, there is another plastic fastener directly under the rocker panel - remove this as well.



Moving to the rear of the vehicle, remove the plastic fastener directly in front of the rear wheel in the wheel well. Removing all these fasteners aid in gaining access behind the rocker panel to install the hardware later.

3

1

DISCLAIMER FOR RALLY INNOVATIONS PRODUCTS: Buyers assume all risk and liability whatsoever for the installation and the use of Rally Innovations products. Rally Innovations products are sold as decorative accessories and should not be relied upon as protection for the vehicle or occupants in the event of a collision or roll over. Vehicles equipped with a supplemental restraint system (air bag) deployed by impact should not be modified by any aftermarket Light Bar or Skid Guard without first consulting the vehicle manufacturer. Rally Innovations, a subsidiary of Pentech Automotive assumes no liability for injury, loss, incidental or consequential damages in the event of a collision or roll over.



Hold the splitter up against the body and line up the large holes with the holes where the plastic fasteners came from. Also, align the rear cutouts with their respective edges toward the rear of the rocker panel.



Mark and drill out the mounting holes along the underside of the rocker panel using the splitter as a template.



Fasten the splitter to the rocker panel via (1) 1/4"-20 Socket Buttonhead Bolt, (1) 1/4" USS Flat Washer, (1) 1/4" Split Lock Washer, and (1) 1/4"-20 Hex Nut.



There are 7 bolts per side.



Completed assembly shown.

9

7

6