


RAINBLOCKER KIT

The Rain cover secures your HeroCamper against rain when you use the kitchen facilities in bad weather conditions. It is recommended that you, after use, always ensure that the rain cover is cleaned and dry before it is placed in the rabbet to protect the rain cover as best as possible for future use. Please inspect and wipe off the rain cover after heavy rainfall at regular intervals.

<u>C O M P O N E N T S</u>

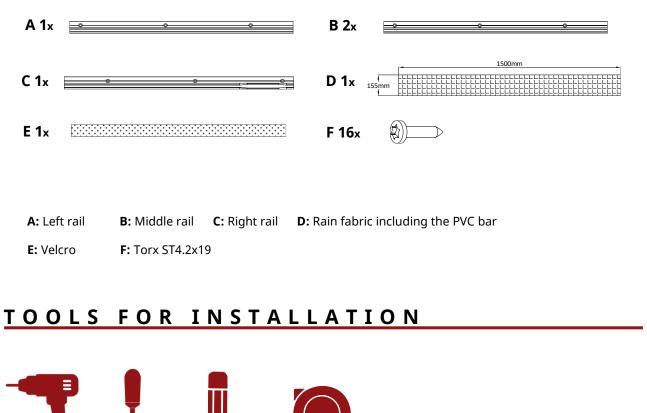




HeroCamper – www.herocamper.com Lammefjordsvej 5 – 6715 Esbjerg N – Denmark Phone +45 7022 5840 – sales@herocamper.com VAT No DK – 40193189

Version 08-05-2024




INSTALLATION GUIDE

1. Dismount the current Rain Cover and discard it.

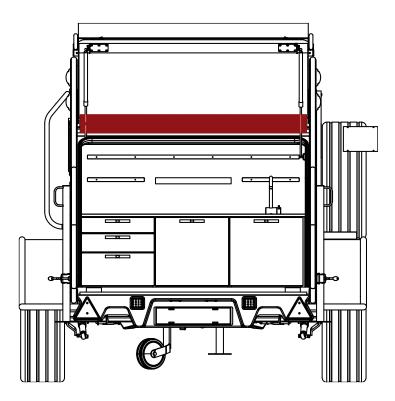

2. Drill(Ø3.2mm) the rivets in the top velcro. If the lower part of the velcro is intact it can be reused, otherwise drill out the rivets here as well. **Do not drill deeper than 20mm.**

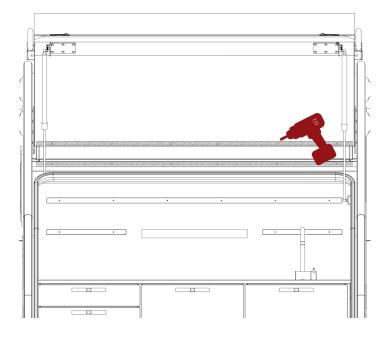


HeroCamper – www.herocamper.com Lammefjordsvej 5 – 6715 Esbjerg N – Denmark Phone +45 7022 5840 – sales@herocamper.com VAT No DK – 40193189 Version 08-05-2024



- **3.** Remove the Velcro(s) and discard it.


4. Measure 760mm from the edge of the rear door and place a mark. Place the center of the Middle Rail at the mark. Align the bottom of the rail with the edge of the rear door as shown in the illustration. Mount the Middle rail using screws and then proceed with the Left and right Rail. (parts used: A, B, C and F)

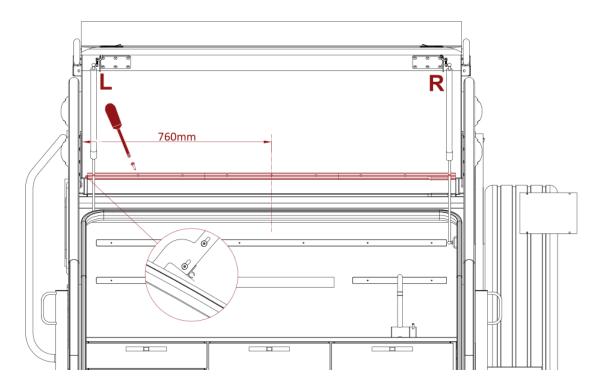


HeroCamper – www.herocamper.com Lammefjordsvej 5 – 6715 Esbjerg N – Denmark Phone +45 7022 5840 – sales@herocamper.com VAT No DK – 40193189 Version 08-05-2024



5. If you are reusing the lower part of the velcro please go to **step 7**. Mark the center of the velcro. Allign the 2 markings and attach the velcro using the tape on the backside of the Velcro.

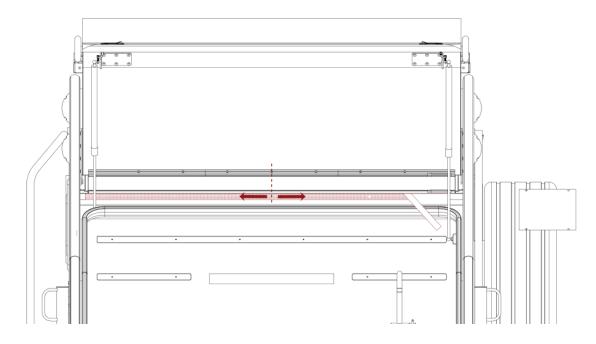

6. Make sure that you have 7 screws remaining for this step. Drill a hole(Ø3.2mm) 1 cm from each edge of the velcro. Measure the distance between these 2 holes and then divide the distance for the remaining 5 screws. This measurement should be approximately ~24,5cm. (Part used: F)

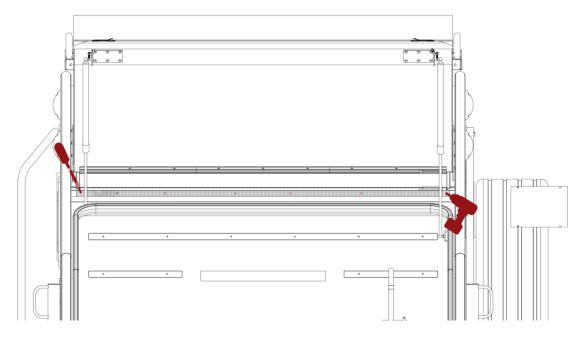


HeroCamper - www.herocamper.com


Lammefjordsvej 5 – 6715 Esbjerg N – Denmark Phone +45 7022 5840 – sales@herocamper.com VAT No DK – 40193189 Version 08-05-2024



7. Slide the PVC into the rail.

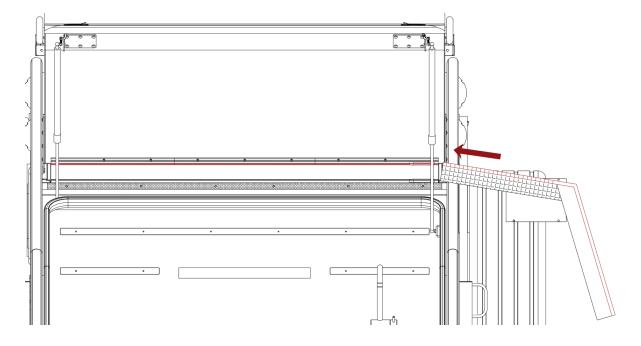

8. Attached the Loop Velcro to the Hook. Ensure it is properly attached.

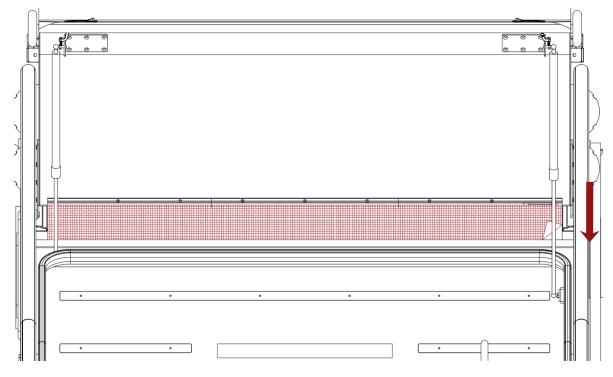

All products that are not mounted by an authorized HeroCamper dealer are at your own risk!

HeroCamper – www.herocamper.com Lammefjordsvej 5 – 6715 Esbjerg N – Denmark Phone +45 7022 5840 – sales@herocamper.com VAT No DK – 40193189 Version 08-05-2024