


## WATERTAP - BLACK

Renew the look of the HeroCamper kitchen with this new, sleek, minimalist water tap. Its modern design features clean lines and a refined matte black finish, adding a bold yet elegant touch for your HeroCamper Kitchen. This stylish update complements a variety of decor styles, enhancing both the aesthetics and functionality of your kitchen.

### COMPONENTS

**A 1x**

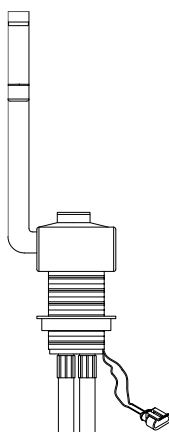

**B 1x**



**C 2x**



**D 1x**



**E 1x**




**F 1x**



**G 1x**



**H 1x**



**I 3x**



**J 2x**



**A:** Water Tap Black    **B:** Y-Tee Joint    **C:** 90 Degree Joint    **D:** Adaptor Joint    **E:** Transparent Flex water pipe(1.1m)    **F:** Black Solid water pipe    **G:** Cork Template    **H:** 2-Terminal Connector    **I:** Zip Tie  
**J:** Hose Clamp

Please Note: This package can include parts that may not be necessary for your installation.

### TOOLS FOR INSTALLATION




**SL4**



**27mm**



**38mm**

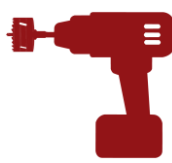

**HHS**



**Ø34mm**


## INSTALLATION GUIDE - RENEW

1. This installation instruction shows how to change previous grey version of water tap to the current black version. If you already have the black version – please jump to:


### **INSTALLATION GUIDE – REPLACE.**

If you will use the current water pipe, please jump to **step 2**.

Start by unmounting the lower hose clamp with slotted screwdriver. Detach the water pipe from the water tank.

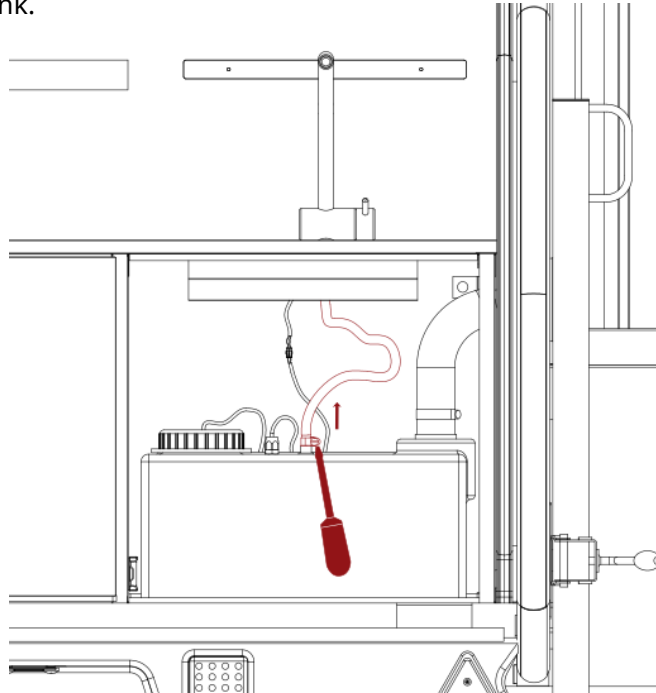

2. Unmount the upper hose clamp and remove the water pipe.

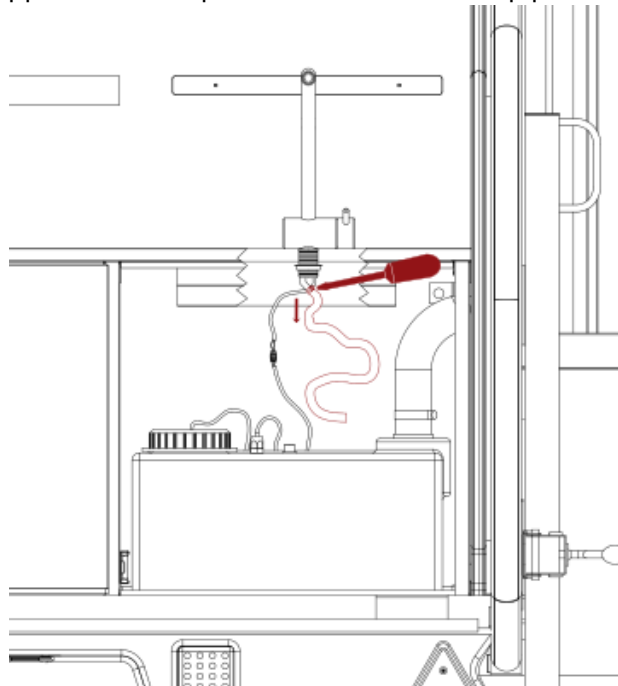

HeroCamper – [www.herocamper.com](http://www.herocamper.com)


Lammefjordsvej 5 – 6715 Esbjerg N – Denmark

Phone +45 7022 5840 – [sales@herocamper.com](mailto:sales@herocamper.com)


VAT No DK – 40193189

Version 19-12-2024


3. There are different wire installations depending on the production date of the HeroCamper. It may require you cut the wire for differently due to different installations. We recommend cutting the wire 10cm from any connection represented towards the top counter desk. If you have any doubts, please read through the installation guide and return to this step or reach out to your local HeroCamper dealer.

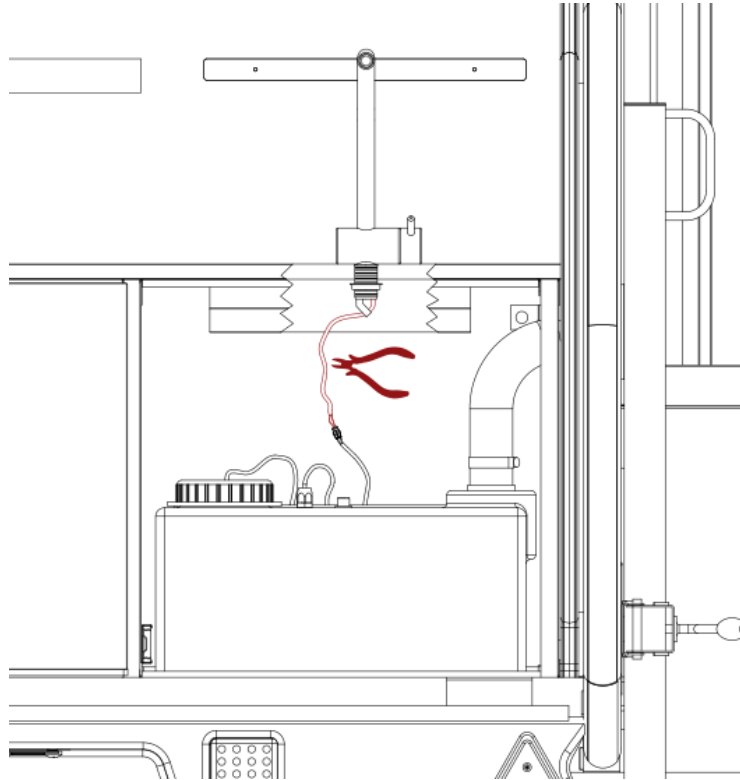


4. Unmount the plastic washer with 27mm wrench and remove the water tap.

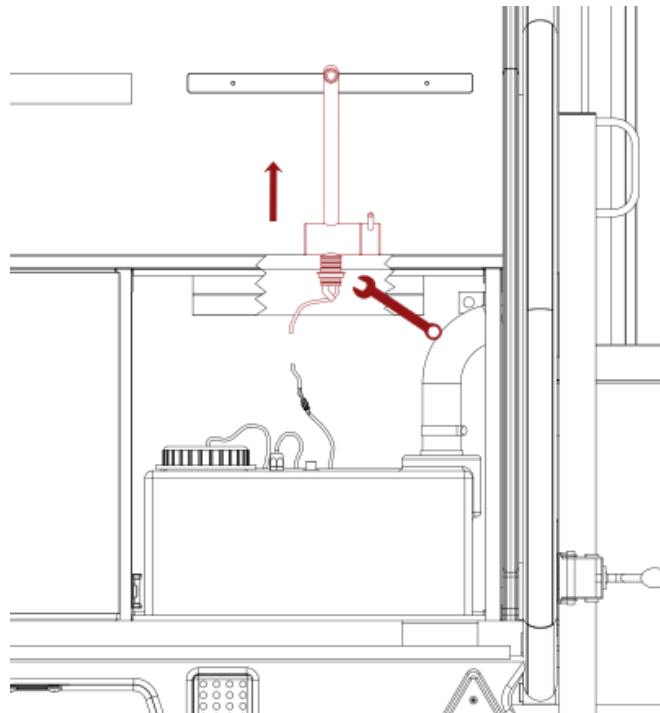


5. Insert the Cork Template into the current water tap hole. Drill a Ø34mm hole with hole saw.  
(Parts used: **G**)

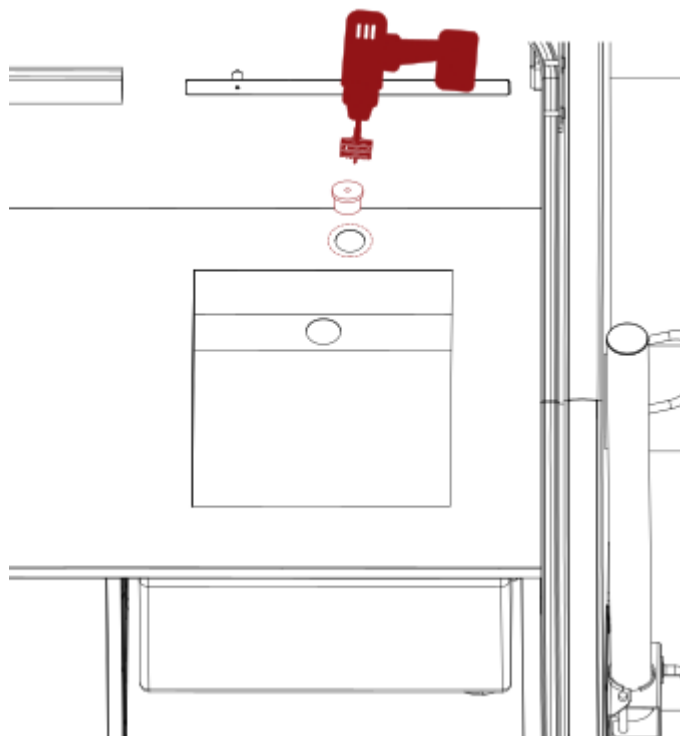


6. Remove the washer and insert the water tap into the hole. Remember to put the wires through the washer before tightening with a M38 wrench.  
(Parts used: **A**)

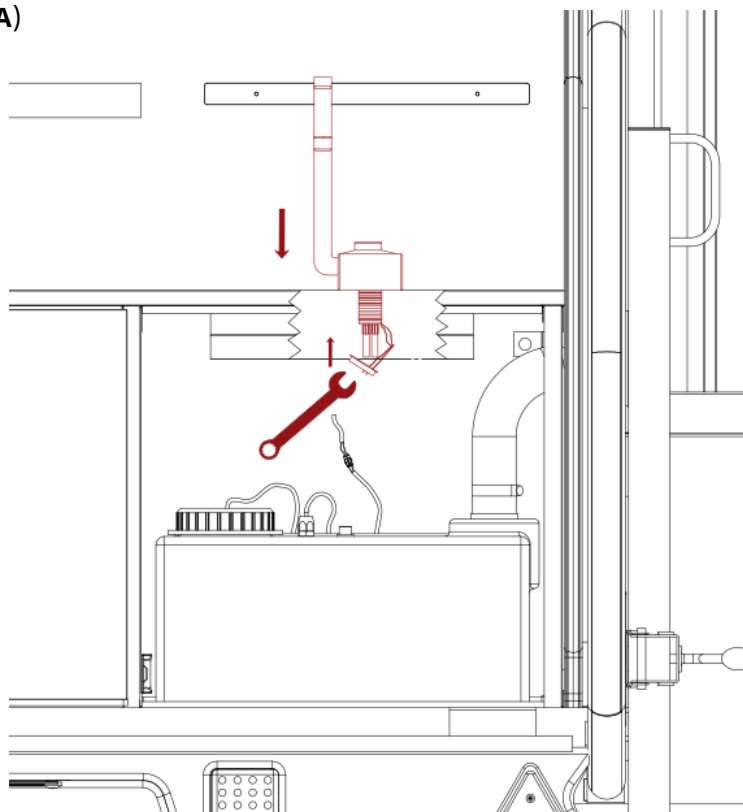


7. Connect the Y-tee joint, 90 Degree Joint and Adaptor Joint like illustrated below.  
(Parts used: **B**, **C** and **D**)

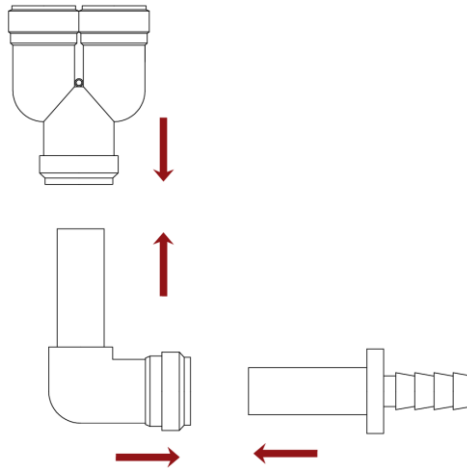

8. Connect joint combined to water tap. Remount or mount the new water pipe to the joints. Remember to insert the hose clamp and tighten them like illustrated below.  
(Parts used: **E** and **J**)

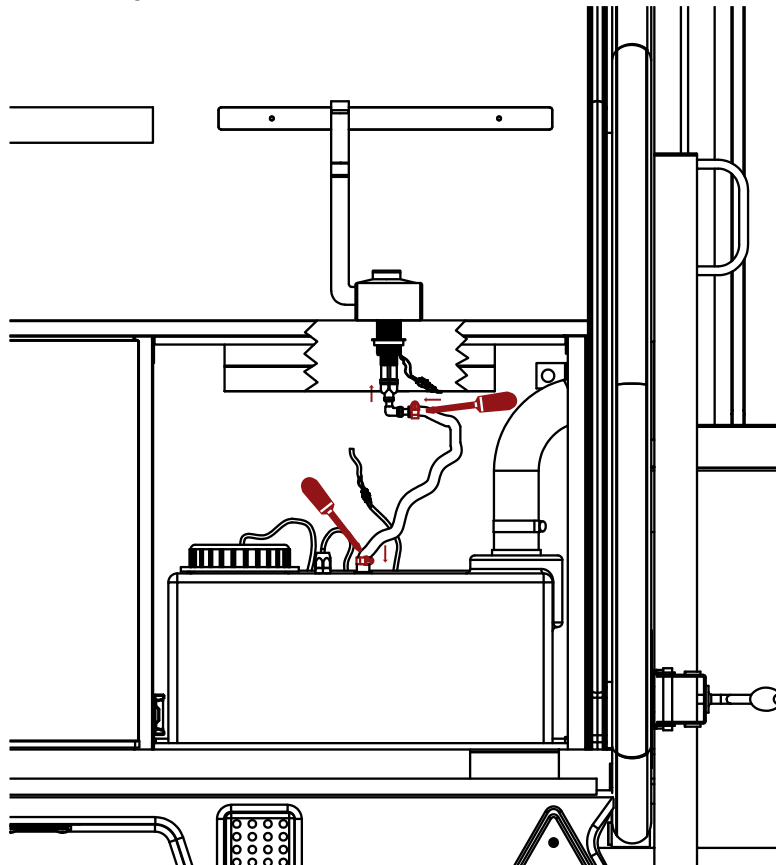


9. Strip the wire. If there is already a terminal connector, we recommend using that one instead of having 2 terminal connectors.

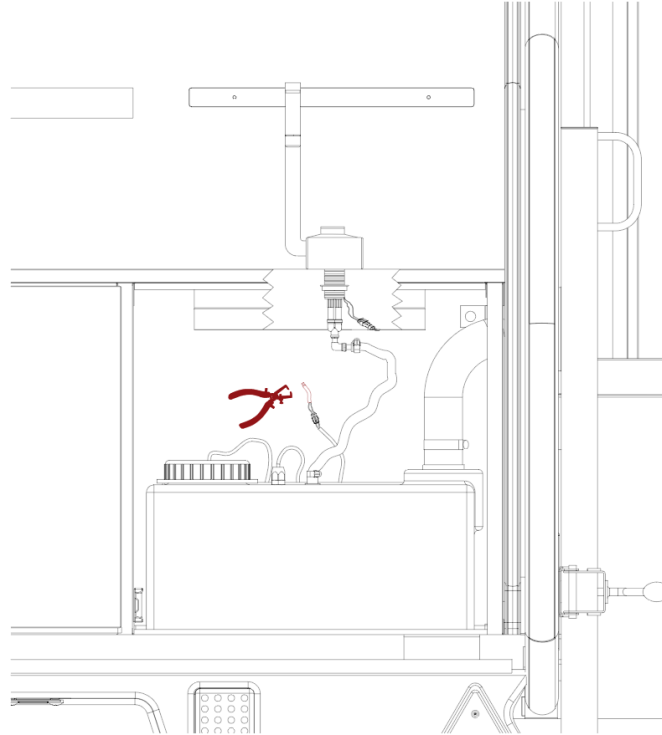

10. Previous installations may vary. Please cut and strip the wires if necessary. Aim for as few connections as possible.

(Parts used: H)

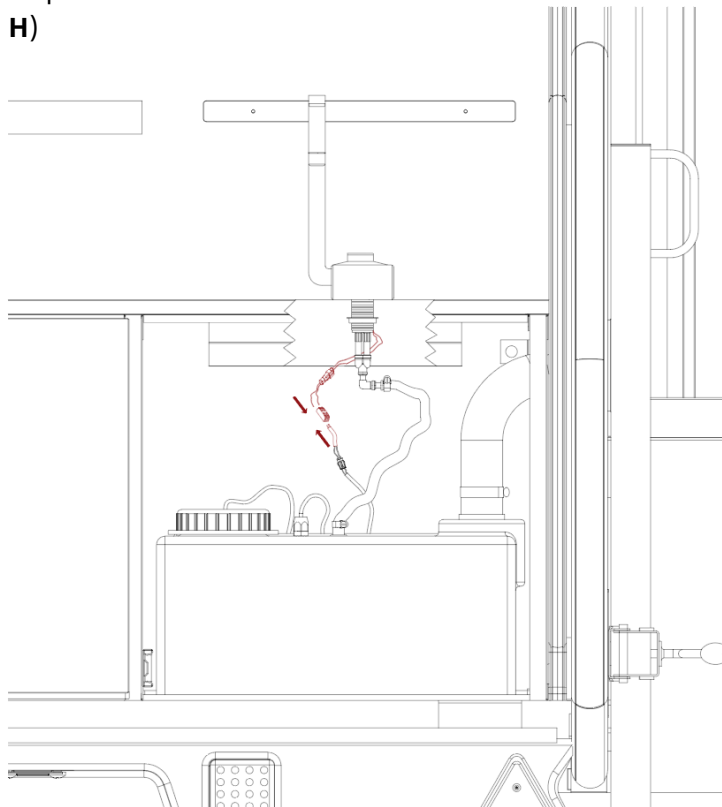

**HeroCamper - [www.herocamper.com](http://www.herocamper.com)**

Lammefjordsvej 5 - 6715 Esbjerg N - Denmark


Phone +45 7022 5840 - [sales@herocamper.com](mailto:sales@herocamper.com)

VAT No DK - 40193189


Version 19-12-2024

## INSTALLATION GUIDE - REPLACE


1. This installation instruction if there are parts that needs to be replaced. Please note this guide will replace all parts. It can in some cases be helpful to remove the water tank. Start by cutting the zip ties.

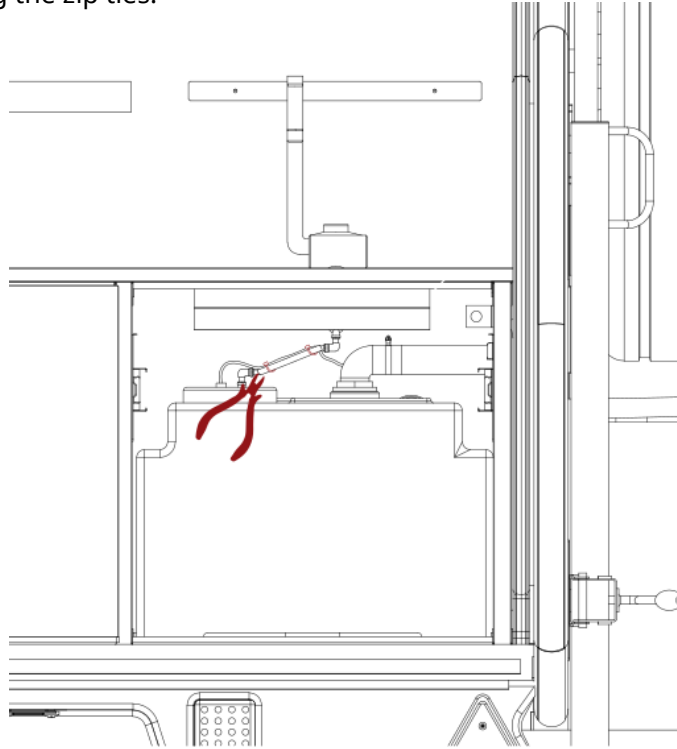

2. Disconnect the multiplug for the water tap. Unmount the 2 x 90 degrees joints.

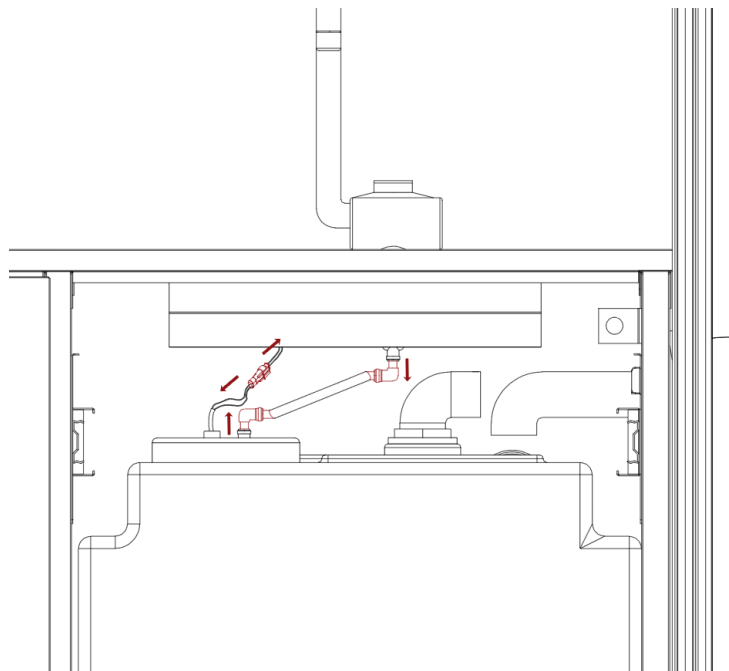

3. Remove the washer with a M38 Wrench and remove the water tap. Insert the new water tap. Remember to put the wires through the washer before tightening with a M38 wrench.  
(Parts used: **A**)

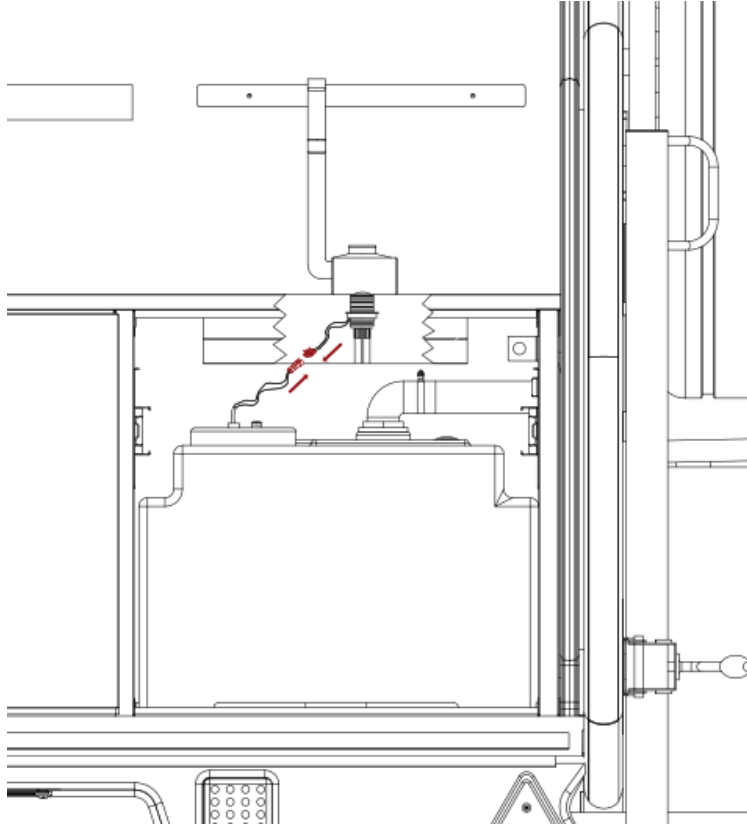


6. Connect the pipes and joints like illustrated  
(Parts used: **B, C** and **F**)






8. Connect the pipes with the water tap and water tank.

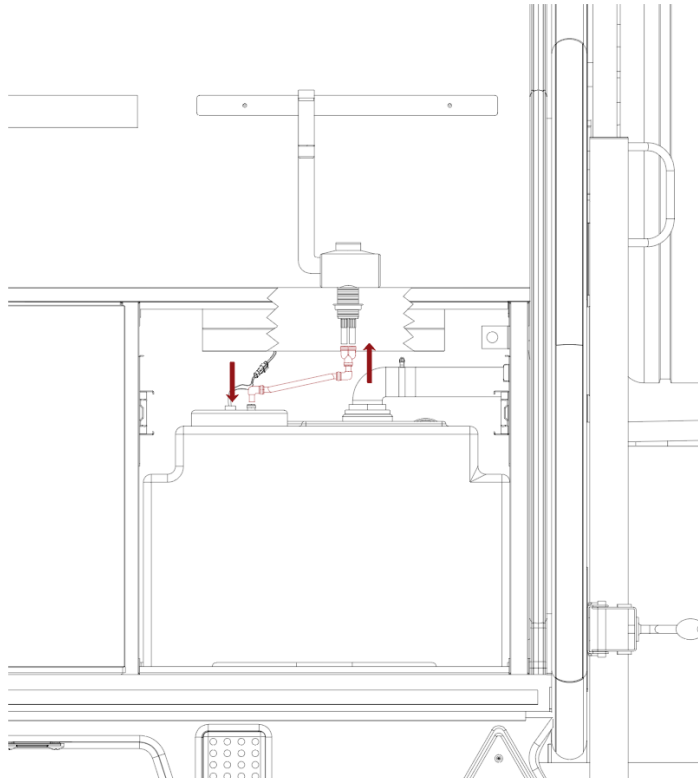

7. Attach the wire and water pipe with zip ties.  
(Parts used: I)

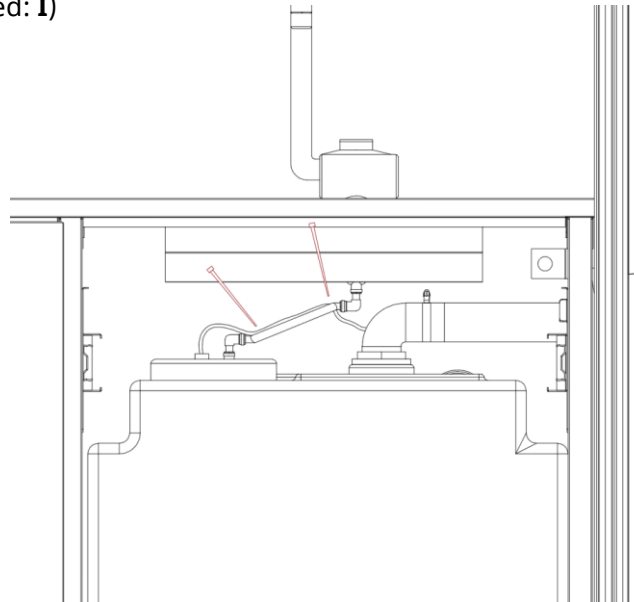

Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection / recycling center. In the European Union there are separate collection systems for used electrical and electronic products. Please help us conserve the environment we live in!

**All products that are not mounted by an authorized HeroCamper dealer are at your own risk!**

**HeroCamper - [www.herocamper.com](http://www.herocamper.com)**  
Lammefjordsvej 5 - 6715 Esbjerg N - Denmark  
Phone +45 7022 5840 - [sales@herocamper.com](mailto:sales@herocamper.com)  
VAT No DK - 40193189  
Version 19-12-2024