


CONTENTS:

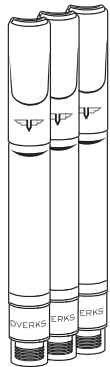

3 CBD
CARTRIDGES



CHARGER




BATTERY

VEEDVERKS STARTER KIT | QUICK START GUIDE

1. REMOVE A CARTRIDGE FROM ITS PLASTIC TUBE AND PULL OFF THE SILICON CAP.




2. SCREW THE CARTRIDGE INTO THE THREADED END OF THE BATTERY JUST UNTIL IT STOPS.

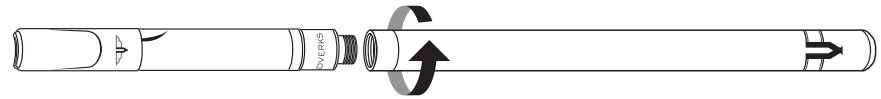


WARNING: OVERTIGHTENING COULD DAMAGE THE CARTRIDGE. IF THE BATTERY INDICATOR IS FLASHING WHITE, TRY LOOSENING THE CARTRIDGE 1/8 TURN.

3. TURN THE BATTERY ON BY QUICKLY TAPPING ON THE TIP **FIVE TIMES**.

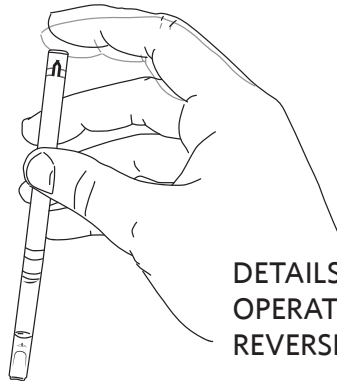

DETAILS ON BATTERY OPERATION ARE ON THE REVERSE SIDE.

4. INHALE VAPOR FROM THE MOUTHPIECE. INHALING WILL ACTIVATE THE VAPORIZER.

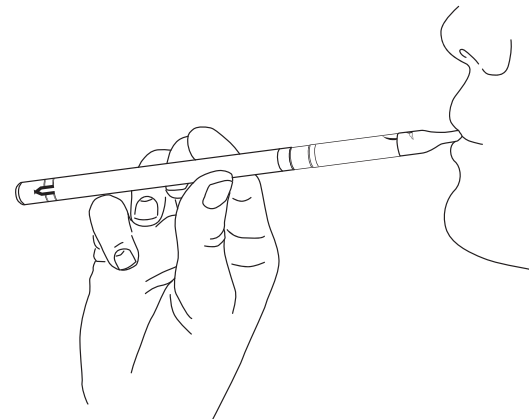

VEEDVERKS STARTER KIT | BATTERY OPERATION GUIDE

