


# Wall Mounted Desk

## Wooden components




**WHAT  
YOU'LL NEED**

## Fittings

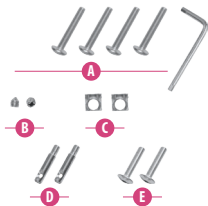

1  
Begin by removing the drawers from the unit. Attach piece 3 (ensuring that the white keyhole fitting is facing you) to piece 1 using 2x screw A (the longer screw) and the allen key. Repeat on both sides.

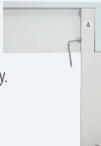

2  
Insert D into piece 2, ensuring that the hole is facing upwards. Repeat to both piece 2's.



3  
Insert C into piece 1 on both sides



4  
Use piece 3 to connect pieces 1 and 4 on both sides



5  
Insert B to C with a screwdriver to secure in place.



6  
Insert E (the shorter screw) into piece 4 to secure using the allen key.



Replace the drawers