


Floating Dressing Table

What you'll need

Wooden components




Fittings

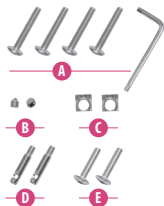


1 Begin by removing the drawers from the unit. Attach piece 4 (ensuring that the white keyhole fitting is facing you) to piece 1 using 2 x screw A (the longer screw) and the allen key.

Repeat on both sides.

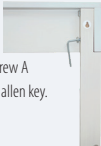

2 Insert D into piece 3, ensuring that the hole is facing upwards. Repeat to both piece 3's.

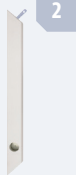

3 Insert C into piece 1 on both sides



4 Use piece 3 to connect pieces 1 and 4 on one side only (either side is fine)



5 Insert B to C with a screwdriver to secure in place.



6 Insert E (the shorter screw) into piece 4 to secure using the allen key.



7 Insert piece 2 into the hole in piece 3



8 Hold piece two in place whilst you add piece 3 into place.

Fix the rail into piece 3.

Repeat steps 5 & 6 on this second side.



9 Put the drawers back into the unit.

