


1. Remove and set aside screws A and B from underneath the hand brake assembly (1a), and screw C from the inside of the stroller frame (1b), separating the hand brake from the stroller frame. Your handle bar should now look like picture (1c).



2. Lace grip onto stroller handle bar as normal (see lacing guide here: <https://www.luxandleather.com/pages/how-to-attach-grips>). Lace over the metal screw assembly, making sure not to pull the leather over it. Tie and cut off excess lacing thread once cover is fully laced and tightened.



3. Reattach hand brake assembly to handle bar/frame by reattaching screw C into the side of the frame (1b).
4. Using the enclosed zip tie, thread up through hole A, up through hole 1a, across and down through hole 2b and down through hole B (4a). Be sure box on the end of the zip tie is facing the inside curve of the handle bar. Remove any slack from the zip tie from the top of the handle bar (4b).

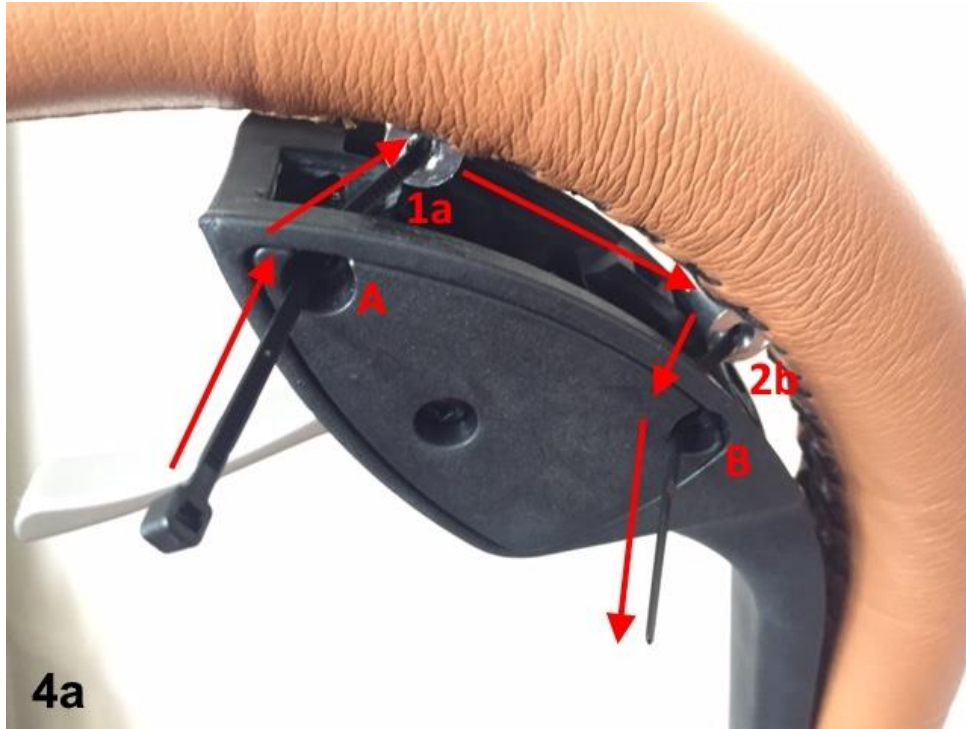

5. Push hand brake assembly firmly onto the metal screw assembly and into the handle bar. Be sure the zip tie is not coming out from the front of the assembly (4b). Connect the zip tie together and tighten, and cut off excess (5a).

