


SOFT GROUND BENCH ANCHOR GUIDE

ANCHOR KIT

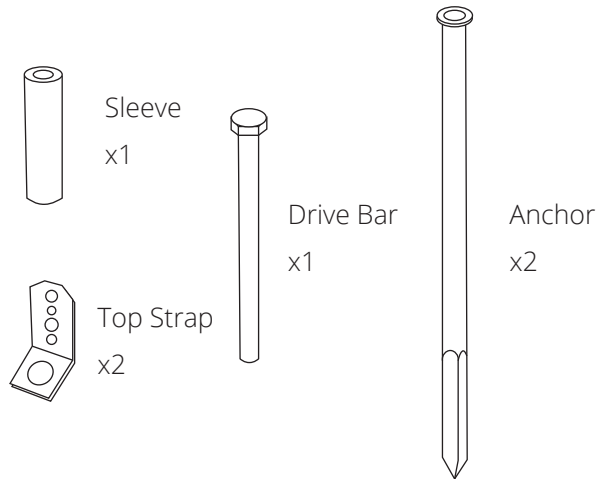

FITTINGS

- 4 x Cross Point Screws
- 4 x Vandal Resistant Screws
- 2 x Tube Caps

TOOLS

- Drill or Screw Driver
- Mallet or Hammer


STEPS

1

Check for buried services, to ensure a water pipe or a mains cable will not be interfered with.




2

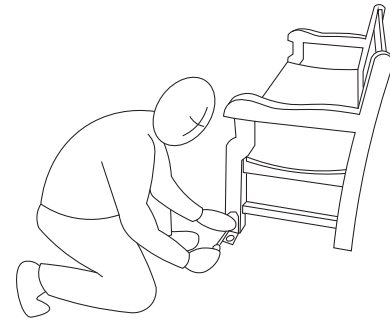


Drill two pilot holes, 3mm in diameter and 45 mm deep.
Mark hole positions through the straps. Straps should be positioned on diagonally opposites
Fix straps using cross point or vandal resistant screws.

3

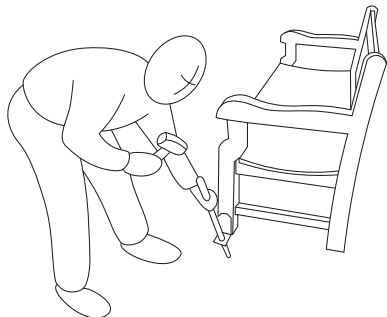

Insert drive bar through sleeve and into anchor.
Position anchor through the strap.
Using the hammer, drive the anchor at a shallow angle from the vertical until flush with the strap.

4

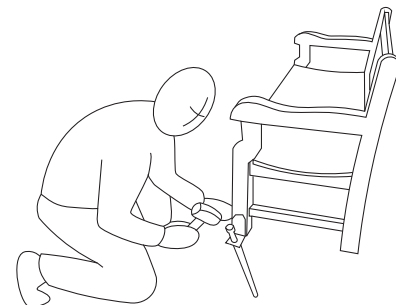

Remove sleeve and using the drive bar only, hammer down to drive out the anchor fluke.
Remove drive bar and push the tube caps into the tops of the anchors.

