









Hardware
22 - 2" Stainless Steel Screws

Tools Required


#2 Square Drive Bit
(Not Included)



Cordless Drill
(Not Included)

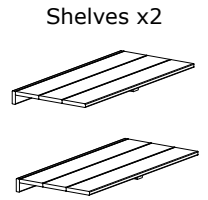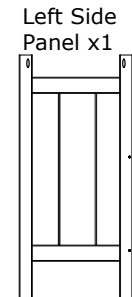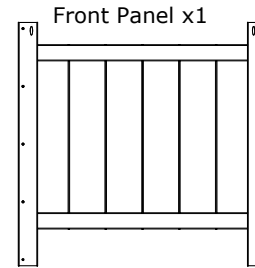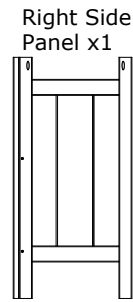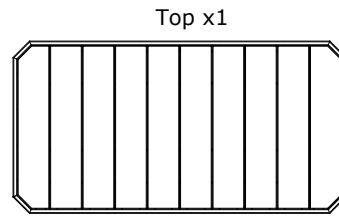


1. Attach Front Panel to Left & Right Side Panels using 6 - 2" Screws in predrilled holes, See Notes. be sure to match all letters.

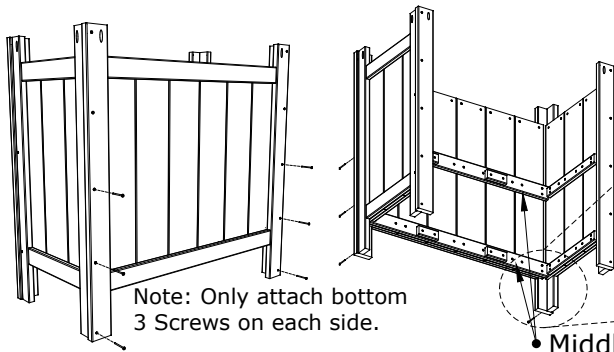


Note: Only attach bottom 3 Screws on each side.

Note: Keep Side Panels Even on inside with Middle Panel Supports.

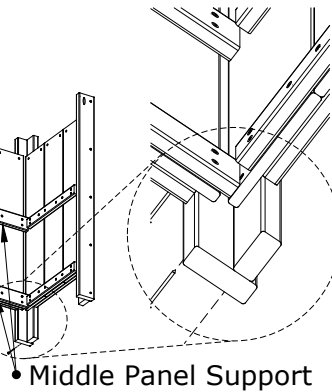


• Middle Panel Support



2. Insert Shelves And attach using 4 - 2" Screws in predrilled holes.

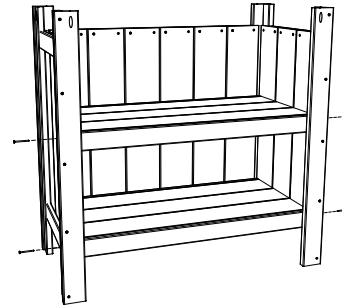

3. Place Top on base keeping Placement blocks on inside of Corners, Attach remaining 4 - 2" Screws in Front Panel.

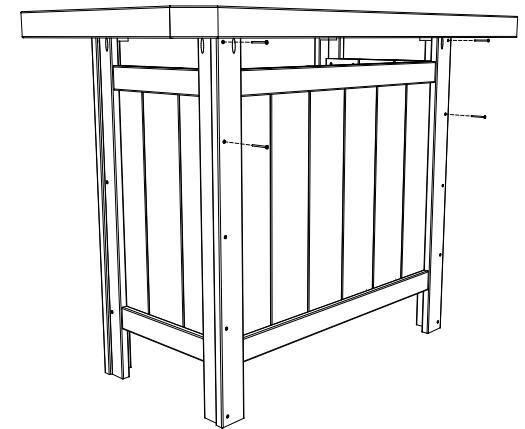

4. Attach Top using 2 - 2" Screws per corner in pocket holes.

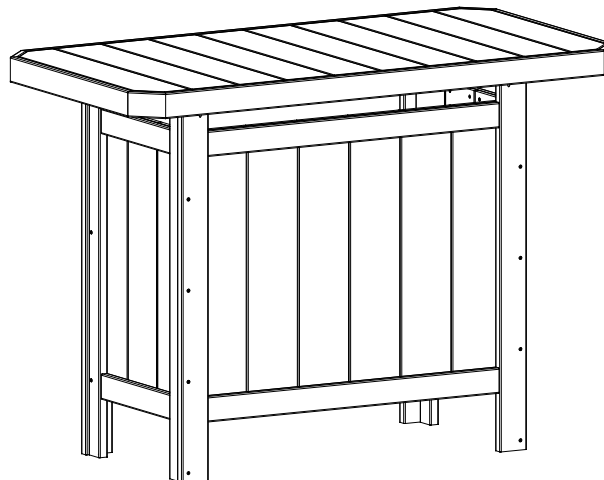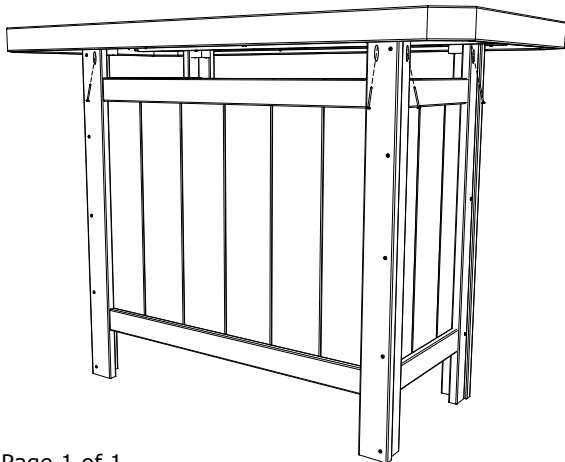

Poly Serving Bar Assembly Instructions

02/14/ 2025

R.M.