



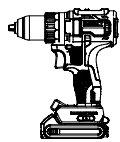

Tools Required

#2 Square Drive Bit
(Not Included)



Cordless Drill
(Not Included)



Parts

1 - Tete A Tete

1 - Umbrella Support



Hardware

4 - 2" Screws



8 - 1 3/4" Screws

4 - 1 1/2" Screws

2 - T Bolts

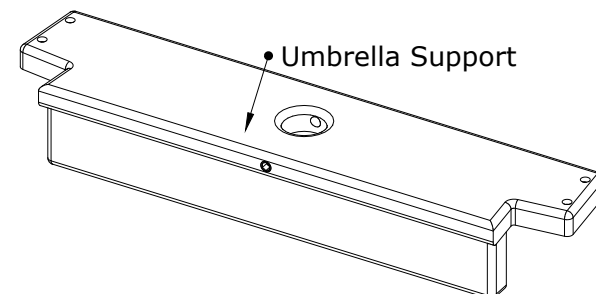
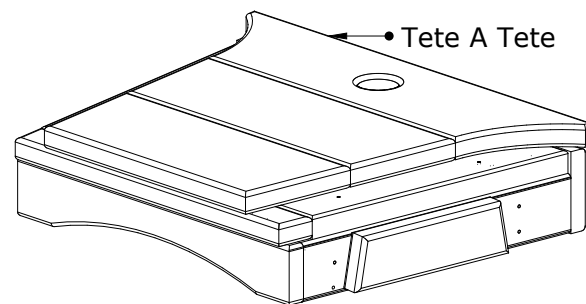


1. Attach Tete A Tete to Balcony Chair Legs using 4 - 1 3/4" Screws per side.

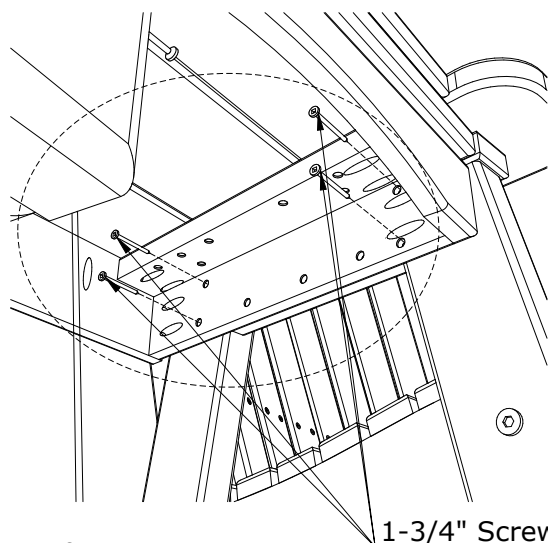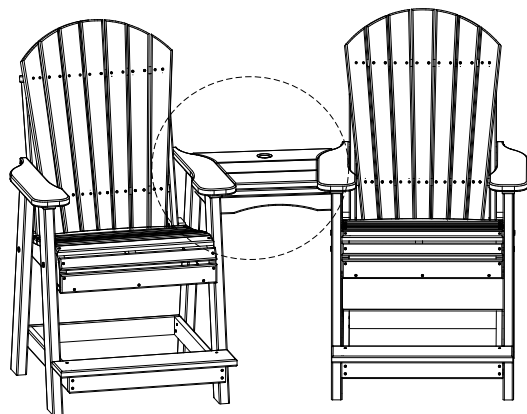

1-3/4" Screws

2. Attach Tete A Tete to Armrest using 2 - 1 1/2" Screws per side in Predrilled Holes.

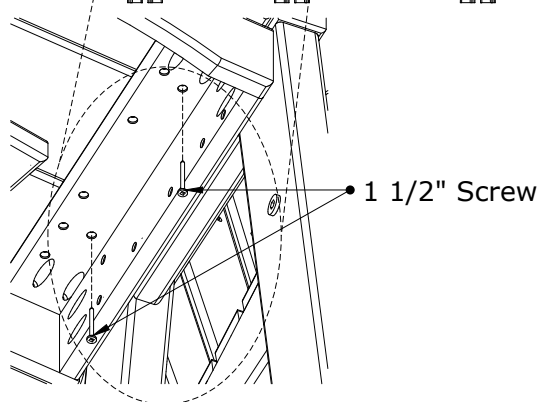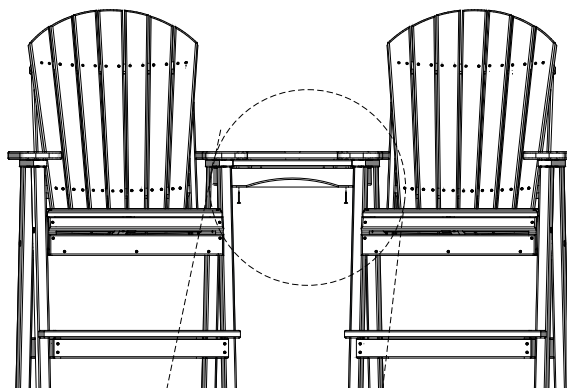

1 1/2" Screw





Tete A Tete Assembly Instructions

12/18/ 2024

R.M.

3. Attach Umbrella Support to Balcony Chair Cross Pcs.using 2 - 2" Screws per side.

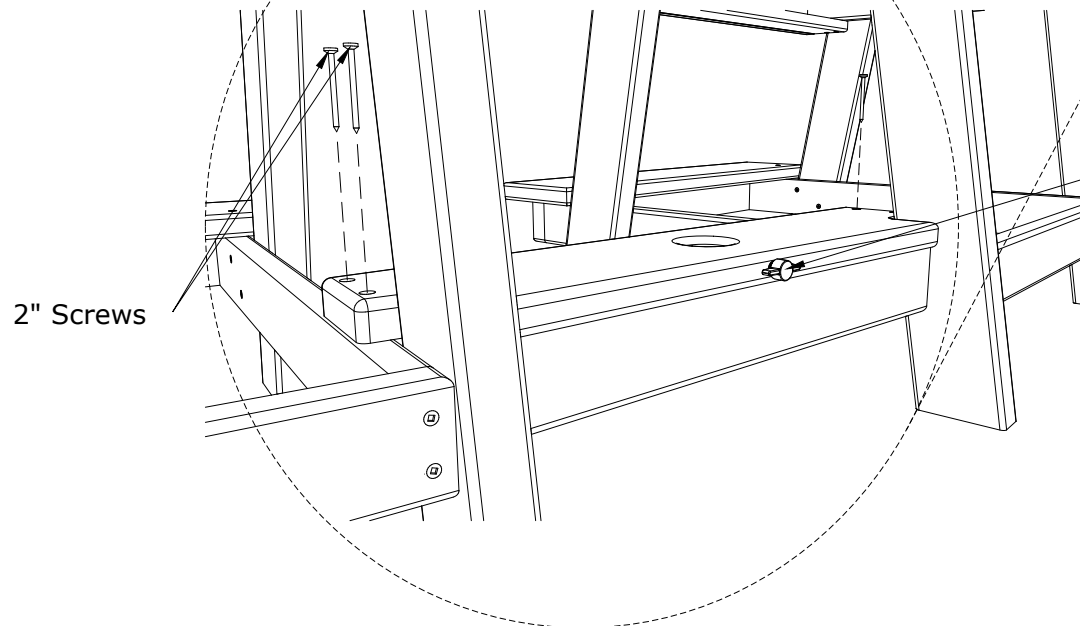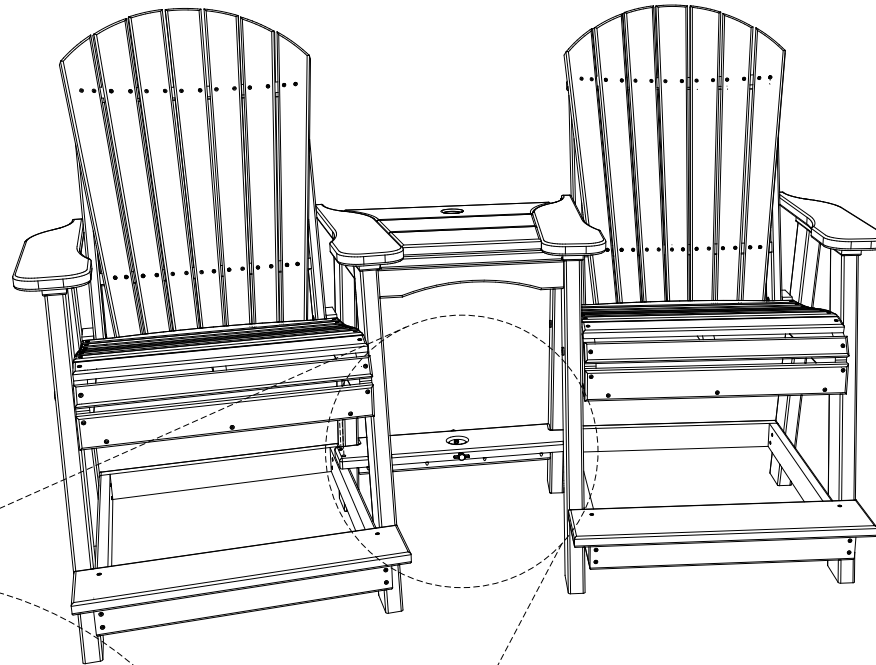

• Attach T Bolts to Umbrella Support.