




ZAVEDO

HARLEM SHELF

INSTALLATION INSTRUCTION

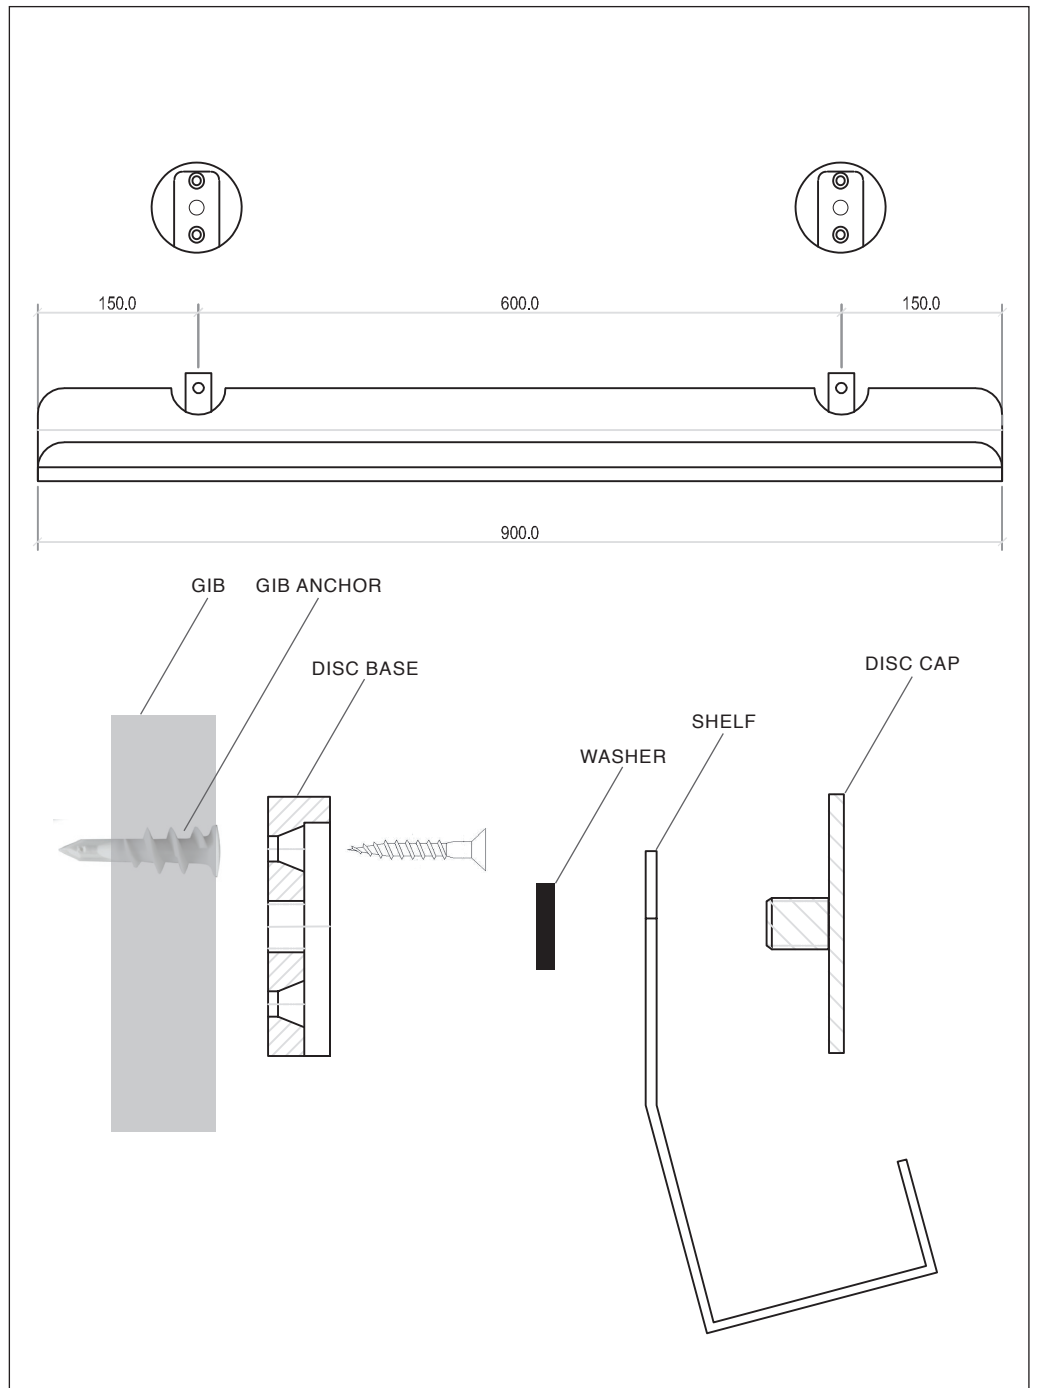

INSTALLATION INSTRUCTION

1. Screw 2 x12 kg GIB anchor 600mm apart into gib if a stud or nog is not locatable. Only the top screw is required for this Harlem Shelf.
2. Place disc base over anchor or marks and screw into stud or gib anchor.
3. Place rubber washer behind the tongue of the shelf and put the cap into a stud or into the GIB anchor.
4. Screw Cap into Base.
5. Enjoy your new Harlem Shelf proudly designed by ZAVEDO.

INCLUDED

2 X 12 KG GIB anchors. 2 x square head screws. 2 black rubber washers. 2 DISC sets. One shelf.

CLEANING

Wipe with damp cloth. SS or Brass can be polished with metal polish.