


# SOHO HOOK

---

## INSTALLATION INSTRUCTION

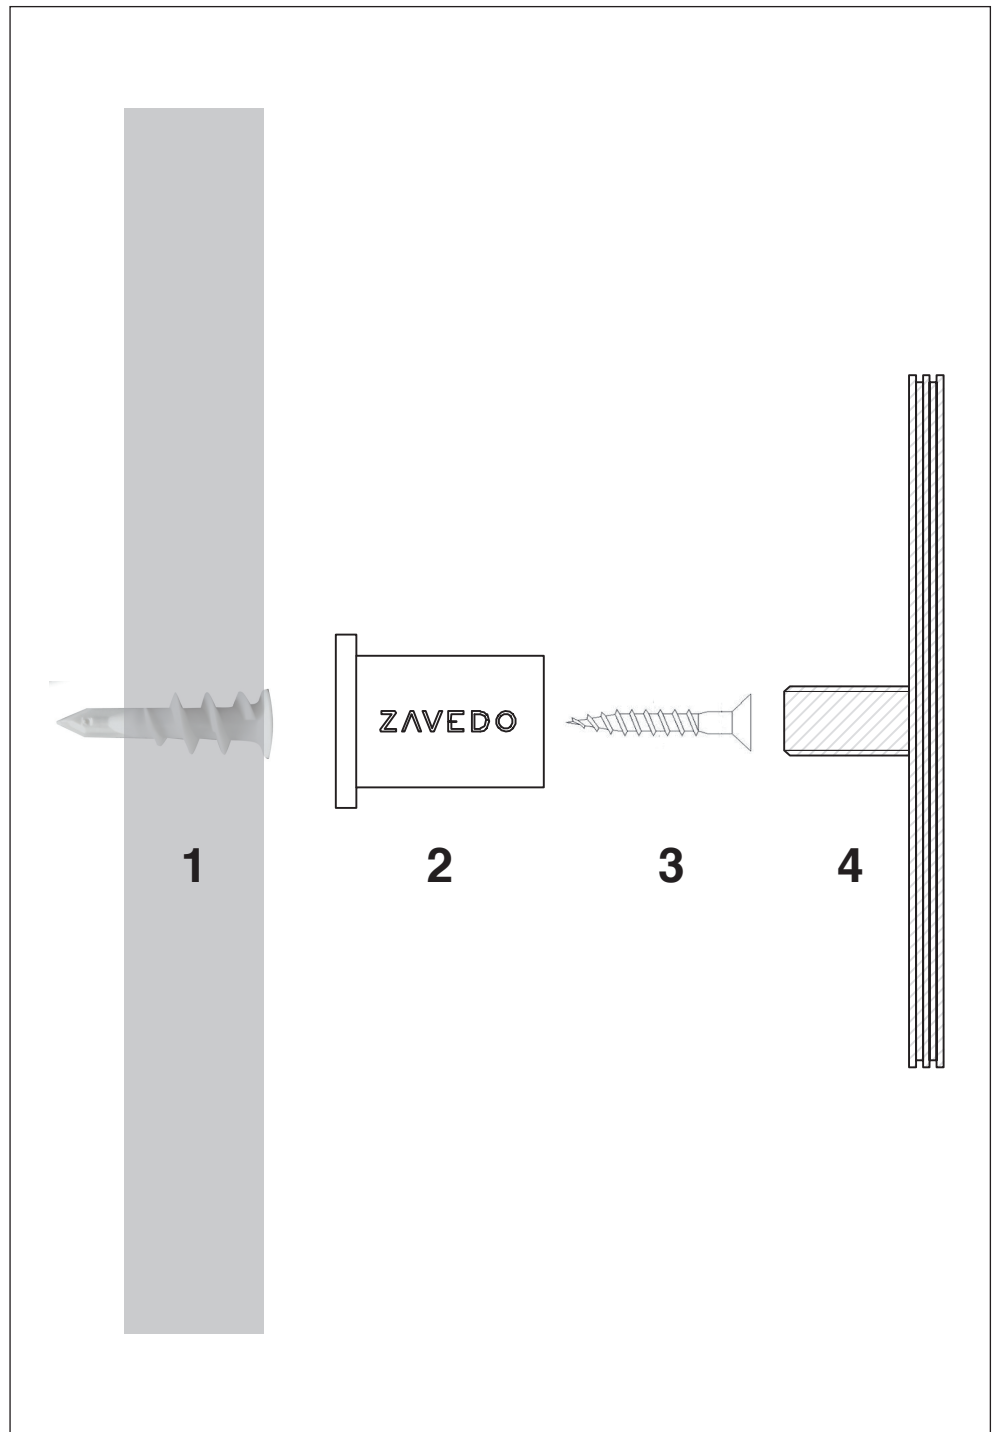

### INSTALLATION INSTRUCTION

1. Screw 12 kg GIB anchor into gib if a stud or nog is locatable.
2. Place hook base over anchor
3. Screw hook base directly into a stud or into the GIB anchor.
4. Screw cap into base. Careful not to cross thread.
5. Enjoy your new designer hook proudly designed by ZAVEDO.

### DESIGN TIP

Place randomly using different sizes and or different materials.

Groups of 3 and 5 add balance.