

FLAT OUT QUEEN BED ASSEMBLY INSTRUCTIONS

This product has been designed by Totem Italia for Plyroom and made with precise interlocking parts. All instructions must be followed exactly for product safety. If you have questions during assembly, please contact us: info@plyroom.com.au

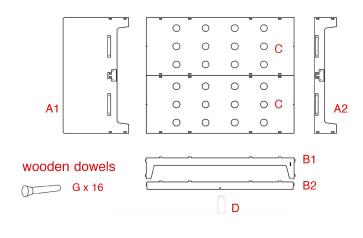

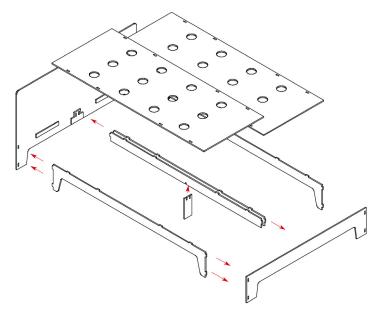


Make the bed

Insert the nodes of the two B1 parts (sides) and part B2 (central support) into the corresponding openings on part A1 (the bedhead). Lock in place using the wooden dowels marked G. Make sure the pieces are fully connected before gently hammering the dowels in. Repeat this process by inserting the nodes of B1 and B2 into A2 (the foot of the bed base).

Insert the central support of the bed D into the central opening on the base of part B1 as shown.

Lower part C onto the bed base structure, taking care that C is firmly locked on the base by fitting every corresponding node from the B parts into the openings on the C part.

As these products are precision cut, you might need to use a hammer with a piece of wood over the top (to protect your product surface) or a soft mallet to ensure pieces are completely united.

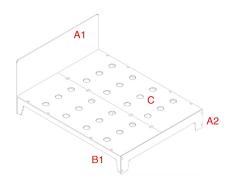

Fasten wooden dowels with a hammer so no more than 8mm of the dowel protrudes.









Always remove wooden dowels with a hammer

Hammer must be parallel to the grain of the timber as shown.

MAINTENANCE OF YOUR PRODUCT: All parts of your product are cleanable with a lightly damp (NOT wet) cotton cloth. DO NOT use detergents or solvents of any type, only water. To disassemble your product, extract the wooden dowels and nails using the prongs of a hammer as illustrated.