




PLYROOM

Shibui Mid 1.5

Created in Melbourne from sustainably forested Birch and Tasmanian Oak, your Shibui shelf is an exercise in simple, subtle and unobtrusive beauty.

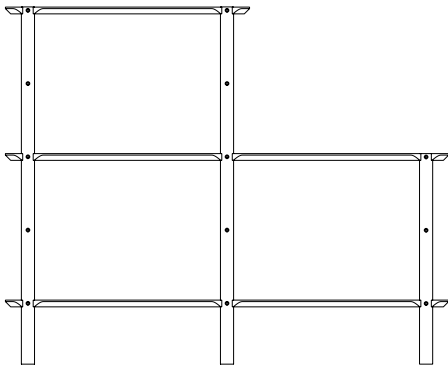

THANK YOU

Thank you for choosing Plyroom's Shibui Shelf for your home or workspace. Here are some instructions that we hope will make the installation process simpler.

FOR ASSEMBLY YOU WILL NEED

Short leg x 2



Medium leg x 4



1-Bay shelf x 1



2-Bay shelf x 2



Brass pin x 16



Bolt x 16



Oak plug x 10



Hex key x 1



CARE INSTRUCTIONS

For general care we recommend dusting with a clean, dry cloth, or wiping down with soft cloth wrung dry from plain water (leaving the surface dry after cleaning).

Solvents like nail polish remover can cause significant damage to your timber furniture. Do not use these products with timber as direct contact will require re-varnishing to repair. Another common enemy of timber is direct heat, for example, placing a saucepan on a timber table. This can burn or melt the finish.

Common stains like red wine, glue and sticky fingers can be removed with a damp cloth and should be attended to as quickly as possible to avoid the stain seeping into the timber. Regular dusting will enhance the look and longevity of your item.


Share your space with us #plyroom

@plyroom
www.plyroom.com.au

01

Shibui Shelf is best put together with company, so find a friend before you get started.

Find a soft floor surface such as a rug or carpet. Rest one of the 2-bay shelves flat on the floor with the underside (see diagram) facing down.

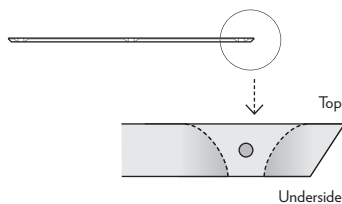

02

Stack shelves one by one in the following order. Make sure the circular openings on shelves are aligned.


03 1-Bay shelf



02 2-Bay shelf




01 2-Bay shelf



03

Insert the 4 medium legs and 2 short legs into the circular openings on the floor so all the bottoms (see diagram) are facing down.

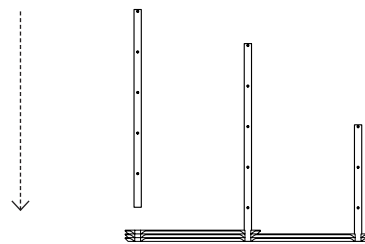

Top




Bottom
(note extra length below last hole)

04

Slide the first 1-bay shelf up to align with the first set of holes on legs and hold the shelf in position. Insert a bolt into each opening and fasten with the Hex key provided until they are firmly in place. Repeat for the next 2-bay shelf at the third opening in the legs.

Important

This shelving is precision cut. When inserting the next shelf, place on legs at even heights at all time and always apply even pressure when threading onto legs. When fastening the bolts for the top of the Shibui please do not over fasten as this can damage the oak legs. Tighten the bolts until the shelving feels secure and steady.

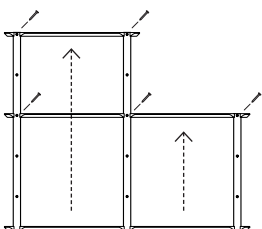

05

Repeat the step 04 process with all other shelves (including securing with bolts) as per diagram and in this order until each shelf is in place.

01 1-Bay shelf



02 2-Bay shelf



03 2-Bay shelf



06

The brass pins can be pushed into place in the openings where each shelf meets with the oak legs to conceal the bolt heads. The remaining open elements on the oak legs can be inserted with the small oak plugs provided.

Brass pin

Oak plug

